

AlazarDSO User Guide

Version 1.1.53
March 17, 2014

Alazar Technologies, Inc.

6600 Trans-Canada Highway, Suite 310
Pointe-Claire, Quebec
Canada H9R 4S2
Telephone: (514) 426-4899
Fax: (514) 426-2723
E-mail: support@alazartech.com
Web: www.alazartech.com

License Agreement

Important

By using this software you accept the following terms of this License Agreement. If you do not agree with these terms, you should not use the software and promptly return it for a refund.

Ownership

Alazar Technologies, Inc., retains the ownership of this copy of the enclosed software package. It is licensed to you for use under the following conditions:

Grant of License

You may only concurrently use the enclosed software on the computers that have an Alazar Technologies, Inc. waveform digitizer card plugged in (for example, if you have purchased one Alazar Technologies, Inc. card, you have a license for one concurrent usage). If the number of users of the software exceeds the number of Alazar Technologies, Inc. cards you have purchased, you must have a reasonable process in place to assure that the number of persons concurrently using the software does not exceed the number of Alazar Technologies, Inc. cards purchased.

You may transfer this software to another party if the other party agrees to the terms and conditions of the agreement and completes and returns a registration card to Alazar Technologies, Inc. The registration card is available by writing to Alazar Technologies, Inc. If you transfer the software, you must simultaneously transfer all documentation and related disks.

Restrictions

You may not copy the documentation or software except as described in the installation section of this manual. You may not distribute, rent, sub-lease or lease the software or documentation, including translating, decomposing, or disassembling, or creating derivative works. You may not reverse-engineer any part of this software, or produce any derivative work. You may not make telecommunication transmittal of this software.

Termination

This license and your right to use this software automatically terminates if you fail to comply with any provision of this license agreement.

Rights

Alazar Technologies, Inc. retains all rights not expressly granted. Nothing in this agreement constitutes a waiver of Alazar Technologies, Inc.'s rights under the Canadian and U.S. copyright laws or any other Federal or State law.

Limited Warranty

If you discover physical defects in the media, Alazar Technologies, Inc. will replace the media or documentation at no charge to you, provided you return the item to be replaced

with proof of payment to Alazar Technologies, Inc. during the 90-day period after having taken delivery of the software.

Alazar Technologies, Inc. excludes any and all implied warranties, including warranties of merchantability and fitness for a particular purpose and limits your remedy to return the software and documentation to Alazar Technologies, Inc. for replacement. Although Alazar Technologies, Inc. has tested the software and reviewed the documentation, ALAZAR TECHNOLOGIES, INC. MAKES NO WARRANTY OF REPRESENTATION, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THIS SOFTWARE OR DOCUMENTATION, ITS QUALITY, PERFORMANCE, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE. AS A RESULT, THIS SOFTWARE AND DOCUMENTATION IS LICENSED “as is” AND YOU, THE LICENSEE, ARE ASSUMING THE ENTIRE RISK AS TO ITS QUALITY AND PERFORMANCE. IN NO EVENT WILL ALAZAR TECHNOLOGIES, INC. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THIS SOFTWARE OR DOCUMENTATION, even if advised of the possibility of such damages. In particular, Alazar Technologies, Inc. shall have no liability for any data acquired, stored or processed with this software, including the costs of recovering such data.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, ORAL OR WRITTEN, EXPRESSED OR IMPLIED. No Alazar Technologies, Inc. dealer, agent or employee is authorized to make any modifications or additions to this warranty.

Information in this document is subject to change without notice and does not represent a commitment on the part of Alazar Technologies, Inc. The software described in this document is furnished under this license agreement. The software may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the software on any medium except as specifically allowed in the license agreement. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the written permission of Alazar Technologies, Inc.

Some jurisdictions do not allow the exclusion of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

Contents

1	GETTING STARTED.....	1
1.1	INTRODUCTION.....	1
1.2	MAKING ACQUISITIONS.....	3
1.3	MAKING MEASUREMENTS.....	4
1.4	CONFIGURING INPUT CHANNELS.....	7
1.5	CONFIGURING MATH CHANNELS.....	8
1.5.1	<i>Using Histograms.....</i>	<i>9</i>
1.6	CONFIGURING REFERENCE CHANNELS.....	9
1.7	SAVING AND LOADING FILES.....	11
2	REFERENCE.....	13
2.1	WINDOWS.....	13
2.1.1	<i>Main Window.....</i>	<i>13</i>
2.1.2	<i>Menu.....</i>	<i>24</i>
2.2	KEYBOARD SHORTCUTS.....	29
2.3	DIALOGS.....	31
2.3.1	<i>Acquire To File.....</i>	<i>31</i>
2.3.2	<i>Advanced Options.....</i>	<i>33</i>
2.3.3	<i>AutoDMA Options.....</i>	<i>38</i>
2.3.4	<i>Board Properties.....</i>	<i>40</i>
2.3.5	<i>Browse File.....</i>	<i>42</i>
2.3.6	<i>Browse Records.....</i>	<i>45</i>
2.3.7	<i>Configure Acquire.....</i>	<i>47</i>
2.3.8	<i>Configure Horizontal.....</i>	<i>50</i>
2.3.9	<i>Configure Input.....</i>	<i>53</i>
2.3.10	<i>Configure Math.....</i>	<i>57</i>
2.3.11	<i>Configure Plugins.....</i>	<i>60</i>
2.3.12	<i>Configure Preferences.....</i>	<i>62</i>
2.3.13	<i>Configure Reference.....</i>	<i>63</i>
2.3.14	<i>Configure Simulator.....</i>	<i>65</i>
2.3.15	<i>Configure System.....</i>	<i>67</i>
2.3.16	<i>Configure Trigger.....</i>	<i>68</i>
2.3.17	<i>Configure View.....</i>	<i>71</i>
2.3.18	<i>Coprocessor.....</i>	<i>78</i>
2.3.19	<i>Digital filter.....</i>	<i>80</i>
2.3.20	<i>Digital filter properties.....</i>	<i>82</i>
2.3.21	<i>Identify Board.....</i>	<i>83</i>
2.3.22	<i>Import File.....</i>	<i>84</i>
2.3.23	<i>Open.....</i>	<i>86</i>
2.3.24	<i>Save As.....</i>	<i>87</i>
2.3.25	<i>Select Record.....</i>	<i>90</i>
2.3.26	<i>Spectrum Information.....</i>	<i>91</i>
2.3.27	<i>Trigger Sweep.....</i>	<i>93</i>

2.4	STREAM TO MEMORY WIZARD.....	96
2.4.1	<i>Welcome</i>	96
2.4.2	<i>Mode</i>	97
2.4.3	<i>Single Record</i>	99
2.4.4	<i>Multiple Records</i>	100
2.4.5	<i>Board Configuration</i>	102
2.4.6	<i>Options</i>	104
2.4.7	<i>System memory</i>	106
2.4.8	<i>File</i>	107
2.4.9	<i>File Options</i>	109
2.4.10	<i>Finish</i>	111
2.5	STREAM TO DISK WIZARD.....	113
2.5.1	<i>Welcome</i>	113
2.5.2	<i>Mode</i>	114
2.5.3	<i>Single Record</i>	116
2.5.4	<i>Multiple Records</i>	117
2.5.5	<i>Board Configuration</i>	119
2.5.6	<i>Options</i>	121
2.5.7	<i>File</i>	123
2.5.8	<i>File Options</i>	125
2.5.9	<i>Finish</i>	127
2.6	DISK BENCHMARK WIZARD.....	129
2.6.1	<i>Welcome</i>	129
2.6.2	<i>Options</i>	130
2.6.3	<i>Progress</i>	131
2.6.4	<i>Finish</i>	132
2.7	BUS BENCHMARK WIZARD.....	133
2.7.1	<i>Welcome</i>	133
2.7.2	<i>Options</i>	134
2.7.3	<i>Progress</i>	136
2.7.4	<i>Finish</i>	137
2.8	BOARD CALIBRATION WIZARD.....	139
2.8.1	<i>Welcome</i>	140
2.8.2	<i>Mode</i>	141
2.8.3	<i>Options</i>	142
2.8.4	<i>Plugin</i>	146
2.8.5	<i>Report</i>	151
2.8.6	<i>Confirm</i>	153
2.8.7	<i>Progress</i>	154
2.8.8	<i>Finish</i>	155
3	PLUGIN MODULES.....	157
3.1	PLUGIN INTERFACE.....	157
3.2	USING PLUGINS.....	158
3.2.1	<i>Save data</i>	158
3.2.2	<i>Calculate average of multiple records</i>	159
3.2.3	<i>Display 1-In-N Records</i>	160

3.2.4	<i>Acquire At Time</i>	161
3.2.5	<i>Calculate sum of multiple records (co-addition)</i>	166
3.2.6	<i>Power monitor</i>	169
4	FILE FORMATS	174
4.1	TEXT RECORDS IN SAMPLES.....	174
4.2	TEXT RECORDS IN VOLTS.....	175
4.3	BINARY RECORDS IN SAMPLES.....	175
4.4	BINARY RECORDS IN VOLTS.....	176
4.5	ALAZAR TEXT RECORDS.....	176
4.6	ALAZAR BINARY RECORDS.....	178
4.7	API PANEL RECORDS.....	180
4.8	MATLAB ARRAYS.....	180
4.9	FLEXPRO RECORDS.....	180
4.10	ATB ACQUISITION FILES.....	180
4.10.1	<i>Capture File Header</i>	180
4.10.2	<i>Channel File Headers</i>	182
4.10.3	<i>Sample Data</i>	182
4.10.4	<i>Converting sample values to volts</i>	188
5	REVISION HISTORY	189

1 Getting Started

1.1 Introduction

AlazarDSO is a program that allows you to acquire, view, and save data from AlazarTech PCI / PCIe digitizer boards. It has the following capabilities:

- It can display up to 16 input and 8 reference channels.
- It can calculate and display up to 8 math channels.
- It can draw records as time or frequency domain charts, or calculate statistics and displays them as text.
- It can display horizontal and vertical cursors.
- It can save and load records to and from files.
- It can be extended with plugin modules.

Note that AlazarDSO identifies input channels as follows in board systems with 2 analog input channels per board:

Table 1-1. Input channel labels 2-channel boards

Name	Board ID	I/O Connector
Ch 1	1	A
Ch 2	1	B
Ch 3	2	A
Ch 4	2	B
Ch 5	3	A
Ch 6	3	B
Ch 7	4	A
Ch 8	4	B
Ch 9	5	A
Ch 10	5	B
Ch 11	6	A
Ch 12	6	B
Ch 13	7	A
Ch 14	7	B
Ch 15	8	A
Ch 16	8	B

AlazarDSO identifies input channels as follows in board systems with 4 analog input channels per board:

Table 1-2. ATS9440 input channel labels

Name	Board ID	I/O Connector
Ch 1	1	A
Ch 2	1	B

Ch 3	1	C
Ch 4	1	D
Ch 5	2	A
Ch 6	2	B
Ch 7	2	C
Ch 8	2	D
Ch 9	3	A
Ch 10	3	B
Ch 11	3	C
Ch 12	3	D
Ch 13	4	A
Ch 14	4	B
Ch 15	4	C
Ch 16	4	D


1.2 Making Acquisitions

Connect input signals to your board's IO connectors.

Select **AutoSetup** from the **Tools** menu to allow AlazarDSO to configure the system to display of the signals. Note that if it is necessary to adjust the input impedance or probe attenuation of an input channel, select the channel from the **Input** item of the **Configure** menu to display the **Configure Input** dialog box.

Press the **Start** button to start acquiring sample data. The **Start** button is located in the **Acquire** group box at the top right of the main window.


Figure 1. Acquire controls

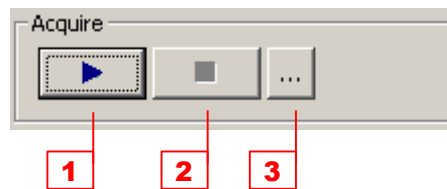

1. Start acquisitions
2. Stop acquisitions
3. Display the **Configure Acquire** dialog box.

Change the time scale to expand or contract the signal horizontally. Select a time scale in seconds per horizontal division from the horizontal scale combo box, or by pressing the buttons to expand or contract the horizontal scale. The horizontal controls are located in the **Horizontal** group box at the right side of the main window.


Figure 2. Horizontal controls

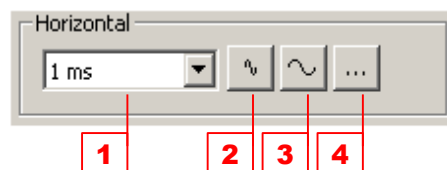

1. Select the time scale in seconds per horizontal division from the horizontal scale combo box.
2. Contract the horizontal scale by selecting the next item from the horizontal scale combo box.
3. Expand the horizontal scale by selecting the previous item from the horizontal scale combo box.
4. Display the **Configure Horizontal** dialog box.

Once you have a suitable trigger level, select **Normal** trigger mode from the trigger mode combo box to stabilize the waveform within a sample record. The trigger mode combo box is located in the **Trigger** group box at the top right of the main window, just below the **Acquire** controls.

Figure 3. Trigger controls

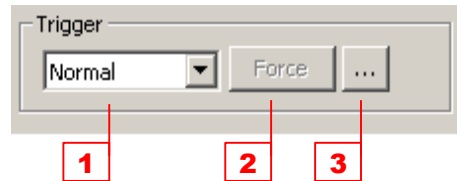

1. Trigger mode combo box.
2. Force trigger button.
3. Display **Configure Trigger** dialog box.

To change acquisition parameters such as the number of samples per record, and the number of records per acquisition, select the **Acquire** item from **Configure** menu to display the **Configure Acquire** dialog box.


To change the sample rate, add a trigger delay, or change the number of pre-trigger samples, select the **Horizontal** item from the **Configure** menu to display the **Configure Horizontal** dialog box.

1.3 Making Measurements

There are several ways AlazarDSO can help you make measurements once you have acquired sample waveforms.


- Move the mouse pointer over a waveform to display a popup window with the value and time with respect to trigger of the sample under the cursor. Note that acquisitions must be stopped in order to view information about **Input** and **Math** waveforms.

Figure 4. Waveform ToolTip window

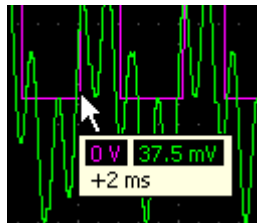


- Move the expansion point horizontally to display the time with respect to the trigger position of samples at the expansion point.

Figure 5. Expansion point in view

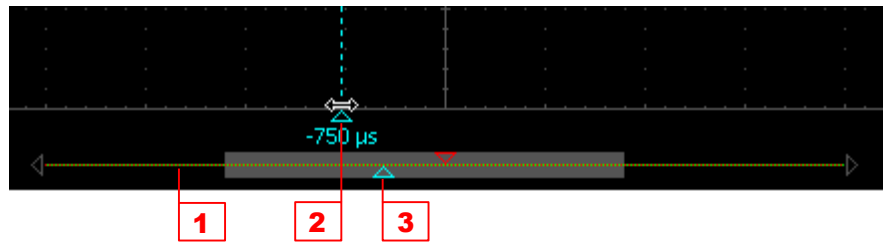


1. Horizontal scroll bar.
 2. Expansion point in view.
 3. Expansion point in horizontal scroll bar.
- Change the horizontal scale to expand or contract the waveform around the expansion point. Select a time scale in seconds per horizontal division from the horizontal scale combo box, or press the buttons to expand or contract the horizontal scale.
 - Select **Show Horizontal** from the **Cursors** menu to display horizontal cursors. The software shows the time from the trigger position of each cursor, and the difference between these times, at the bottom left of the display area. Note that if you hold down the control key while pressing the left-mouse button, the horizontal cursor furthest from the mouse pointer will move to the pointer position.

Figure 6. Horizontal axis cursors

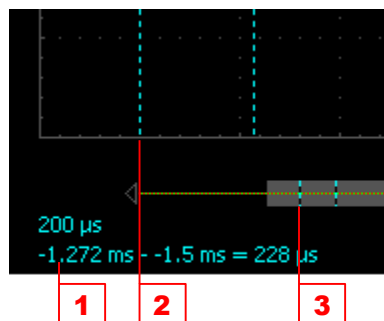


1. Time from each cursor to trigger position, and difference between times.
 2. Horizontal cursor in view.
 3. Horizontal cursor in horizontal scroll bar.
- Select a vertical channel from the **Cursors** menu to toggle the vertical cursors on or off. The software displays the voltage at each cursor, and the voltage difference between cursors at the bottom right of the display area. Note that if you hold down the shift key while pressing the left-mouse button, the vertical cursor furthest from the mouse pointer will move to the mouse pointer position. Hold down the control key before dragging a channel cursor to move both cursors at the same time.

Figure 7. Vertical axis cursors

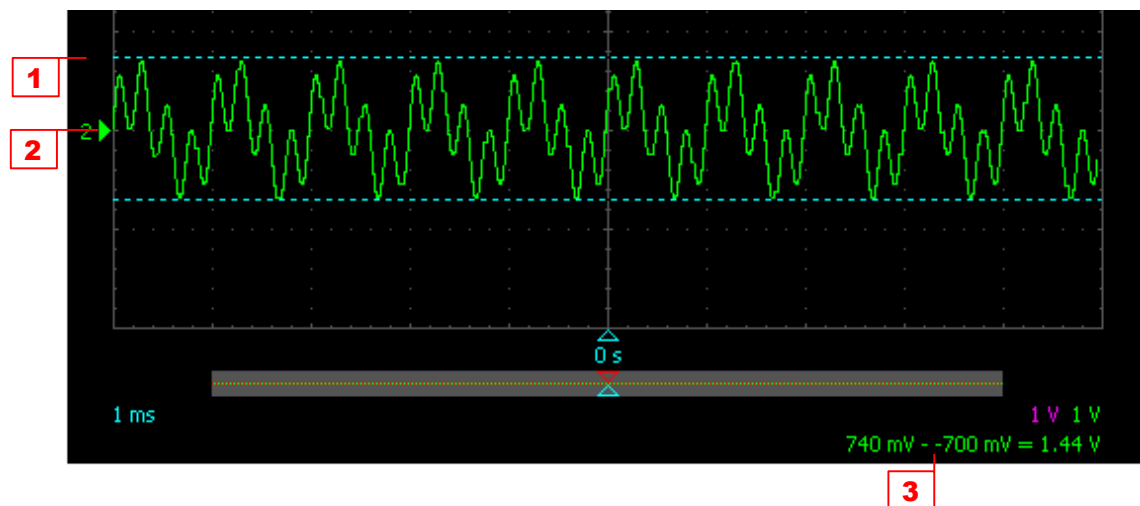

1. Drag the cursor with the left-mouse button to move it up or down.
 2. The channel marker arrowhead is drawn filled to indicate that the channel is the anchor for the vertical cursors; otherwise it is drawn outlined. Drag it with the left-mouse button to move the channel position up or down. Press the shift key and drag the channel marker to increase or decrease the offset between the channel marker vertical position and the waveform zero level vertical position.
 3. This text displays the voltage at each cursor, and the difference between these voltages.
- Select **Spectrum Analyzer** from the **View** menu to display the frequency components of the acquired waveforms. AlazarDSO displays the relative magnitude of the frequency components as a function of frequency of each enabled waveform.
 - Select **Voltmeter** from the **View** menu to display the minimum, maximum, average, and RMS values of the current record of each enabled channel.

Figure 8. Voltmeter view

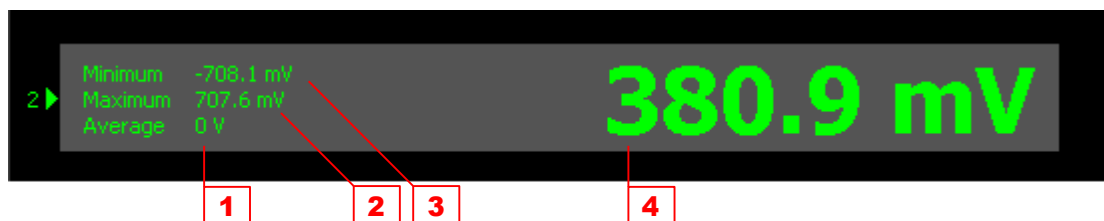

1. Average value in volts of the samples in this record.
2. Maximum value in volts of the samples in this record.
3. Minimum value in volts of the samples in this record.
4. RMS value in volts of the samples in this record.

Right click on the text to display the input channel context menu.

Note that AlazarDSO accumulates values before displaying their averages on screen. By default, values are accumulated for 1000 milliseconds. To change this time, select **Display** from the **Configure** menu to display the **Configure Display** dialog box, and change the voltmeter accumulate time.


1.4 Configuring Input Channels

Input channels display sample records digitized from board IO connectors. They are labeled **Ch 1** through **Ch 16** in the main window. There are two input channels for each board in the active board system.

To change the display or hardware settings of an input channel, select an **Input** channel from the **Configure** menu to display the **Configure Input** dialog box. Note that if an input channel is disabled, AlazarDSO does not transfer or display sample data for that channel.

AlazarDSO draws an arrowhead marker in the left margin of the graticule to indicate the vertical position of each enabled input channel. For example, the marker for input channel 2 is labeled **X** in the following figure.


Figure 9. Input channel vertical position marker

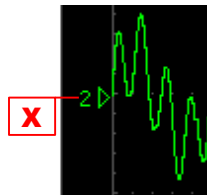

Drag the marker vertically with the left-mouse button to move the channel up or down, right click on it to display the channel context menu, or double click on it to display the **Configure Input** dialog box for the channel.

AlazarDSO draws a tab control in the **Vertical** group box on the right side of the main window to allow single-click control of input channels. Each tab controls one input channel from the active board system.

Figure 10. Input channel controls

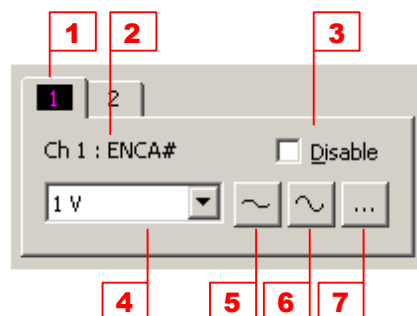

1. Select the channel to control.
2. This text displays the name and label of the currently selected channel.
3. Check this box to disable the selected channel.
4. This combo box displays the current scale factor. Select a scale factor from the combo box list to change the vertical scale factor.
5. Press this button to decrease the height of the selected channel's waveform by selecting the next vertical scale factor from the combo box.
6. Press this button to increase the height of the selected channel's waveform by selecting the previous vertical scale factor from the combo box.
7. Display the **Configure Input** dialog box for the selected channel.

1.5 Configuring Math Channels


Math channels display the sum, product, or difference between two input channels, or the event distribution histogram of one input channel. They are labeled **Ch A** through **Ch H** in the main window.

To modify the function, function parameters, or display parameters of a math channel, select the math channel from the **Math** popup menu of the **Configure** menu.

To change the number of math channels available, select **Display** from the **Configure** menu and change the math channels value in the **Options** section of the **Configure Display** dialog box. The minimum number is 1, and the maximum 8.

AlazarDSO draws an arrowhead marker in the left margin of the graticule to indicate the vertical position of each enabled math channel. For example, the marker for math channel A is labeled **X** in the following figure.


Figure 11. Math channel vertical position marker

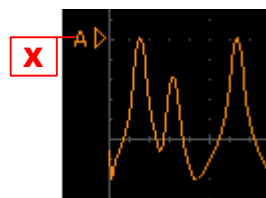

Drag the marker vertically with the left-mouse button to move the math channel up or down, right click to display the channel context menu, or double click to display the **Configure Math** dialog box.

AlazarDSO draws a tab control in the **Vertical** group box on the right side of the main window to allow single-click control of math channels. Each tab controls one math channel.

Figure 12. Math channel controls

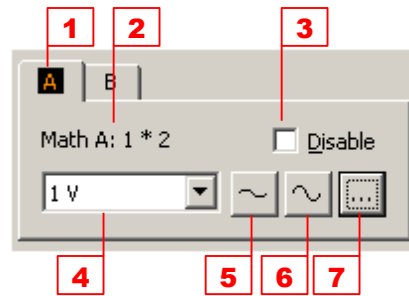

1. Select the channel to control.
2. This text displays the name and function of the selected channel.
3. Check this box to disable the calculation and display of the selected channel.
4. This combo box displays the current scale factor per vertical division of the selected channel.
5. This button selects the next vertical scale factor from the combo box to decrease the height of the selected channel's waveform.
6. This buttons selects the previous vertical scale factor from the combo box to increase the height of the selected channel's waveform.
7. Display the **Configure Math** dialog box for the selected channel.

1.5.1 Using Histograms

AlazarDSO can calculate the times between certain events in a record, group this times into time ranges, and display the number of items in each time range in the form of a histogram. The width of each bin in the histogram is the time for a record divided by the total number of bins.

To display a histogram for an input channel:

- Open the **Configure Math** dialog box for a math channel.
- Select **HIST X** from the **Function** combo box.
- Select the input channel from the **X** combo box.
- Select an event type from the **Event type** combo box. Events include: rising edge to rising edge, falling edge to falling edge, rising edge to falling edge, edge to edge, rise time, and fall time.
- Press the **OK** button to apply the changes.

Note that when AlazarDSO displays one or more histograms, it displays the time range of the bin at the expansion point.

1.6 Configuring Reference Channels


Reference channels display waveforms from sample values stored in files. They are labeled **Ch R** through **Ch Y** in the main window.

To select the file displayed by a reference channel and configure its display properties, select the reference channel from the **Reference** popup menu of **Configure** menu to display the **Configure Reference** dialog box.

To change the number of reference channels available, select **Preferences** from the **Configure** menu, and change the number of reference channels value in the **Configure Preferences** dialog box. The minimum number is 1, and the maximum 8.

AlazarDSO draws an arrowhead marker in the left margin of the graticule to indicate the vertical position of each enabled reference channel. For example, the marker for reference channel R is labeled **X** in the following figure.


Figure 13. Reference channel vertical position marker

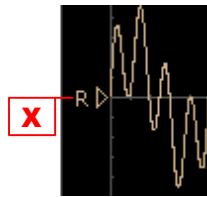

Drag the marker vertically with the left-mouse button to move the position of the channel up or down, right click on it to display the channel's context menu, or double click on it to display the **Configure Reference** dialog box.

AlazarDSO draws a tab control in the **Vertical** group box on the right side of the main window to allow single-click control of reference channels. Each tab controls one reference channel.

Figure 14. Reference controls

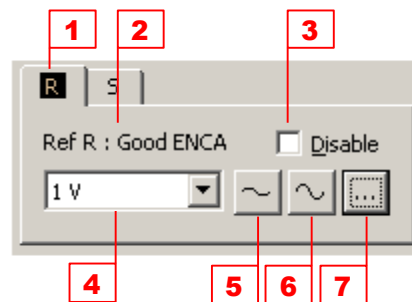

1. Select the channel to control.
2. This text displays the name and label of the selected channel.
3. Check this box to disable the display of the selected channel.
4. This combo box displays the current scale factor of the selected channel. Use the combo box to change the vertical scale factor.
5. Press this button to select the next vertical scale factor from the combo box to decrease the height of the selected channel's waveforms.


6. Press this button to select the previous vertical scale factor from the combo box to increase the height of the selected channel's waveforms.
7. Display the **Configure Reference** dialog box.

1.7 Saving and Loading Files

AlazarDSO can save and load records, entire acquisitions, or a series of acquisitions to file.

- Load a record from a file to a reference channel
Select **Open** from the **File** menu to display the **Open** file dialog box. Enter a file name or select one from the list control, select a reference channel from the **Display as** combo box, then press the **Open** button.
- Save the current acquisition to file.
Select **Save As...** from the **File** menu to open the **Save File** dialog box. Select the channels, records, and samples of interest, and the format in which you'd like to save these samples, then press the **Save** button.
- Save a record from the current acquisition as a reference.
Right click on the channel marker or waveform and select **Save as reference** from the channel context menu. This saves the waveform to file, and loads the file as a reference channel with one mouse click.

Figure 15. Channel context menu

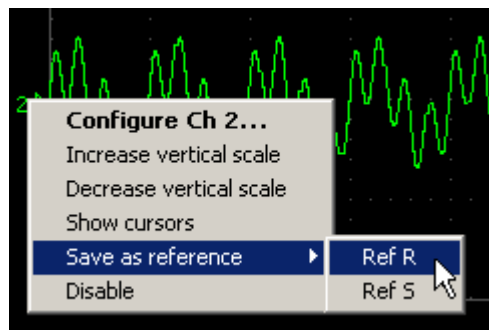

- Save a sequence of acquisitions.
Select **Acquire To File** from the **Tools** menu to display the **Acquire To File** dialog box. Enter the number of acquisitions you wish to save, check the **Display file after acquisition**, and press the **Acquire** button.

AlazarDSO displays a progress window during the acquisitions, and then displays the **Browse File** dialog box, which allows you to view the acquisition one record at a time.

- Stream to disk.
Select **Stream To Disk** from the **Tools** menu to display the **Stream To Disk** wizard.

Select the acquisition type and size, enable the **Browse file after the acquisition has completed** option, and then press the **Finish** button.

AlazarDSO displays a progress window during the transfers, and then displays the **Browse File** dialog box, which allows you to view the acquisition one transfer at a time.

Note that if you close the **Browse File** dialog, you can display it again by selecting **Browse File** from the **View** menu until you make another acquisition or exit the program. If you make another acquisition or restart the program, then select **Open** command from the **File** menu and select the file by name.

2 Reference


This chapter provides AlazarDSO reference information.

2.1 Windows

This section describes main window controls, menus, and menu shortcuts.

2.1.1 Main Window

Figure 16. Main window

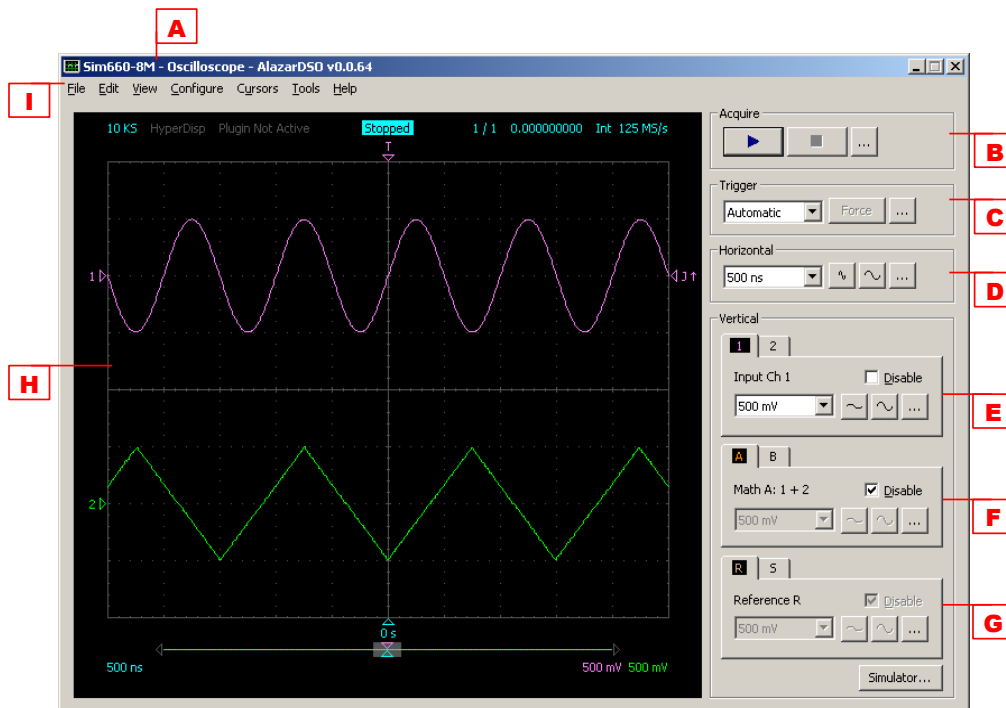


A. Title.

The window title displays the active board system, view mode, and program version. Note that if the active board system contains multiple boards, then the title displays the board type followed by the number of boards in the board system.

B. Acquire.

The controls in the Acquire group box allow you to start or stop acquisitions.

Figure 17. Acquire controls

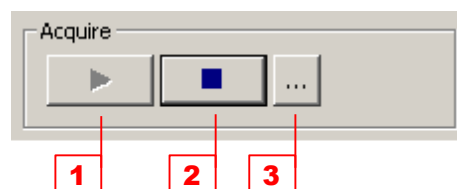


1. Press the Start button to start acquisitions.
2. Press the Stop button to stop acquisitions.
3. Press the Configure button to display the **Configure Acquire** dialog box.

C. Trigger.

The controls within the Trigger group box allow you to control the trigger operation. To configure trigger sources, select **Trigger** from the **Configure** menu to display the **Configure Trigger** dialog box for a board.

Figure 18. Trigger controls

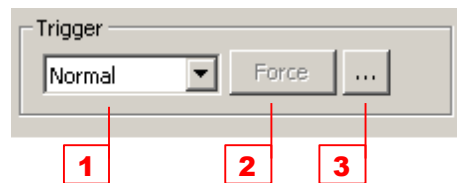

1. The trigger mode combo box allows you to select one of the following triggering modes:

Table 2-3. Trigger modes


Mode	Wait for trigger event
Automatic	No
Normal	Yes
Single	Yes

2. The force trigger button allows you to immediately force a trigger event if the board is waiting for a trigger. This button is enabled only when the system is acquiring data, and the acquisition mode is normal.
3. Press this button to display the **Configure Trigger** dialog box.

D. Horizontal.

The controls in the Horizontal group box allow you to change the horizontal scale. The units depend on the current view mode: oscilloscope mode units are seconds, and spectrum analyzer mode units are Hertz.

Figure 19. Horizontal controls

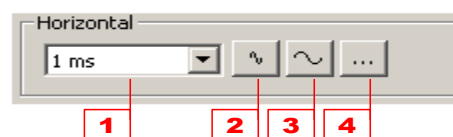


1. The horizontal scale combo box lets you select the time or frequency per horizontal division.

2. Press this button to select the next value per horizontal division from the horizontal scale combo box.
 3. Press this button to select the previous value per horizontal division from the horizontal scale combo box.
 4. Press this button to display the **Configure Horizontal** dialog box.
- Note that, by default, when you change the time per horizontal division AlazarDSO changes the sample rate so that, if possible, the record width in seconds equals the period displayed in the 10 divisions of the graticule. To select a fixed sample rate, select the **Horizontal** item from the **Configure** menu to display the **Configure Horizontal** dialog box.

E. Inputs.

These controls allow you configure input channels.

Figure 20. Input channel controls

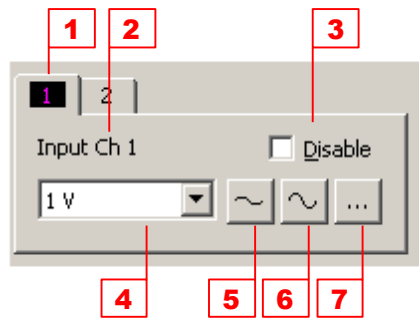


1. Click on a tab to select the input channel you wish to control.
2. This text displays the currently selected input channel. If you have set a label for this input channel, it is displayed following the channel's name.
3. Check this button to disable the transfer and display of data of the selected input channel.
4. Select the scale factor for the selected input channel.
5. Select the next item from the vertical scale factor combo box to reduce the vertical size of the selected input channel's waveform.
6. Select the previous item from the vertical scale factor combo box to increase the vertical size of the selected input channel's waveform.
7. Display the **Configure Input** dialog box to configure the selected input channel.

F. Math.

These controls allow you to configure math channels.

AlazarDSO can display up to 8 math channels. To change the number of math channels available, select **Display** from the **Configure** menu and change the math channels value in the **Options** section of the **Configure Display** dialog box. The minimum number is 1, and the maximum 8.

Figure 21. Math channel controls

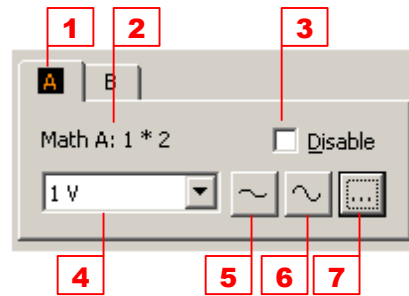


1. Click on a tab to select the channel you wish to control.
2. This static text control displays the name of the currently selected math channel, and the math function.
3. Check this button to disable the calculation and display of the selected math channel.
4. Select the scale factor for the selected math channel.
5. Select the next item from the vertical scale factor combo box to reduce the vertical size of the selected input channel's waveform.
6. Select the previous item from the vertical scale factor combo box to increase the vertical size of the selected channel's waveform.
7. Display the **Configure Math** dialog box.

G. Reference.

These controls allow you to configure reference channels.

AlazarDSO can display up to 8 reference channels. To change the number of reference channels available, select **Display** from the **Configure** menu, and change the reference channel value in the **Options** section of the **Configure Display** dialog box. The minimum number is 1, and the maximum 8.

Figure 22. Reference channel controls

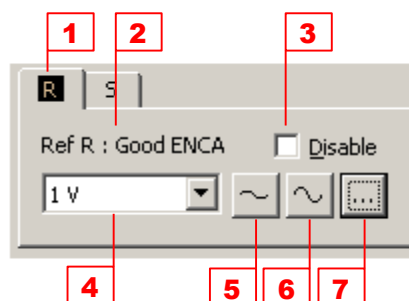


1. Click on a tab to select the reference channel you wish to control.
2. This static text displays the currently selected reference channel. If you have entered a label for this reference channel, it is displayed after the channel's name.
3. Check this button to disable the display of the selected reference channel.

4. Select the scale factor for the selected reference channel.
5. Select the next item from the vertical scale factor combo box to reduce the vertical size of the selected reference channel's waveform
6. Select the previous item from the vertical scale factor combo box to increase the vertical size of the selected reference channel's waveform
7. Display the **Configure Reference** dialog box to configure the selected reference channel.

H. Graticule

The graticule area is both an input and output control. It responds to left mouse clicks, right mouse clicks, left mouse double-clicks, and mouse hover events so that you can interact with the object under the mouse pointer.

Figure 23. Graticule controls

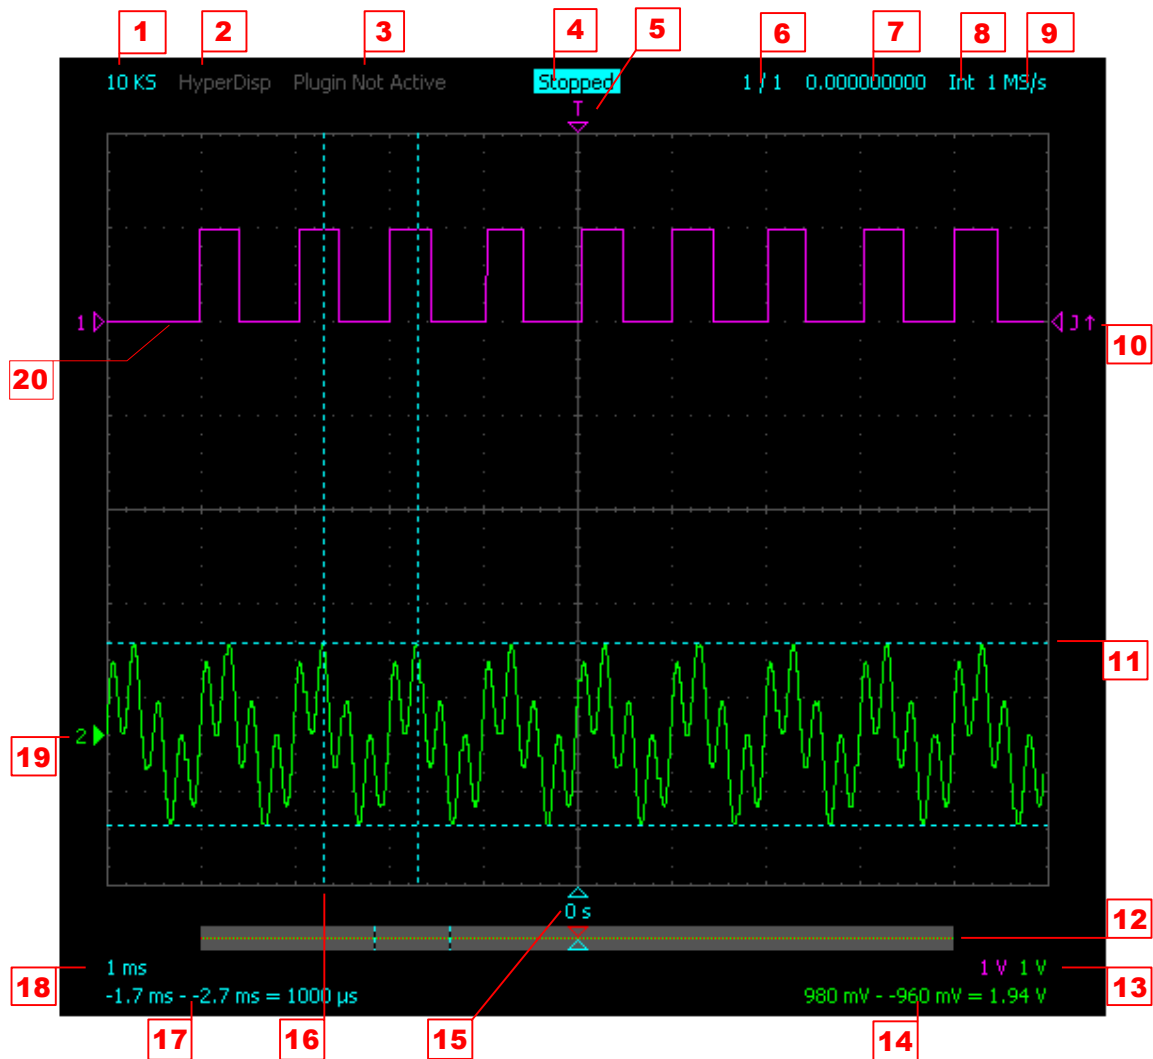

1. This control displays the number of samples per record of each channel. Right click on it to display the acquisition context menu, or double click to display the

Configure Acquire dialog box.

2. This control displays the transfer mode of the current acquisition. Transfer modes are:
 - Normal.
Sample data was transferred from the board using the AlazarRead API function, or read from a file.
 - HyperDisp.
Sample data was transferred from the board using the HyperDisp API function.
 - AutoDMA.
Sample data was transferred from the board using the AutoDMA API functions.

Right click on this control to display the acquisition context menu, or double click to display the **Configure Acquire** dialog box.

3. This control displays the state of the plugin interface. The states are:
 - Not active.
Plugin modules are disabled.
 - Active.
One or more plugin modules are enabled and returned with PLUGIN_SUCCESS to the PLUGIN_DISPLAY message for this acquisition.
 - Ignore.
One or more enabled plugin modules returned PLUGIN_IGNORE to the PLUGIN_DISPLAY message for this acquisition.

Right click on the control to display the plugin module context menu, or double click to display the **Configure Plugins** dialog box.

4. This control displays the state of the acquisition controller, which implements a state machine that manages writing to, and transferring data from, the board system.

The controller can be one of the following states:

- Startup.
The controller is initializing.
- Config.
The controller is writing configuration settings to the board system.

- Ready.
The controller is arming the board system for a capture.
- Trigger?
The controller is waiting for the board system to receive a trigger event.
- Busy.
The controller is waiting for the board system to complete a capture.
- Read.
The controller is transferring sample data from the board system to host memory.
- Write.
The controller is writing sample data from host memory to a file.
- Pause.
The controller is pausing after it has completed a capture.
- Display?
The controlled has completed a capture, but is waiting for records from the previous capture to be drawn on screen before displaying the current capture.
- Display
The controller is drawing records from the current capture to screen.
- Error
The controller has detected an error during this capture.
- Stopped.
The controller is not active.

Right click on this control to display the acquisition context menu, or double click to display the **Configure Acquire** dialog box. Note that if the controller remains in any one active state for a second or more, it displays the time it has been in that state to the right of the state name.

5. This marker indicates the trigger position within a record. Samples to the left of this marker are pre-trigger samples.

If no waveforms are displayed, you may drag the marker change the trigger position within a record.

If a waveform is displayed and the trigger position is outside of the current view, AlazarDSO draws an arrowhead beside the marker to indicate that the trigger position sample is either to the left or right of the current view.

Right click on this control to display the horizontal controls context menu, or double click on it to display the **Configure Horizontal** dialog box.

6. This control displays the current record displayed followed by the total number of records in an acquisition.

To view a different record from the current acquisition, select **Browse Records** from the **View** menu. This menu item is active only when an acquisition is displayed, and there is more than one record in the acquisition.

Right click on this control to display the acquisition context menu, or double click on it to display the **Configure Acquire** dialog box.

7. This control displays the timestamp of the currently displayed record.

Right click on this control to display the acquisition context menu, or double click on it to display the **Configure Acquire** dialog box.

8. This control displays the sample clock source. The possible values are:

- Int
The sample clock source is the board's internal oscillator.
- Ext
The sample clock source is an external clock signal.
- Ext-F
The sample clock source is an external clock signal, and the specified frequency is within the fast-external frequency range.
- Ext-M
The sample clock source is an external clock signal, and the specified frequency is within the medium-external frequency range.
- Ext-S
The sample clock source is an external clock signal, and the specified frequency is within the slow-external frequency range.
- Ext-P
The sample clock source is an external clock signal, and the specified frequency from the PLL.
- File
The acquisition data is from a file; there is no clock source.

Right click on this control to display the horizontal controls context menu, or double click on it to display the **Configure Horizontal** dialog box.

9. This control displays the current sample rate.

Right click on it to display the horizontal controls context menu, or double click on it to display the **Configure Horizontal** dialog box.

10. This marker shows the trigger level and slope of a trigger source. The marker is drawn relative to, and in the same color as, the source input channel


Hover the mouse over this control to display the trigger level, drag it vertically to increase or decrease the trigger level, right click on it to display the trigger context menu, or double click on it to display the **Configure Trigger** dialog box.

11. This dashed line is one of two cursors anchored to a vertical channel. The cursors allow the measurement of signal levels with respect to a vertical channel.

Drag it vertically to the move cursor up or down. Note that you can move the cursor furthest from the mouse pointer to the vertical position of the mouse pointer by holding down the shift key while left-clicking.

12. This control is a horizontal scroll box. If the record width in seconds is longer than the view width as set by the horizontal scale combo box, this scroll box shows the part of the record that is currently visible.

Figure 24. Horizontal scroll bar

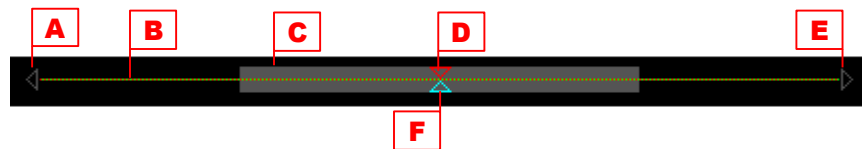

- A. Left scroll button.

Click with the left-mouse button to view samples closer to the start of the record. Hold down the left-mouse button to automatically scroll towards the start of record.

- B. Record width indicator.

This line indicates the record width, and is drawn in the colors of the enabled channels.

- C. View width indicator.

This rectangle indicates the part of the record that is currently visible in the graticule.

Drag this rectangle with the left-mouse button to view a different part of the record. Click to the left of the view rectangle with the left-mouse button to

scroll the view towards the start of the record, and to the right of the view rectangle scroll the view toward the end of the record.

Note that when the record width is greater than the view width, you may also scroll the view horizontally by left-clicking on the graticule background and dragging it the left or right.

D. Trigger position in record.

This arrowhead marks to the relative position of the trigger within the record.

If the view rectangle does not cover the trigger marker, hover the mouse cursor over the marker to display the current trigger position, right click to display trigger context menu, and double click to display the **Configure Horizontal** dialog box. If no waveforms are displayed, you may also drag the marker to change the trigger position.

E. Right scroll button.

Click with the left-mouse button to view samples closer to the end of the record. Hold down the left-mouse button to automatically scroll towards the end of record.

F. Expansion point.

This arrowhead marks the position of the expansion point within the view.

If the view width is greater than or equal to record width in seconds, you may drag this marker to change the position of expansion point in the view. If a waveform is displayed and you change the horizontal scale, the waveform will expand or contract around this point.

This text displays the vertical scale of each enabled input, math, and reference channel in units per vertical division. The text is drawn in the color of the channel.

Hover the mouse over the text to display the channel name, units, and input range; right click to display the channel context menu; or double click to display the **Configure Input**, **Configure Math**, or **Configure Reference** dialog box.

13. This text displays the signal values at the vertical cursors with respect to the channel anchoring the cursors, and the difference between these values. The text is drawn in the color of the channel anchoring the cursors.

Hover the mouse over the text to display the name of the channel anchoring the cursors, right click to display the vertical channel context menu, or double click to display the **Configure Channel** dialog box.

14. The arrowhead marks the position of the expansion point in the view, and the text indicates the time from this point to the trigger position in the record.

Drag this marker to change the position of expansion point in the view. If a waveform is displayed and you change the horizontal scale, the waveform will expand or contract around this point.

15. This vertical line is one of two horizontal cursors.

Drag the cursor horizontally with the left-mouse button to move within a record. Note that if you left-click while holding the control key, the cursor furthest from the mouse pointer will move to the mouse pointer position.

16. This text shows the time from each horizontal cursor to the trigger position, and the difference between these two times.

Right click on this control to display the horizontal context menu, or double click on it to display the **Configure Horizontal** dialog box.

17. This text shows the horizontal scale in seconds per horizontal division.

Right click on this control to display the horizontal context menu, or double click on it to display the **Configure Horizontal** dialog box.

18. This arrowhead marker shows the vertical position of an input, math, or reference channel. Note that the arrowhead is filled when channel anchors the vertical cursors; otherwise the arrowhead is drawn as an outline.

Drag this marker vertically with the left-mouse button to move the channel's waveform up or down, right click to display the vertical channel context menu, or double click to display the **Configure Input**, **Configure Math**, or **Configure Reference** dialog box.

19. This is a channel waveform.

If acquisitions are stopped and you move the mouse over a sample in the waveform, you may:


- Hover the mouse to display a ToolTip showing the sample's value.
- Drag vertically with the left-mouse button to move the waveform up or down.
- Press the shift-key and drag vertically with the left-mouse button to increase or decrease the offset between the channel marker vertical position and the waveform zero level.
- Right click to display the channel context menu.
- Double click to display the **Configure Input**, **Configure Math**, or **Configure Reference** dialog box.

Note that these mouse operations work with reference channels while acquisitions are running or stopped.

2.1.2 Menu

The main window menu provides access to all AlazarDSO functionality.

Figure 25. Main menu

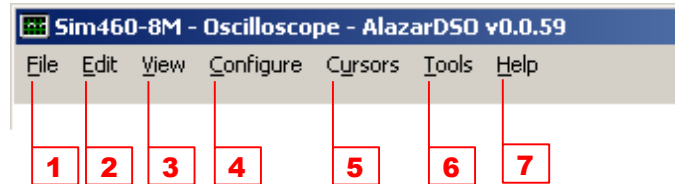

2.1.2.1 File

- Open
Display the **Open** file dialog box to select a file containing a record to display as a reference channel, or to select a file containing an acquisition, or acquisition sequence to view.
- Save As
Display the **Save As** dialog box to save records from the current acquisition to disk in one of several formats.
- Print
Display the **Print** file dialog box to print the graticule to a printer attached to the system.
- Exit
Close AlazarDSO.

2.1.2.2 Edit

- Copy Screen
Copy the graticule as a bitmap image to the Clipboard. From there, you can paste the image into applications such as Microsoft Paint or Microsoft Word.
- Clear Acquisition
Erase the current acquisition.

2.1.2.3 View

- Oscilloscope
Draw records as waveforms.

- **Spectrum Information**
Calculate and display the frequency components of an input channel, math, or reference channel.
- **Voltmeter**
Display the minimum, maximum, average, and RMS values of records as text.
- **Full Screen**
Expand the graticule to fill the screen display area. To exit full screen mode, press the Escape key, Ctrl + U, or right click in the graticule area and select **Full screen** from the context menu.
- **Browse Records**
Display the **Browse Records** dialog box, which allows you to select the record from a multi-record acquisition to view in the graticule.
- **Browse File**
Display the **Browse File** dialog box, which allows you to select the record from a multi-acquisition file to view in the graticule.
- **Log File**
Display the program log file. This file records any errors that the program generates, and supplemental information that might help to determine the cause of the error.

2.1.2.4 Configure

- **System**
Display the **Configure System** dialog box, which allows you to change the active board system, show board information, and set advanced parameters.
- **Acquire**
Display the **Configure Acquire** dialog box, which allows you to set acquisition and data transfer parameters.
- **Trigger**
Display the **Configure Trigger** dialog box for the selected board in the active board system. The **Configure Trigger** dialog box allows you to select a board's trigger parameters.
- **Horizontal**
Display the **Configure Horizontal** dialog box, which allows you to set parameters including: trigger delay, trigger position in a record, sample rate, and clock source.
- **Input**
Display the **Configure Input** dialog box for the selected input channel. The **Configure Input** dialog box allows you to select the hardware and display

parameters of the board system's IO channels.

- **Math**
Display the **Configure Math** dialog box for the selected math channel. The **Configure Math** dialog box allows you to select the function and display parameters of a math channel.
- **Reference**
Display the **Configure Reference** dialog box for the selected reference channel. The **Configure Reference** dialog box allows you to select a file containing samples from an acquisition, and the file's display parameters.
- **Plugins**
Display the **Configure Plugins** dialog box, which allows you to enable the plugin interface, and enable plugin modules.
- **Display**
Display the **Configure Display** dialog box, which allows you select display related parameters such as: the graticule colors, the waveform display style, the user interface language, and the number of math and reference channels.
- **Load**
Display the **Open** file dialog, which allows you to load AlazarDSO settings previously saved to a file.
- **Load Recent**
Load one of the recently used settings files.
- **Load Default**
Restore the system default settings.
- **Save**
Save the current settings file to disk now.
- **Save As**
Save the current settings to a new settings file.

2.1.2.5 Cursors

- **Hide Vertical.**
Don't show the vertical cursors.
- **Input**
Show the vertical cursors anchored to the selected input channel.

- **Math**
Show the vertical cursors anchored to the selected math channel.
- **Reference**
Show the vertical cursors anchored to the selected reference channel.
- **Show / Hide Horizontal**
Show the horizontal cursors if they are hidden, or hide them if they are shown.

2.1.2.6 Tools

- **AutoSetup**
Find input ranges, vertical scales, trigger level, sample rate, and horizontal scale values to allow the stable display of an unknown input signal. Note that AlazarDSO finds the input range and vertical scale for each enabled input channel, and uses the first enabled vertical channel to set the trigger level and horizontal scale values.
- **Trigger Sweep**
Display the **Trigger Sweep** dialog box, which allows you automate trigger level tests.
- **Spectrum Information**
Display the properties a currently displayed waveform in Spectrum Analyzer View mode.
- **Disk Benchmark**
Display the Disk Benchmark wizard, which allows you to measure the sequential write speed of your hard drives.
- **Bus Benchmark**
Display the Bus Benchmark wizard, which allows you to measure the average sustained transfer rate from your AlazarTech digitizer boards to host memory.
- **Coprocessor**
Display the Coprocessor dialog, which allows you to configure and control the coprocessor FPGA on boards with a user-programmable FPGA. This menu item is enabled only if your board has a user programmable FPGA.
- **DSP Filter**
Display the Digital Filter dialog, which allows you to insert a digital filter in the signal path.
- **Acquire To File**
Display the **Acquire To File** dialog box, which allows you to save acquisitions from single-ported memory to file.
- **Stream To Memory**
Display the **Stream To Memory** wizard, which allows you to save acquisitions from

dual-ported memory to memory.

- **Stream To Disk**
Display the **Stream To Disk** wizard, which allows you to save acquisitions from dual-ported memory to file.

2.1.2.7 Help

- **Contents**
Display the local help system.
- **Remote Support**
Launch TeamViewerQS.exe which allows you to share your desktop so that AlazarTech can provide remote support.
- **On the Web.**
Launch your default web browser to visit AlazarTech on the web, or open your default email program to send us an email.
- **About**
Display the **About** dialog box which allows you to view AlazarDSO version and copyright information.

2.2 Keyboard Shortcuts

Table 2-4. General keyboard shortcuts

F1	Display on-line help
F4 or I	Display Board Properties dialog box
F5	Display Coprocessor dialog box
F6	Display Board Calibration wizard
F8	Display Stream To Disk wizard
F9	Display Spectrum Information dialog box
F10	Display Configure Preferences dialog box
Ctrl + C	Copy graticule area to clipboard
Ctrl + F	Display Browse File dialog box
Ctrl + O	Display Open File dialog box
Ctrl + P	Display Print File dialog box
Ctrl + Q	Switch to oscilloscope view
Ctrl + R	Display Browse Records dialog box
Ctrl + S	Display Save As dialog box
Ctrl + U	Toggle full screen mode
Ctrl + V	Toggle view mode
Del	Clear waveforms

Table 2-5. Record navigation shortcuts

UP ARROW	Display next record in transfer
DOWN ARROW	Display previous record in transfer
CTRL+UP ARROW	Display last record in transfer
CTRL+DOWN ARROW	Display first record in transfer
LEFT ARROW	Scroll current record division left
RIGHT ARROW	Scroll current record division right
HOME	Scroll current record to trigger position
PAGE UP	Scroll current record graticule width right
PAGE DOWN	Scroll current record graticule width left
CTRL+LEFT ARROW	Scroll current record to first sample
CTRL+RIGHT ARROW	Scroll current record to last sample

Table 2-6. Cursor keyboard shortcuts

1	Show or hide Ch 1 cursors
2	Show or hide Ch 2 cursors
3	Show or hide Ch 3 cursors
4	Show or hide Ch 4 cursors
5	Show or hide Ch 5 cursors
6	Show or hide Ch 6 cursors
7	Show or hide Ch 7 cursors


8	Show or hide Ch 8 cursors
9	Show or hide Ch 9 cursors
0	Show or hide Ch 10 cursors
Shift + 1	Show or hide Ch 11 cursors
Shift + 2	Show or hide Ch 12 cursors
Shift + 3	Show or hide Ch 13 cursors
Shift + 4	Show or hide Ch 14 cursors
Shift + 5	Show or hide Ch 15 cursors
Shift + 6	Show or hide Ch 16 cursors
A	Show or hide Math Ch A cursors
B	Show or hide Math Ch B cursors
C	Show or hide Math Ch C cursors
D	Show or hide Math Ch D cursors
E	Show or hide Math Ch E cursors
F	Show or hide Math Ch F cursors
G	Show or hide Math Ch G cursors
H	Show or hide Math Ch H cursors
R	Show or hide Reference Ch R cursors
S	Show or hide Reference Ch S cursors
T	Show or hide Reference Ch T cursors
U	Show or hide Reference Ch U cursors
V	Show or hide Reference Ch V cursors
W	Show or hide Reference Ch W cursors
X	Show or hide Reference Ch X cursors
Y	Show or hide Reference Ch Y cursors
Shift + H	Show or hide horizontal cursors
Shift + V	Hide vertical cursors
Ctrl + drag horizontal (timebase) cursor with left mouse button.	Move both cursors together to maintain the same time difference between cursors.
Ctrl + drag vertical (channel) cursor with left mouse button	Move both cursors together to maintain the same offset from the channel zero position.
Ctrl + left mouse click	If horizontal (timebase) cursors are enabled, move the cursor furthest from the mouse position to the mouse position.
Shift + left mouse click	If vertical (channel) cursors are enabled, move the cursor furthest from the mouse to the mouse click position.

2.3 Dialogs

This section describes each AlazarDSO dialog box.

2.3.1 Acquire To File

Figure 26. Acquire to File dialog box

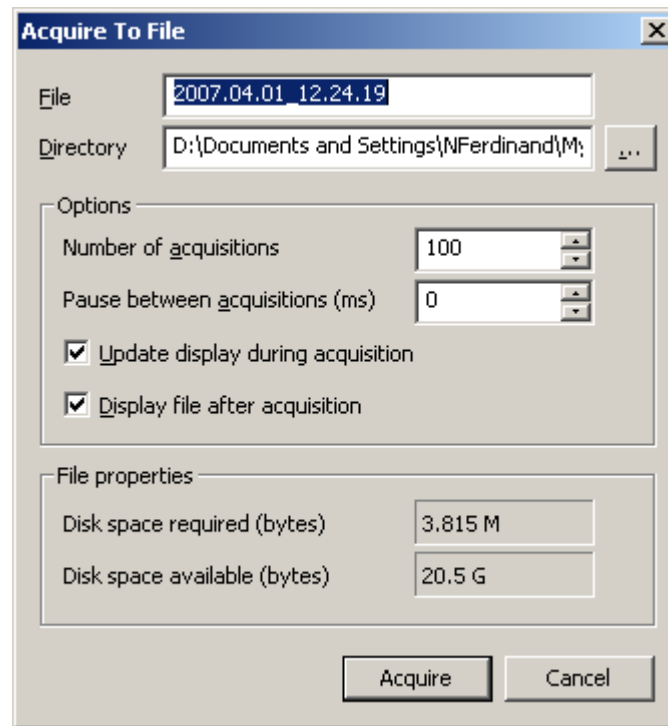

The **Acquire to File** dialog allows you to save a sequence of acquisitions to a file, and optionally view the saved acquisitions. The acquisitions are made with your current acquisition settings.

File

Enter the file name. The software creates a default file name from the current date and time, and will automatically append the extension “.ATB” to the file name.

Directory

Enter the name of the directory in which to create the file, or press the “...” button to display a directory chooser dialog box which will allow you to select a directory.

Number of acquisitions

Enter the total number of acquisitions to save.

Pause between acquisitions

Enter the time in milliseconds to pause between each acquisition.

Update display during acquisition

Check this box to view records as they are acquired.

Display file after acquisition

Check this box to display the **Browse File** dialog box after the acquisition has completed. The **Browse File** dialog allows you to view the acquisition file, one record at a time.

Note that if you close the **Browse File** dialog, you can display it again by selecting **Browse File** from the **View** menu until you make another acquisition or exit the program. If you make another acquisition or restart the program, then select **Open** command from the **File** menu and select the file by name.

Disk space required

The disk space in bytes that is required for the file.

Disk space available

The disk space in bytes that is available on the volume containing the selected directory.

Acquire

Press the **Acquire** button to save your settings and start the acquisition.


Note that this button is disabled when the number of acquisitions would create a file requiring more disk space than is available. If the button is disabled, consider reducing the number of acquisitions, or changing the directory to one on a different physical volume with more available disk space.

Cancel

Press to discard your settings and return to the main window.

2.3.2 Advanced Options

Figure 27. Advanced Options dialog box

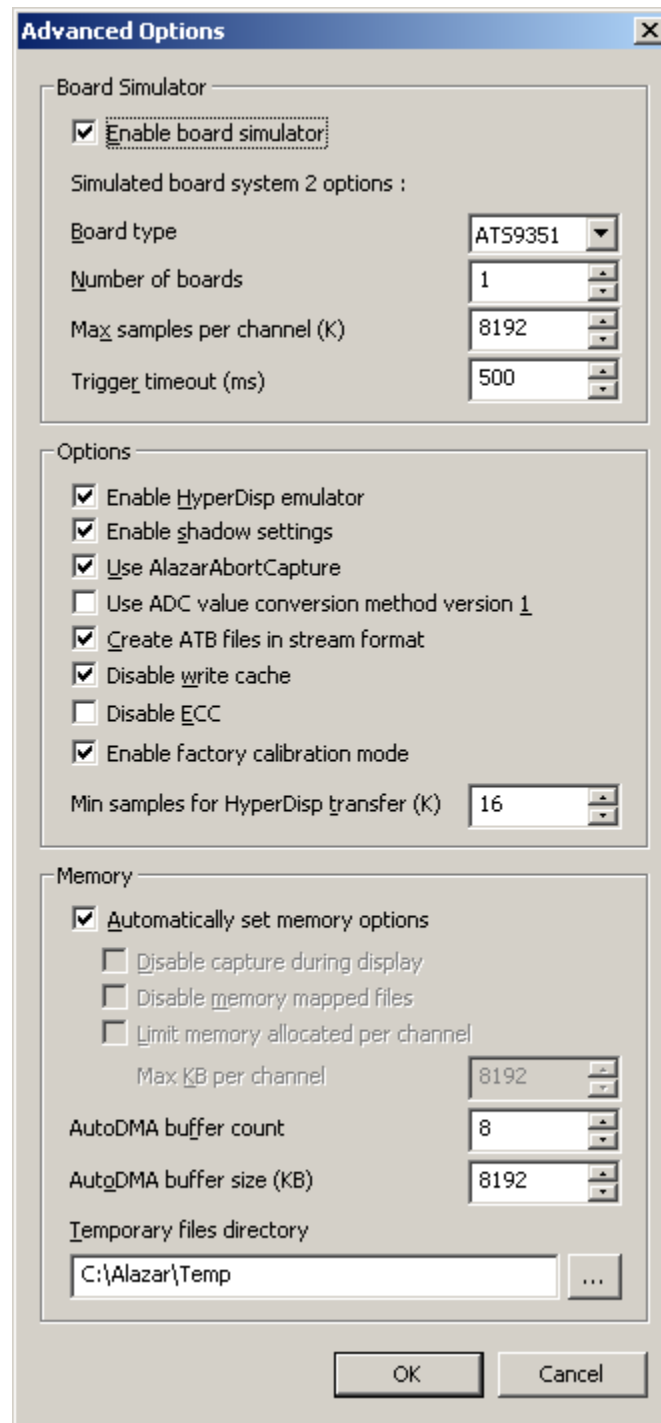

The **Advanced Options** dialog box allows you to control the board simulator, memory usage, and internal program options.

Note that AlazarDSO may cease to startup or function correctly if you change memory or system options from their default values. If this occurs, please rename or delete the “AlazarDSO.ini” file in the “My Documents\AlazarTech” folder. AlazarDSO will create a new “AlazarDSO.ini” configuration file with default parameters the next time it is started.

Enable board simulator

AlazarDSO includes a board simulator that generates sample data when no physical boards are installed. Check this box to enable the board simulator. It is disabled by default.

The simulator creates two board systems. Board system 1 is made up of one ATS460-8M. This board system can't be modified, and is selected by default when no physical boards are installed. However board system 2 is fully programmable. You can select the board type, number, and maximum samples per channel in order to simulate any possible AlazarTech board system.

Board type

Select the board type for simulated board system 2 from the list of available boards.

Number of boards

Enter the number of boards in simulated board system 2. The minimum value is 1 and the maximum is 8.

Max samples per channel

Enter the maximum number of kilo-samples per channel in simulated board system 2. The minimum value is 1 kilo-sample, and the maximum is 131072 kilo-samples (i.e. 128 mega-samples).

Trigger timeout

Enter the time in milliseconds between the start of capture and the trigger event in a simulated acquisition sequence.

Enable HyperDisp emulator

The HyperDisp emulator is software that post-processes acquisition data into a form that is efficient for drawing on screen. Check this box to enable this option. Under most conditions, the time required to draw a waveform on screen will decrease significantly when this option is enabled.

Enable shadow settings

AlazarDSO maintains a copy in host memory of the configuration parameters last written to each board in the active board system. If this option is enabled and the board configuration changes, the software only writes the configuration parameters that have changed to the board. If this option is not enabled, the software writes all board configuration parameters to the board. Check this box to enable this option.

Use AlazarAbortCapture

Select between using AlazarAbortCapture or AlazarForceTrigger to abort an in-progress capture. Check this box to use AlazarAbortCapture.

Use ADC value conversion method version 1

The ADC calibration method determines how AlazarDSO should convert ADC sample values into volts. Check this box if your AlazarTech boards were last calibrated using method 1.

- Version 1
The sample zero level is $2^{(\text{BitsPerSample} - 1)}$ and the maximum amplitude is $(2^{(\text{BitsPerSample} - 1)} - 1)$. This method was used on boards calibrated June 30, 2007 or earlier.
- Version 2
The sample zero level is $2^{(\text{BitsPerSample} - 1)} - 0.5$ and the maximum amplitude is $2^{(\text{BitsPerSample} - 1)} - 0.5$. This method was used on boards calibrated July 1, 2007 or later.

Create ATB Files in stream format

Check this option to allow the “Stream To Disk” wizard to create ATB files in raw stream data format. If not checked, AlazarDSO will create “Stream To Disk” files in record contiguous format.

Disable write cache

Check this option to disable intermediate buffering and caching by the system while writing to file.

Disable ECC

Some digitizer models include ADCs that require error correction circuits (ECC) for operation at their highest rated sampling frequencies. However, the ECC may introduce artifacts at lower sample frequencies.

Check this option to disable ADC error correction. Note that this control is disabled if the digitizer does not use ECC.

Enable factory calibration mode

Check this option to display of advanced calibration options in the board calibration wizard. These advanced options require specialized equipment that is not normally unavailable outside the factory. A password is required to enable this option.

Min samples for HyperDisp transfers

Enter the minimum number of kilo-samples required to activate on-board HyperDisp. On-board HyperDisp pre-processes capture data into a form that is efficient for transfer to host memory, and display on screen. Note that for HyperDisp transfers to be activated

that HyperDisp must be enabled in the **Configure Acquire** dialog box, and the number of samples per record must be greater than or equal to this value.

Automatically set memory options

Enable this option to allow AlazarDSO to automatically set memory allocation options based on the amount available physical memory in your system. This option is enabled by default.

Disable capture during display

AlazarDSO can acquire data in one of two modes:

- Acquire and transfer sample data from the board system to host memory, and then display it on screen.
- Acquire and transfer sample data from the board system to host memory while, at the same time, displaying data from the previous acquisition on screen.

Capture during display should improve acquisition rates under most conditions, but requires at least two buffers for acquisition data. It is enabled by default if there is sufficient physical memory available.

Disable memory mapped files

AlazarDSO can allocate memory backed by the system page file, or create temporary files that the system maps into memory as needed. Using memory mapped files removes the risk of running out of space in the system page file, but requires disk space for the temporary files. By default, memory mapped files are enabled if the “limit memory allocated per channel” option is not enabled.

Limit memory allocated per channel

AlazarDSO can limit amount of memory that it allocates to store sample data from each transfer in an acquisition.

If this option is enabled and the number of samples per transfer is greater than the number of samples that can fit entirely into memory, AlazarDSO will split the data transfer into segments that can fit entirely into memory. It will write these segments to a temporary file during the board to host memory data transfer. After the board to host data transfer is complete, it will read segments from the temporary file into memory to process and display the sample data.

This option enables AlazarDSO to work with board systems that have one or more digitizers with 128MS per channel or greater under 32-bit operating systems. These board systems require more virtual memory to store all of the samples possible in one transfer than is available under a 32-bit operating system.

Max KB per channel

Enter the maximum amount of memory to allocate per channel when the “limit memory allocated per channel” option is enabled. AlazarDSO will allocate this amount of memory per channel if the maximum number of samples per channel of a board in the current board system is greater than the number of samples that can fit into this amount of memory.

AutoDMA buffer count

Enter the number of buffers to allocate for continuous AutoDMA transfers. The minimum value is 2, the maximum value is a function of the amount of physical memory available, and the default value is 3.

Max bytes per AutoDMA buffer

Enter the maximum number of kilobytes per AutoDMA transfer. This value is used to limit the size of AutoDMA transfers in the **Configure Acquire** dialog box and **Stream To Disk** wizard.

Temporary files directory

Select a folder to create temporary files. The free disk space on the volume containing this folder must be at least two times the on-board memory size in bytes of all of the digitizer boards in the board system.

OK


Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

2.3.3 AutoDMA Options

Figure 28. AutoDMA Options dialog box

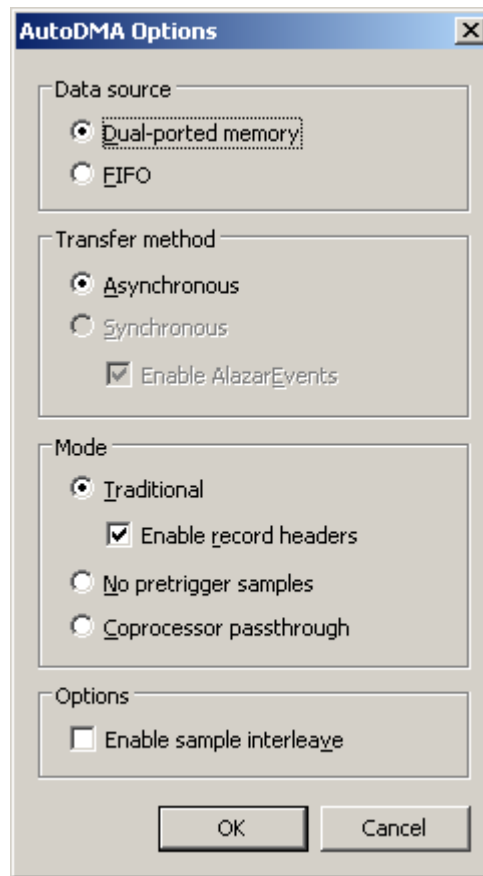

The **AutoDMA Options** dialog box allows you to select the transfer mode and options for acquisitions from dual-ported memory.

Data source

The data source defines the source of sample data on the digitizer board.

- **Dual-ported memory**
Sample data is buffered in dual-ported memory before being transferred to host memory.
- **FIFO**
Sample data is transferred directly from an on-board FIFO to host memory.

Transfer method

The transfer method defines how DMA transfers are made from on-board to host memory.

- **AlazarAsyncRead**
The system queues several DMA transfer buffers to each board, and waits for hardware interrupts to indicate when the transfers have completed.
- **AlazarGetNextAutoDmaBuffer**
The system queues a single DMA transfer buffer, and polls to determine when a transfer has completed.

Enable AlazarEvents

When synchronous transfers are selected, enable this option to reduce CPU usage by waiting on an event rather than polling for the end of a DMA transfer. Note that AlazarEvents is used only with the AlazarGetNextAutoDmaBuffer API.

AutoDMA mode

The AutoDMA mode selects how the digitizer organizes samples from its ADC converters into records and buffers.

- **Traditional**
Acquire multiple records (one per trigger event), optionally with samples before each trigger event and record headers and timestamps.
- **No pre-trigger samples (NPT)**
Acquire multiple records (one pre trigger event) without pre-trigger samples or record headers. Select this mode for faster trigger repeat rates than possible in traditional AutoDMA mode.
- **Coprocessor pass-through**
Transfer data for processing by a co-processor FPGA.

Enable record headers

Check to enable the board firmware to add a header to each record.

Note that record timestamps are transferred with the record header. As a result, record timestamps will not be available unless this option is enabled.

Enable sample interleave

This option controls how a board transfers records from on-board to host memory. When this enabled, a board transfers one sample from a record of CH A followed by the corresponding sample from the corresponding record of CH B. This method produces higher transfer rates from on-board to host memory, but requires that software de-interleave samples.

When this option is not enabled, the board transfers all of the samples from a record of CH A, followed by the all of samples from the corresponding record of CH B. This method produces lower transfer rates from on-board to host memory than sample interleaved records.

OK


Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

2.3.4 Board Properties

Figure 29. Board Properties dialog box

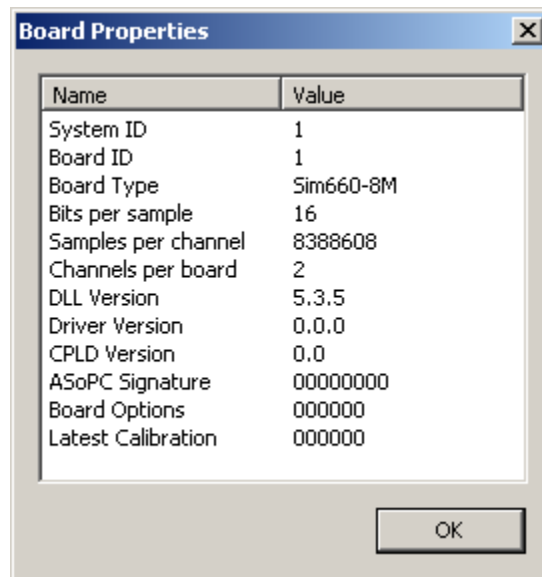

The board properties dialog box allows you to view hardware and software properties of the selected board. Note that you can display this dialog box by pressing the “Ctrl + I” hotkey.

System ID

This value is the system identifier to which the selected board belongs.

Board ID

This value is the board identifier of the selected board in its board system.

Board Type

This value shows the model and maximum samples per channel of the board.

Driver Version

This value shows the board’s device driver version.

Bits per sample

This value shows the sample width in bits.

Sample per channel

This value shows the memory depth in samples per channel.

Channels per board

This value shows the number of input channels on the board.

DLL version

This value shows the version of the AlazarTech system file ATSApi.dll used by this board.

Driver version

This value shows the version of the board's device driver.

CPLD Version

This value shows the board's CPLD version.

ASoPC Signature

This value shows the board's FPGA version.

Serial Number

This value is the board's serial number.

PCB Revision

This value shows the board's PCB revision, if the firmware is capable of reporting this information.

Board Options

This value shows the board's installed option code.

Latest Calibration


This is the date when the board was last calibrated.

OK

Press to close the dialog box.

2.3.5 Browse File

Figure 30. Browse File dialog box

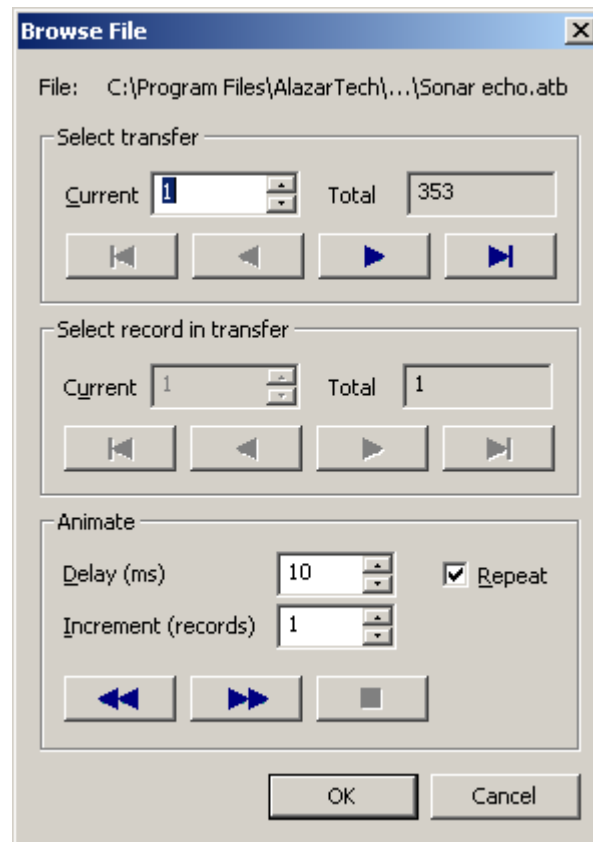

The **Browse File** dialog box allows you to select a record to display from all the records in a multi-record, multi-acquisition file. It also allows you to automatically scan forward or backward through the records in the file.

Hover the mouse over an icon button to display a ToolTip window with a description of its function.

Path

This control shows current file path. If the full path is too long to be displayed in the control, hover the mouse over the abbreviated path to display a ToolTip window containing the full path.

Current Acquisition

Enter an acquisition, or use the up- or down-buttons to select the next or previous acquisition from all the acquisitions in the file.

Total Acquisitions

Shows the total number of acquisitions in the file.



Display First Acquisition

Display the current record from the first acquisition in the file.



Display Previous Acquisition

Display the current record from the previous acquisition in the file.



Display Next Acquisition

Display the current record from the next acquisition in the file.



Display Last Acquisition

Display the current record from the last acquisition in the file.

Current Record

Enter a record, or use the up- or down-buttons to select the next or previous record in the current acquisition.

Total Records

Shows the total number of records in the current acquisition.



Display First Record

Display the first record from the current acquisition.



Display Previous Record

Display the previous record from the current acquisition.



Display Next Record

Display the next record from the current acquisition.



Display Last Record

Display the last record from the current acquisition.

Delay

Select the time in milliseconds to pause between each record in animation mode.

Increment

Select the number of records to add to the current record between screen updates in animation mode.

Repeat

Check this button to continue the animation in a loop until you press the **Stop** button.



Scan Backward

Scan backwards to display all the records in the current acquisition. After the first record of the current acquisition has been displayed, continue from the last record the previous acquisition. After the first record of the first acquisition has been displayed, continue from the last record of the last acquisition if the **Repeat** box is checked, or stop if the **Repeat** box is not checked.



Scan Forward

Scan forward to display all the records in the current acquisition. After the last record of the current acquisition has been displayed, continue from the first record the next acquisition. After the last record of the last acquisition has been displayed, continue from the first record of the first acquisition if the **Repeat** box is checked, or stop if the **Repeat** box is not checked.



Stop

Stop the scan through the records.

OK


Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

2.3.6 Browse Records

Figure 31. Browse Records dialog box

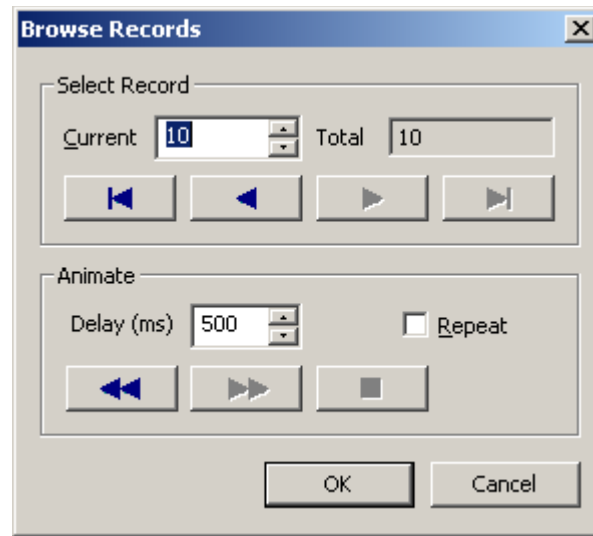

The **Browse Records** dialog box allows you to select a record to display from all the records in a multi-record acquisition. It also allows you to automatically scan forward or backward through the records in the acquisition.

Hover the mouse over an icon button to display a ToolTip window with a description of its function.

Current

Enter a record to display, or use the up- or down-buttons to select the next or previous record.

Total

Shows the total number of records in the acquisition.



Display First Record

Display the first record in the acquisition.



Display Previous Record

Display the previous record in the acquisition.



Display Next Record

Display the next record in the acquisition.



Display Last Record

Display the last record in the acquisition.

Delay

Select the time in milliseconds to display each record in animation mode.

Repeat

Check this button to continue the animation in a loop until you press the **Stop** button.



Scan Backward

Scan backwards to display all the records in the acquisition. After the first record in the acquisition has been displayed, continue from the last record in the acquisition if the **Repeat** box is checked.



Scan Forward

Scan backwards to display all the records in the acquisition. After the last record in the acquisition has been displayed, continue from the first record in the acquisition if the **Repeat** box is checked.



Stop

Stop the scan through the records.

OK

Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

2.3.7 Configure Acquire

Figure 32. Configure Acquire dialog box

The screenshot shows the 'Configure Acquire' dialog box with the following settings:

- Sample points:**
 - Samples per record: 10000
 - ☒ Enable single-ported memory
 - Records per acquisition: 5
 - ☐ Enable HyperDisp
 - ☒ Enable dual-ported memory (AutoDMA)
 - Records per buffer: 1
 - Buffers per acquisition: 1
 - Options...
- Waveform points:**
 - Waveform type: Sample
 - Records per waveform: 2
- Acquisitions:**
 - ☒ Acquire until Stop button pressed
 - ☐ Acquire until number of acquisitions completed
 - Number of acquisitions: 1

Buttons: OK, Cancel

The **Configure Acquire** dialog box allows you to set the system's acquisition and data transfer parameters.

Samples per record

Enter the number of samples points per record per channel.

Enable single-ported memory

Check this radio button for the system to acquire samples to on-board memory and then, once the acquisition is complete, transfer the sample data to host memory.

Records per acquisition

Enter the number of records in each acquisition. The board system acquires this number of records to on-board memory without intervention from the host PC. The minimum value is 1 and the maximum value is board dependent.

Enable HyperDisp

Check to enable **HyperDisp** transfers from on-board to host memory. When enabled, the board's firmware pre-processes sample data into a form that reduces the amount of data that is transferred over the PCI / PCIe bus, and that must be further processed for display by host software.

Enable dual-ported memory

Check this radio button to enable the system to acquire samples to on-board memory at the same time that data from the previous acquisition is transferred from on-board to host memory. Note that this option is available only if the boards in your board system have optional dual ported memory.

Records per buffer

In dual-ported memory mode, an acquisition is split into DMA transfers that move sample data from on-board to PC host memory while, at the same time, on-board memory is filled with acquisition data.

Enter the size of each DMA transfer in records that will be moved from on-board to host memory with each DMA transfer. The minimum value is 1, the maximum is the number of records in an acquisition, and the value must be a factor of the records per acquisition.

Buffers per acquisition

In dual-ported memory mode, the total number of records per acquisition is the product of the records per buffer and the buffers per acquisition. Enter the number of number of buffers per acquisition.

Options

Press this button to display the **AutoDMA Options** dialog box, which allows you to configure dual-ported memory acquisition and data transfer settings.

Waveform type

AlazarDSO can process sample records into waveform records before displaying the waveform record on screen. Select a waveform type from the combo box.

- **Sample**
Each waveform point corresponds to one sample point from an acquisition record.
- **Average**
Each waveform point is the average of the samples points from a number of consecutive records in a multi-record acquisition.

Records per waveform

Enter the number of acquisition records used to calculate one average record.

Note that in single-ported memory mode, the number of records must be less than or equal to the number of records per acquisition, and must be evenly divisible into the number of records per acquisition.

In dual-ported memory mode, the number of records per waveform must be less than or equal to the number of records per buffer, and must be evenly divisible into the number of records per buffer.

Acquire until stop button pressed

Check this radio button to continue acquiring data until you press the **Stop** acquisitions button at the top-right of the main window.

Acquire until number of acquisitions completed

Check this radio button to stop acquiring data automatically after the specified number of acquisitions have completed.

Number of acquisitions

Enter the number of acquisitions to complete before automatically stopping data acquisition.

OK

Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

2.3.8 Configure Horizontal

Figure 33. Configure Horizontal dialog box

Configure Horizontal

Trigger Position

Trigger delay: 0.000000000 sec

Position in record (%): 50

Pre-trigger samples: 4096

Clock Source

☒ Internal

☒ Automatically set sample rate

☐ Select sample rate

Sample rate: 500 MS/s

☐ External

Clock type: Fast AC

Frequency (MHz): 10

Decimation: 1

Edge: Rising

Level (%): 58

Dummy clock: Disable

On time (ns): 1280

Off time (ns): 1280

OK Cancel Apply

The Configure Horizontal dialog box allows you to control timebase and time delay parameters.

Trigger delay

Enter the delay, in seconds or samples, between a trigger event and the trigger position in a within a record.

Position in record

Enter the trigger position in a record as percent of the record width.

Pre-trigger samples

This control displays the number of pre-trigger samples per record. Note that the number of pre-trigger samples is rounded so that it is a multiple of 64 samples.

Internal clock source

Check this radio button to enable the board's internal crystal oscillator as the timebase clock.

- **Automatically set sample rate**

Check the radio button to allow the software to automatically select a sample rate based on the current number of samples per record, and the time per horizontal division.

- **Select sample rate**

Check this radio button to select a sample rate from the sample rate combo box.

External clock source

Check this radio button to use an external clock as the timebase clock.

Note that you should select this option only if your board has the optional external clock input, and you have connected a suitable external clock signal to this input.

- **Frequency**

Enter the nominal frequency of the external clock signal in megahertz.

Note that this value is used to scale sample values for display and, if the *10 MHz PLL* external clock source is selected, to set the sample clock frequency.

- **Decimation**

Enter a for the programmable clock divider.

- **Edge**

Select the rising or falling edge as the active edge of the external clock from the edge combo box.

- **Level (%)**

Select the external clock threshold level as a percent of full range input.

Dummy clock

The dummy clock option enables the digitizer to use an internally generated clock signal to drive its ADCs at specified times during an acquisition. Scanning applications should consider using this “dummy clock” if they generate an unusable external clock signals during the horizontal retrace intervals between scans.

- **Disable**

Use the external clock signal to clock the ADCs.

- **Timer**

Use an internally generated clock signal to clock the ADCs for a specified interval after the end of each record. At the end of the dummy clock on-time, switch back

to using the external clock signal. See “on-time” below.

- **External trigger**

Use the external clock signal when the external trigger signal is high, and the internally generated replacement clock when the external trigger signal is low.

- **Timer on – timer off**

Use an internally generated clock signal to clock the ADCs for a specified interval after the end of each record. At the end of the dummy clock on-time, switch back to the using the external clock signal for the specified amount of time. See “on-time” and “off-time” below.

On-time

When “timer” or “timer on – timer off” dummy clock mode is selected, specify the dummy clock on-time in nanoseconds.

The digitizer will switch to the dummy clock at the end of each record, and use the dummy clock for this amount of time. After the dummy clock on-time interval, the digitizer will switch back to using the external clock signal.

The on-time should be selected so that it is longer than the amount time that external clock signal is unstable. It must not be longer than the time between the end of one scan-line, and the trigger to capture the next scan-line.

On-time

When “timer on – timer off” dummy clock mode is selected, specify the dummy clock off-time in nanoseconds.

OK

Press this button to save the current settings, and close this dialog box.

Cancel


Press this button to discard any changes and close this dialog box.

Apply

Press this button to apply the current settings without closing the dialog box.

2.3.9 Configure Input

Figure 34. Configure Input dialog box

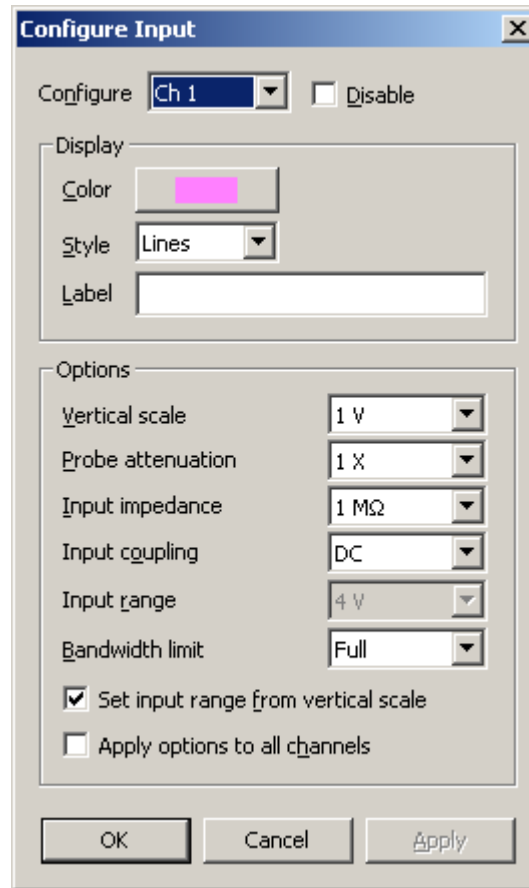

The **Configure Input** dialog box allows you to change display and hardware settings of an input channel.

Note that AlazarDSO identifies input channels as follows in a board system with 2 analog inputs channels per digitizer:

Table 2-7. Input channel labels

Name	Board ID	I/O Connector
Ch 1	1	A
Ch 2	1	B
Ch 3	2	A
Ch 4	2	B
Ch 5	3	A
Ch 6	3	B
Ch 7	4	A
Ch 8	4	B
Ch 9	5	A

Ch 10	5	B
Ch 11	6	A
Ch 12	6	B
Ch 13	7	A
Ch 14	7	B
Ch 15	8	A
Ch 16	8	B

AlazarDSO identifies input channels as follows in a board system with 4 analog input channels per digitizer:

Table 2-8. ATS9440 input channel labels

Name	Board ID	I/O Connector
Ch 1	1	A
Ch 2	1	B
Ch 3	1	C
Ch 4	1	D
Ch 5	2	A
Ch 6	2	B
Ch 7	2	C
Ch 8	2	D
Ch 9	3	A
Ch 10	3	B
Ch 11	3	C
Ch 12	3	D
Ch 13	4	A
Ch 14	4	B
Ch 15	4	C
Ch 16	4	D

Configure

This combo box shows the currently selected input channel. To configure another input channel, select the channel from the combo box.

Disable

Check this box to disable the transfer and display of data from this channel. Note that the channel may still be used by the trigger system depending on this board's trigger configuration.

Color

This button displays the color used to draw the channel's marker, waveform, and vertical scale in the graticule, and in the tab in the input channel tab control. Press this button to display **Color** dialog box to select another color.

Style

Select a display style to use when drawing this channel's waveform.

- Select **Points** to draw each waveform sample as a single pixel.
- Select **Lines** to draw line segments between waveform points.
- Select **Lines with points** to draw line segments between waveform points, and markers at each point.
- Select **Wide lines** to draw wide line segments between waveform points.
- Select **Extra-wide lines** to draw very wide line segments between waveform points.

Label

Enter a text label to associate with this channel. The text is displayed in the channel marker ToolTip, and in the channel tab control. The label can be up to 20 characters.

Vertical scale

Select a value in volts per vertical division from the combo box. This value is used to scale sample values when drawing the channel's waveform.

Probe attenuation

Select a value from the combo box that matches the ratio by which this channel's probe attenuates input signals. AlazarDSO uses this value to scale waveforms to their size before attenuation by the probe.

Input impedance

Select a value in Ω from the combo box. The value is used to select the programmable input impedance of the input channel.

Input coupling

Select a coupling value from the combo box. The value is used to select the programmable coupling of the input channel.

Input range

Select the input range at the channel IO connector from the combo box.

The input range at the probe is this value multiplied by the probe attenuation. Note that this combo box is disabled when the **Set input range from vertical scale** button is checked.

Bandwidth limit

Select a bandwidth limit from the combo box. Note that this combo box is disabled when boards in the current board system don't have a programmable bandwidth limit.

Set input range from vertical scale

Check this box to allow AlazarDSO to automatically select the input range from the current vertical scale value. If checked, AlazarDSO selects an input range greater than or equal to four vertical divisions at the current vertical scale, if possible.

Apply options to all input channels

Check this box to apply the following options to all input channels, not just the currently selected channel, when you press the OK or Apply buttons.

- disabled state
- set input range from vertical scale value
- vertical scale value
- probe attenuation value
- input range value
- input impedance value
- input coupling value

OK

Press this button to apply changes to the configuration of the selected channel, save the position of the dialog box on screen, and close the dialog box.

Cancel


Press this button to discard any changes and close this dialog box.

Apply

Press this button to apply changes to the configuration of the currently selected channel immediately.

2.3.10 Configure Math

Figure 35. Configure Math dialog box

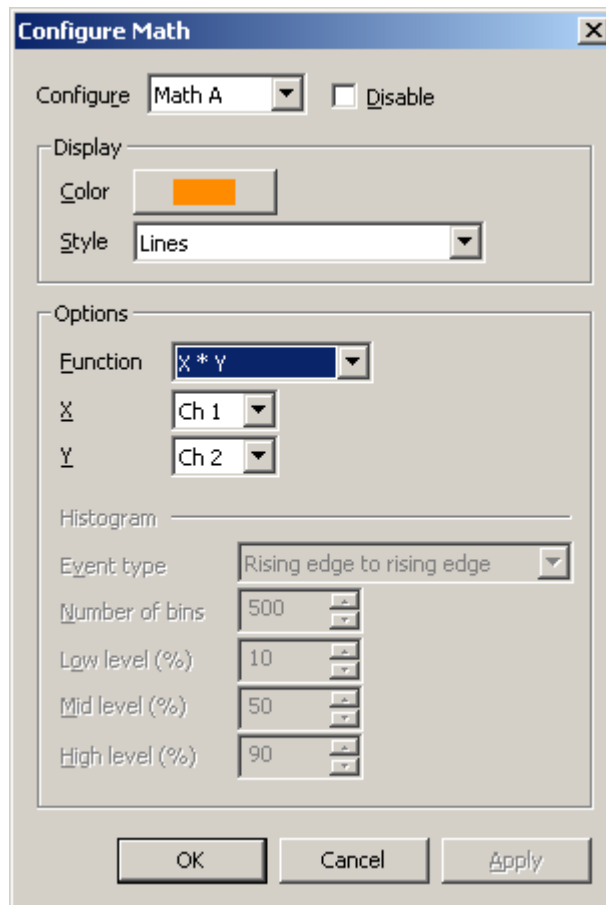

The **Configure Math** dialog box allows you to select the function, function parameters, and display properties of a math channel.

Configure

This combo box shows the currently selected math channel. To configure another math channel, select the channel from the combo box.

Disable

Check this button to disable the calculation and display of this math channel.

Color

This button displays the color used to draw the channel's waveform and vertical scale in the main window. Press the button to display **Color** dialog box and select another color.

Style

Select a display style to use when drawing this channel's waveform points.

- Select **Points** to draw each waveform sample as a single pixel.
- Select **Lines** to draw line segments between waveform samples.

- Select **Lines with markers** to draw line segments between waveform points, and markers at each point.
- Select **Wide lines** to draw wide line segments between waveform points.
- Select **Extra-wide lines** to draw very wide line segments between waveform points.

Function

Select a math function from the function combo box.

The available math functions are:

- **X + Y**
Display the sum of two input waveforms
- **X – Y**
Display the difference between two input waveforms
- **X * Y**
Display the product of two input waveforms
- **Histogram**
Calculate the times between events in an input waveform, and display the result in the form of a histogram.
- **LSB 0**
Display the least-significant bit of each sample in an input waveform.
- **LSB 1**
Display the second least-significant bit of each sample in an input waveform.

X

Select one of the two operands for the sum, product, or difference functions, or the one operand for the FFT or Histogram functions from the list of input channels.

Y

Select the second operand for the sum, product, or difference functions from the list of input channels. Note that this combo box is disabled if the selected function takes only one operand.

Event type

Select an event type from the combo box. AlazarDSO calculates the times between all events of this type in a waveform, groups these times into time ranges, finds the number of events in each range, and displays the result in the form of a histogram.

The software calculates the peak-to-peak amplitude of the waveform and assumes that:

- A rising edge is a transition from below to above the mid level.

- A falling edge as a transition from above to below the mid level.
- The rise time is the time required for a transition from below the low level to above the high level.
- The fall time is the time required for a transition from above the high level to below the low level.

The available event types are:

- **Rising edge to rising edge**
Find the times between a rising edge and the next rising edge in the waveform.
- **Falling edge to falling edge**
Find the times between a falling and the next falling edge in the waveform.
- **Rising edge to falling edge**
Find the times between a rising edge and the next falling edge in the waveform.
- **Falling edge to rising edge**
Find the times between a falling edge and the next rising edge in the waveform.
- **Edge to edge**
Find the times between a rising or falling edge, and the next rising or falling edge in the waveform.
- **Rise time**
Find the times for transitions from low to high level in the waveform.
- **Fall time**
Find the times for transitions from high to low level in the waveform.

Number of bins

Select the number of bins into which you would like to group the event times. The width of each bin in the histogram is the total time of the waveform divided by this number of bins.

Low level

Select the low level as a fraction of the waveform's peak-to-peak amplitude.

Mid level

Select the mid level as a fraction of the waveform's peak-to-peak amplitude

High level

Select the high level as a fraction of the waveform's peak-to-peak amplitude

OK

Press this button to apply the current settings, save the position of the dialog box on screen, and close the dialog box.

Cancel


Press this button to discard any changes and close this dialog box.

Apply

Press this button to apply changes to the configuration of the currently selected channel immediately.

2.3.11 Configure Plugins

Figure 36. Configure Plugins dialog box

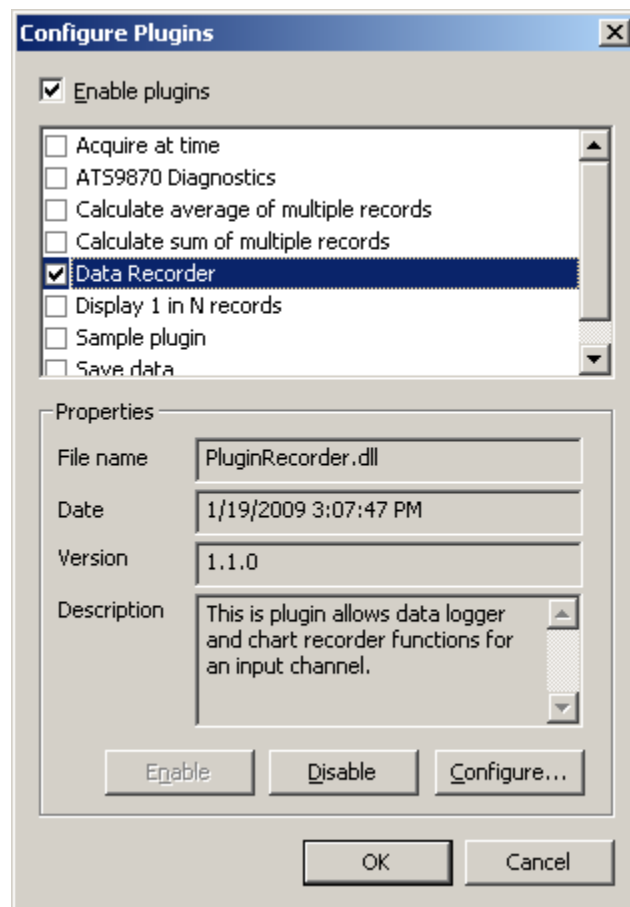

The **Configure Plugins** dialog box allows you activate the plugin interface, and enable one or more plugin modules.

Enable plugins

Check this button to activate the plugin interface. When checked, the program sends several messages to each enabled plugin modules during every acquisition cycle.

Plugin list

This list box displays the name of all of the plugin modules found at program startup. Enabled plugin modules are displayed with check mark to the left of their names.

- Left click on a plugin name to select a plugin module from the list.
- Left click on a check box to enable or disable the selected plugin module.
- Double click with the left mouse button to both select a plugin module, and display its configuration dialog box.

Note that AlazarDSO searches for plugin modules in the following directories on program startup.

- “%Program Files%\AlazarTech\AlazarDSO\Plugins”
- “%My Documents%\AlazarTech\Plugins”.

If you add or remove a plugin module, you must restart AlazarDSO to see the changes in the plugin list.

File name

This text displays the file name of the selected plugin module.

Date

This text displays the modification date and time of the selected plugin.

Version

This text displays the version information of the selected plugin.

Description

This text displays a brief description of the selected plugin.

Enable

Press this button to enable the selected plugin.

Disable

Press this button to disable the selected plugin.

Configure

Press this button to display the configuration dialog box of the selected plugin, if supported by the plugin.

OK

Press this button to save the current settings, and close this dialog box.


Cancel

Press this button to discard any changes and close this dialog box.

2.3.12 Configure Preferences

The **Configure Preferences** dialog box allows you to select the user interface language and general display properties of the program.

Figure 37 Configure Preferences dialog

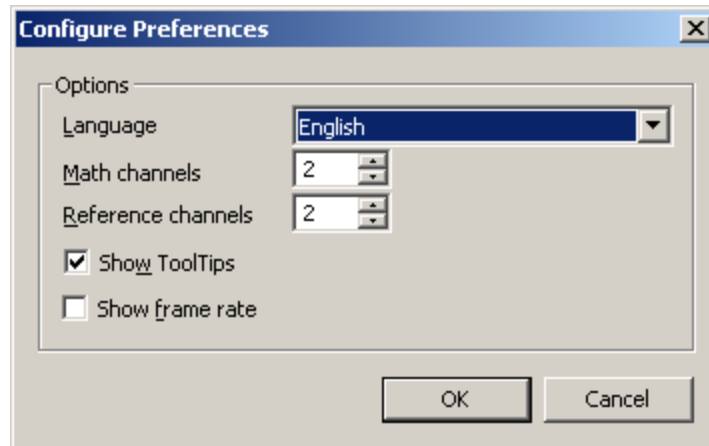

Language

Select a language from the list of available languages. AlazarDSO displays its user interface in this language. Note that to display the user interface in a Far Eastern language on a computer running Microsoft Windows 2000 or Windows XP, you must first install support for East Asian languages. Refer to the following link for instructions if you are using Windows 2000:

<http://www.microsoft.com/globaldev/handson/user/2kintl supp.msp x>

Refer to the following link for Windows XP or Windows 2003 Server:

<http://www.microsoft.com/globaldev/handson/user/xpintl supp.msp x#E4>

Math channels

Enter the maximum number of math channels available for use. The minimum is 1, and the maximum is 8.

Reference channels

Enter the maximum number of reference channels available for use. The minimum is 1, and the maximum is 8.

Show ToolTips

Check this button to enable the display of ToolTips in the main window when you hover the mouse over a control. The ToolTip shows a brief description of the purpose of the control.

Note that waveform ToolTip windows in the graticule area are always enabled, independent of this setting.

Show frame rate

Check this button to show the number of screen updates per second in the top left corner of the graticule area.

OK


Press this button to save the current settings and close this dialog.

Cancel

Press this button to discard the current settings and close this dialog.

2.3.13 Configure Reference

Figure 38. Configure Reference dialog box

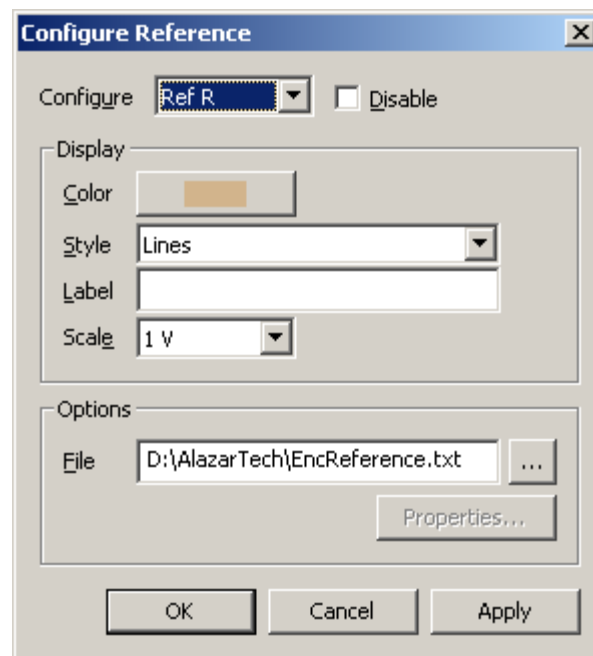

The **Configure Reference** dialog box allows you to select the file and display properties of a reference channel.

Configure

This combo box shows the currently selected reference channel. To configure another reference channel, select the channel from the combo box.

Disable

Uncheck this box to enable the display the selected file as reference channel.

Color

This button displays the color used to draw the channel's waveform and vertical scale in the main display area. Press the button to display **Color** dialog box and change this color.

Style

Select a display style to use when drawing the channel's waveform points.

- Select **Points** to draw each waveform sample as a single pixel.
- Select **Lines** to draw line segments between waveform samples.
- Select **Lines with markers** to draw line segments between waveform samples, and markers at each sample point.
- Select **Wide lines** to draw wide line segments between waveform points.
- Select **Extra-wide lines** to draw very wide line segments between waveform points.

Label

Enter a text label to associate with this channel. The text is displayed in the channel marker ToolTip, and in the channel tab control. It can be up to 20 characters.

File

Enter the full path to a file, or press the "..." button to display a file chooser dialog and select a file from the list control.

Supported file types are:

- AlazarTech text and binary records.
- APIPanel text and binary records saved with or without headers.
- FlexPro® records saved as text or samples.
- MATLAB® 2-D numerical arrays with no imaginary component.
- ASCII text files with one value per line per entry in volts or samples
- Binary files with one or two bytes per sample.

Properties

Press this button to display the Import File dialog box in order to view and modify the file's properties.

OK

Press this button to apply the current settings, save the position of the dialog box on screen, and close the dialog box. When this button is pressed, AlazarDSO loads the file, validates its contents, and prompts for any missing parameters if necessary.

Cancel


Press this button to discard any changes and close this dialog box.

Apply

Press this button to apply changes to the configuration of the currently selected channel immediately.

2.3.14 Configure Simulator

Figure 39. Configure Simulator dialog box

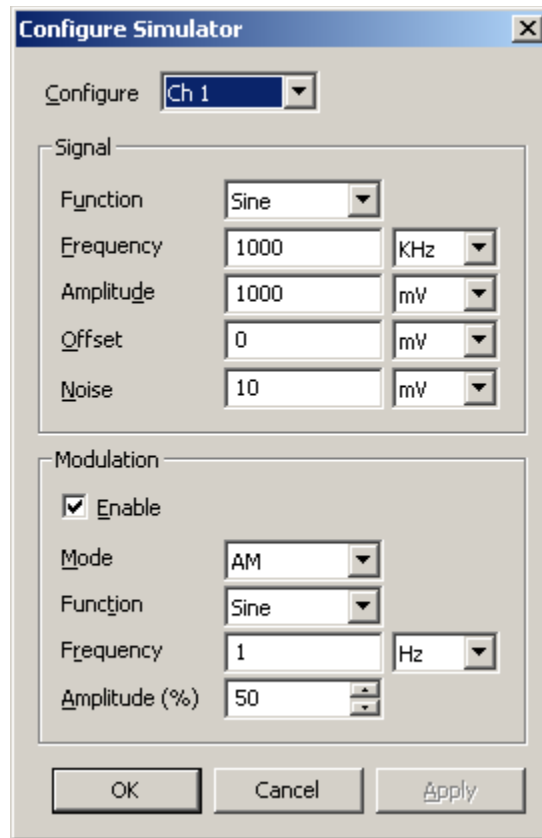

The **Configure Simulator** dialog allows you to control how AlazarDSO generates waveforms in simulation mode.

Configure

Select the simulator channel that you wish to configure from the list.

Signal Function

Select a function from the list. The available functions are: Sine, Square, Ramp, or Triangle.

Signal Frequency

Enter the frequency of the simulated input signal in the selected units.

Signal Amplitude

Enter the peak-to-peak voltage of the simulated input signal in the selected units.

Signal Offset

Enter the DC offset voltage of the simulated input signal in the selected units.

Signal Noise

Enter the maximum amplitude of the noise added to the simulated input signal in the selected units.

Modulation

Check this box to enable modulation of the simulated input signal.

Modulation Mode

Select a modulation mode from the combo box. AlazarDSO can modulate the signal amplitude, frequency, or period as a function of time.

Modulation Function

Select a modulation function from the combo box. This value defines how the modulation changes with time.

Modulation Frequency

Enter the frequency of one modulation cycle in the selected units.

Modulation Amplitude

Enter the relative modulation amplitude as a fraction in percent of the signal amplitude.

OK

Press this button to apply and save the current settings, and close the dialog box.

Cancel


Press this button to discard the current settings and close the dialog box.

Apply

Press this button to apply the current settings immediately

2.3.15 Configure System

Figure 40. Configure System dialog box

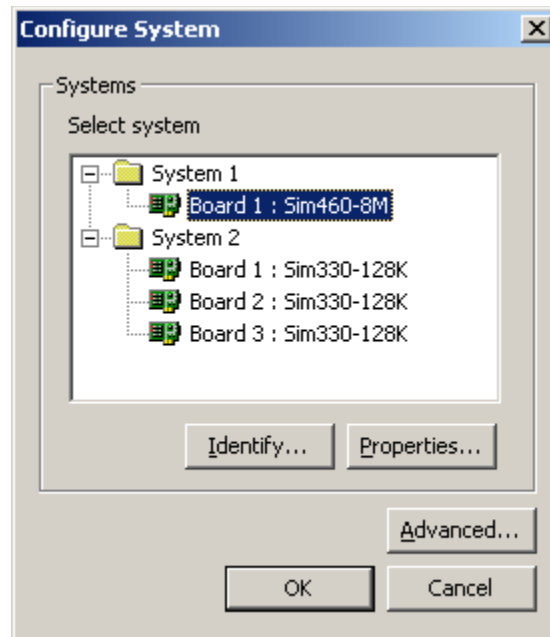

The **Configure System** dialog box allows you to select the current board system from all the available board systems, identify boards and view their properties, and change advanced settings.

Identify

Display the **Identify Board** dialog box. The **Identify** button is enabled when you select a board from the tree control.

Properties

Display the **System Properties** dialog box if board system is selected from the tree control, or the **Board Properties** dialog box a board is selected.

Advanced

Display the **Advanced Options** dialog box. These options control memory usage and internal program operation.

OK

Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

2.3.16 Configure Trigger

Figure 41. Configure Trigger dialog box

The screenshot shows the 'Configure Trigger' dialog box. It is organized into several sections. At the top, 'Board ID' is set to '1' and 'Trigger Engine' is set to 'J Only'. Below this, the 'Engine J' section is active, showing 'Source' as 'Channel A', 'Slope' as 'Rising', 'Level (%)' as '0', and 'Level (V)' as '0 V'. A 'Sweep...' button is next to the level settings. The 'Engine K' section is also visible but its 'Level (V)' field is empty. The 'External' section shows 'Range' as '1 V' and 'Coupling' as 'DC'. The 'Trigger enable' section has an unchecked checkbox for 'Enable trigger enable', 'Slope' as 'Rising', 'Direction' as 'Input', and a 'Force' button. The bottom of the dialog features 'OK', 'Cancel', and 'Apply' buttons.

The Configure Trigger dialog box allows you to control a board's trigger parameters.

Board ID

Select the board from all the boards in the current board system whose trigger parameters you wish to modify.

Trigger Engine

Select a logical combination of the two trigger engines from the list box.

The logical combinations of trigger engines are:

- J only
- K only

- J OR K
- J AND K
- J XOR K
- J AND NOT K
- NOT J AND K

Engine J Source

Select the source for trigger engine J. The available options are:

- Input channel A
- Input channel B
- External trigger input
- Disabled

Engine J Slope

Select the active edge of the trigger engine J from the slope combo box.

Engine J Level (%)

Enter the trigger level for engine J as a percent of the full range input voltage.

Note that engine J source, slope, and level settings are only active if trigger engine J is one of the trigger engines in the logical combination of trigger engines selected.

Engine J Level (V)

This control displays the current trigger level in volts of engine J.

Sweep (Engine J)

Press this button to display the **Trigger Sweep** dialog box and perform an automated trigger level sweep test of trigger engine J.

Engine K Source

Select the source for trigger engine K. The available options are:

- Input channel A
- Input channel B
- External trigger input
- Disabled

Engine K Slope

Select the active edge of the trigger engine K from the slope combo box.

Engine K Level

Enter the trigger level for engine K as a percent of the full range input voltage.

Note that engine K source, slope, and level settings are only active if trigger engine K is one of the trigger engines in the logical combination of trigger engines selected.

Engine K Level (V)

This control displays the current trigger level in volts of engine K.

Sweep (Engine K)

Press this button to display the **Trigger Sweep** dialog box and perform an automated trigger level sweep test of trigger engine K.

External Range

Select the programmable input range of the external trigger signal from the range combo box.

External Coupling

Select the external clock coupling from the coupling combo box.

Note that the external trigger range and coupling settings are only enabled if either engine J source or engine K source is an external trigger.

Enable trigger enable

Check this box to configure the AUX I/O connector on your board as a trigger enable input or output. When this option is enabled and you start an acquisition, the board will not trigger until you supply a pulse on the AUX I/O connector.

Trigger enable slope

Select the active edge of the trigger enable pulse from the slope combo box.

Trigger enable direction

Select the direction of signals on the AUX I/O connector. Options are: input, or output.

- **Input**
Select “input” to configure the AUX I/O connector to receive trigger enable pulses. When the board receives the specified edge of a trigger enable pulse, it arms itself to wait for sufficient trigger events to fill one AutoDMA buffer. The application must supply suitable “trigger enable” pulses to the AUX connector.
- **Output**
Select “output” to enable trigger enable mode, but configure the AUX I/O connector as a trigger output signal. Software must call `AlazarForceTriggerEnable` when it wishes to arm to wait for sufficient trigger events to fill one AutoDMA buffer.

Force

Generate a software trigger enable event. This enables a board to wait for sufficient trigger events to complete one AutoDMA buffer.

OK

Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

Apply


Press this button to apply the settings to the selected board without closing the dialog box.

2.3.17 Configure View

The **Configure View** property sheet allows you to control the appearance of the data display views.

2.3.17.1 Oscilloscope View

Figure 42. Configure Oscilloscope View property page

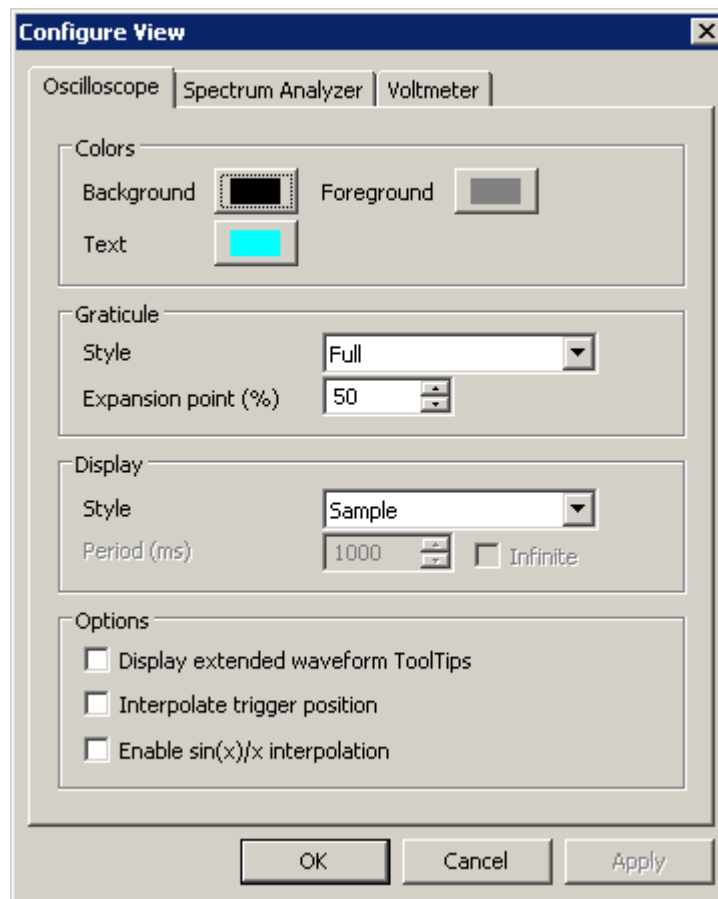

The **Oscilloscope** property sheet page allows you to control the appearance of the main window when you select **Oscilloscope** from the **View** menu.

Background

This button shows the color used to fill the background of the graticule area. Press the button to display a color chooser dialog box and select another color.

Foreground

This button shows the color used to draw grid lines, inactive text, and the horizontal scroll bar in the graticule area. Press the button to display a color chooser dialog box and select another color.

Text

This button shows the color used to draw cursors, horizontal cursor text, active text, and the horizontal scale. Press the button to display a color chooser dialog box and select another color.

Graticule Style

Select a style from the style list box to control how the grid lines are drawn in the graticule. The available styles are:

- **Full**
Select this style to draw the outer frame using solid lines with dotted lines between divisions, and hash marks within each division.
- **Grid solid**
Select this style to draw the outer frame and lines between divisions using solid lines.
- **Grid dotted**
Select this style to draw the outer frame and lines between divisions using dotted lines.
- **Cross hairs**
Select this style to draw the small cross hairs at the intersection of vertical and horizontal divisions.

Expansion point

Enter the position of the expansion point as fraction in percent of the graticule width from the left edge of the graticule.

Display style

Select a style from the combo box to control how the waveforms are drawn in the graticule area. The available styles are:

- **Sample**
Draw the current waveform after erasing the previous waveform.
- **Accumulate**
Draw the current waveform on top of the previous waveform. Erase the waveforms when the accumulate time has elapsed or a change is made to any waveform's vertical position, vertical scale, or horizontal scale.

Accumulate time

Enter the period in milliseconds to accumulate waveforms. Note that this control is enabled only when the oscilloscope **Accumulate** display style is selected.

Display extended waveform Tooltips

Check this box to add the following information about the sample under the mouse pointer to a waveform ToolTip:

- The number of samples from the start of acquisition
- The number of samples from the trigger position in the acquisition.
- The number of samples per column on the screen.

Interpolate trigger position

Check this box to enable AlazarDSO to correct for jitter caused by trigger events occurring between samples points in a record. When enabled, the program calculates the actual sub-sample trigger position within a record, and draws waveforms shifted horizontally as required to correct for the sub-sample error.

Enable sin(x)/x interpolation

Check this box to enable AlazarDSO to display sin(x)/x interpolated curves between sample points. Uncheck this box to display line segments between sample points.

Note that when sin(x)/x interpolation is enabled, AlazarDSO may not be able to display the first few samples at the start of a record, and the last few samples at the end of a record.

OK

Press this button to save the current settings and close this dialog.

Cancel


Press this button to discard the current settings and close this dialog.

Apply

Press this button to apply changes to the view immediately.

2.3.17.2 Spectrum Analyzer View

Figure 43 Configure Spectrum Analyzer View property page

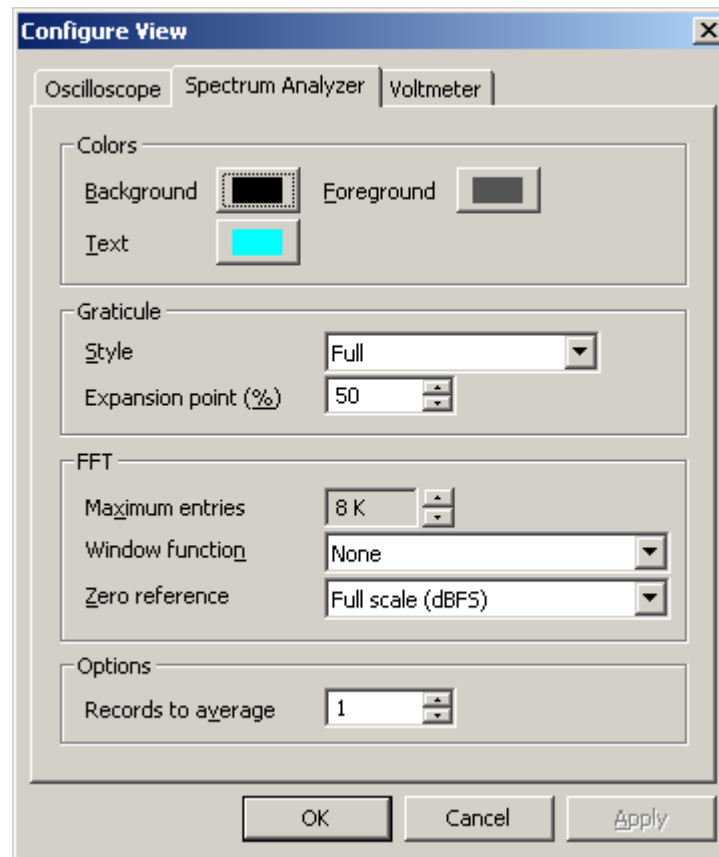

The **Spectrum Analyzer** property sheet page allows you to control the appearance of the main window when you select **Spectrum Analyzer** from the **View** menu.

Background

This button shows the color used to fill the background of the graticule area. Press the button to display a color chooser dialog box and select another color.

Foreground

This button shows the color used to draw grid lines, inactive text, and the horizontal scroll bar in the graticule area. Press the button to display a color chooser dialog box and select another color.

Text

This button shows the color used to draw cursors, horizontal cursor text, active text, and the horizontal scale. Press the button to display a color chooser dialog box and select another color.

Graticule Style

Select a style from the style list box to control how the grid lines are drawn in the graticule. The available styles are:

- **Full**
Select this style to draw the outer frame using solid lines with dotted lines between divisions, and hash marks within each division.
- **Grid solid**
Select this style to draw the outer frame and lines between divisions using solid lines.
- **Grid dotted**
Select this style to draw the outer frame and lines between divisions using dotted lines.
- **Cross hairs**
Select this style to draw the small cross hairs at the intersection of vertical and horizontal divisions.

Expansion point

Enter the position of the expansion point as fraction in percent of the graticule width from the left edge of the graticule.

Maximum entries

Select the maximum number of entries used to calculate an FFT. If there are fewer samples in the input record than entries, the unused entries will be zero filled. If there are more samples than entries, only this number of samples from the start of the waveform will be used in the calculations.

Window function

Select the weighting function applied to the record data before calculating the FFT.

The available window functions are:

- **None**
 $W[n] = 1$
- **Bartlett**
 $W[n] = 2n / (N-1), \quad 0 \leq n \leq (N/2) - 1$
 $W[n] = 2 - 2n/(N-1), \quad N/2 \leq n < NP$
- **Hamming**
 $W[n] = 0.5 * (1 - \cos(2 * \text{Pi} * n / (N-1)))$
- **Hanning**
 $W[n] = 0.54 - 0.46 * \cos(2 * \text{Pi} * n / (N-1))$

- **Blackman**

$$W[n] = 0.42323 - 0.49755 \cdot \cos(2 \cdot \pi \cdot n / (N-1)) + 0.07922 \cdot \cos(4 \cdot \pi \cdot n / (N-1))$$

- **Blackman-Harris**

$$W[n] = 0.35875 - 0.48829 \cdot \cos(2 \cdot \pi \cdot n / (N-1)) + 0.14128 \cdot \cos(4 \cdot \pi \cdot n / (N-1)) - 0.01168 \cdot \cos(6 \cdot \pi \cdot n / (N-1))$$

Zero Reference

Select the 0 dB reference level for the FFT display. The available options are:

- **Full scale (dBFS)**
Display power relative to a full scale input signal.
- **Maximum signal (dBc)**
Display power relative to the power of the largest harmonic in a waveform.

Records to average

AlazarDSO can accumulate the power entries from a sequence of one or more records, and display the average power from the records. Enter the number of records that the software should accumulate before displaying.

OK

Press this button to save the current settings and close this dialog.

Cancel


Press this button to discard the current settings and close this dialog.

Apply

Press this button to apply changes to the view immediately.

2.3.17.3 Voltmeter View

Figure 44 Voltmeter View property page

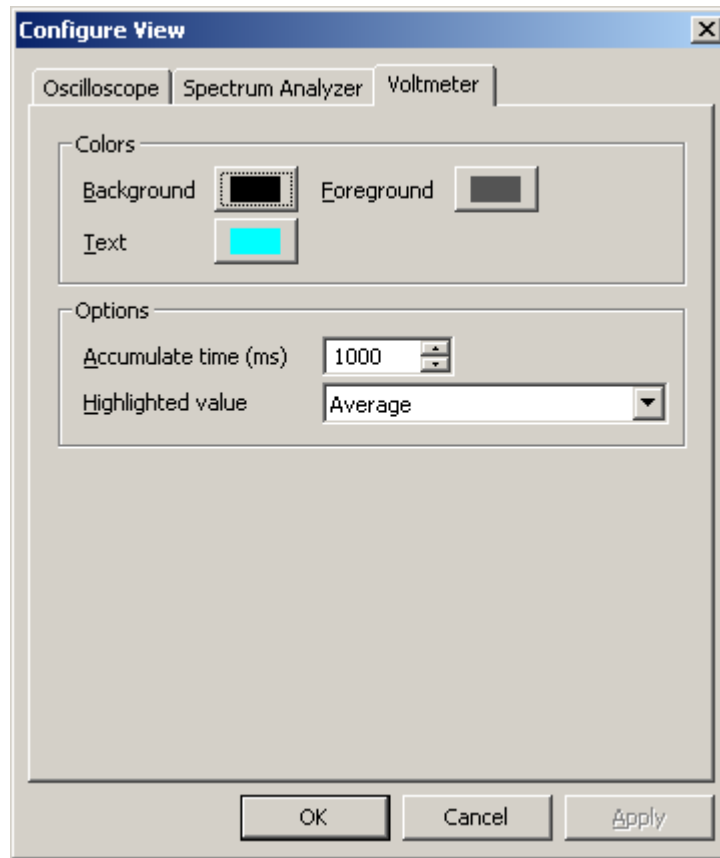

The **Voltmeter** property sheet page allows you to control the appearance of the main window when you select **Voltmeter** from the **View** menu.

Background

This button shows the color used to fill the background of the graticule area. Press the button to display a color chooser dialog box and select another color.

Foreground

This button shows the color used to draw a rectangle around each channel's text in the display area. Press the button to display a color chooser dialog box and select another color.

Text

This button shows the color used to draw active text and the horizontal scale. Press the button to display a color chooser dialog box and select another color.

Accumulate time

Enter the period in milliseconds to accumulate statistics before updating the voltmeter display.

Highlighted value

Select a value from the list to display on the right hand side of the display area using a larger font than the other values. By default, AlazarDSO highlights the RMS voltage.

OK

Press this button to save the current settings and close this dialog.

Cancel


Press this button to discard the current settings and close this dialog.

Apply

Press this button to apply changes to the view immediately.

2.3.18 Coprocessor

Figure 45 Coprocessor dialog

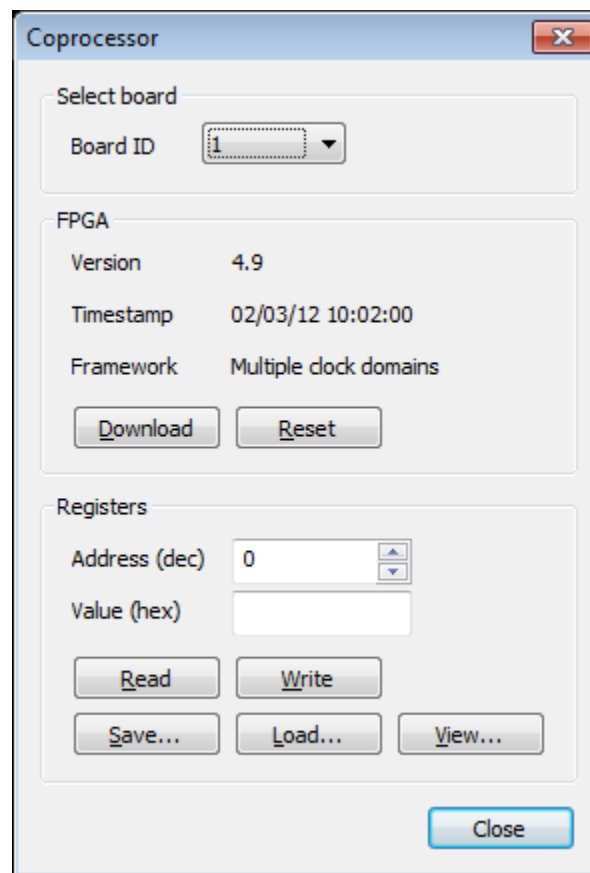

The Coprocessor dialog allows you configure and control the coprocessor of AlazarTech digitizers with user-programmable FPGAs.

Version

This read-only field displays the contents of coprocessor register 1, the version register. Its value is the coprocessor major and minor version numbers.

Timestamp

This read-only field displays the contents of coprocessor register 2 [15:0] and coprocessor register 3, the compilation timestamp.

Framework

This read-only field decodes the contents of coprocessor register 2, the CPF variant register. The following variants are currently supported:

- **Single clock domain**
The data path uses a single clock domain clocked by the ADC clock.
- **Multiple clock domains**
The data path uses FIFOs to connect multiple clock domains.

Download

Press this button to download an FPGA image to the coprocessor FPGA. The program prompts you to select an RBF (raw binary file), then downloads and configures the coprocessor FPGA with the file's contents.

Reset

Press this button to download to reset the co-processor FPGA. This button sets coprocessor register 5 (cpf_config) bit 0 to reset user circuitry.

Address

Enter the address of the coprocessor register that you wish to read from, or write to.

Value

This field allows you to enter the value that you wish to write to a coprocessor register, or displays the value read from a coprocessor register.

Read

Press this button to read the value from the specified coprocessor register address.

Write

Press this button to write the specified value to the specified coprocessor register address.

Save

Press this button to read coprocessor FPGA registers, and save their values to a text file.

Restore

Press this button to read coprocessor register values from a text file, and write these values to the coprocessor FPGA.

Note that registers are written in the same sequence as they appear in the text file. If you wish to pause before writing to a register, add a "% SLEEP n" comment at the line where you wish to pause. The sleep time (n) is specified as an integer between 0 and 9999 ms.

View


Press this button to read coprocessor FPGA registers, and display their values on screen.

Close

Press this button to save the current settings and close this dialog.

2.3.19 Digital Filter

Figure 46. Digital filter dialog box

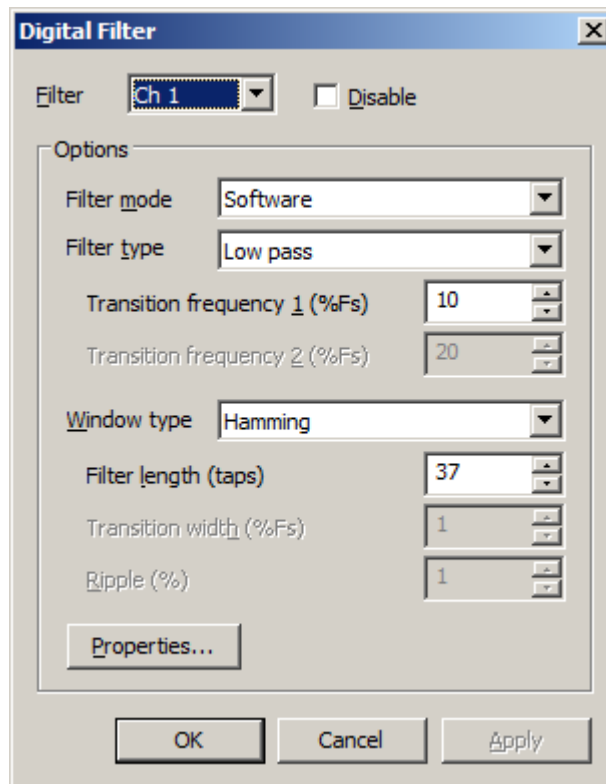

The **Digital Filter** dialog allows you to add a digital filter to the signal path of an input channel. Hardware filters are available if supported by your digitizer.

Filter channel

Select the filter associated with an input channel.

Disable

Check this box to disable the digital filter for this channel.

Filter mode

Select how to process sample data.

- **Software:**
Use CPU resources to implement FIR filters.
- **Hardware (FPGA):**
Use FPGA resources of your digitizer to calculate FIR filters if this feature is supported by your digitizer and FPGA.

Filter type

Select the frequency response of the filter.

- **Low pass**
Pass frequencies below transition frequency 1.
- **High pass**
Pass frequencies above transition frequency 1.
- **Band pass**
Pass frequencies between transition frequencies 1 and 2.
- **Band stop**
Block frequencies between transition frequencies 1 and 2.

Transition frequency 1 (%Fs)

Enter the first transition frequency of a filter as percentage of the sampling rate.

Transition frequency 2 (%Fs)

Enter the second transition frequency of a filter as percentage of the sampling rate if required.

Window type

Select the window function for the FIR filter.

- Rectangular
- Bartlett
- Hamming
- Hanning
- Blackman
- Kaiser

Filter length (taps)

Select the filter length in taps.

Transition width (%Fs)

Enter transition width of a Kaiser window a as a percentage of the sample rate.

Ripple (%)

Enter gain ripple of a Kaiser window in percent.

Properties

Press this button to display the [Filter Properties](#) dialog box to view detailed information about the current filter.

OK

Press this button to save the current settings and close this dialog.

Cancel


Press this button to discard the current settings and close this dialog.

Apply

Press this button to apply the current settings without closing this dialog.

2.3.20 Digital Filter Properties

Figure 47 Filter properties dialog box

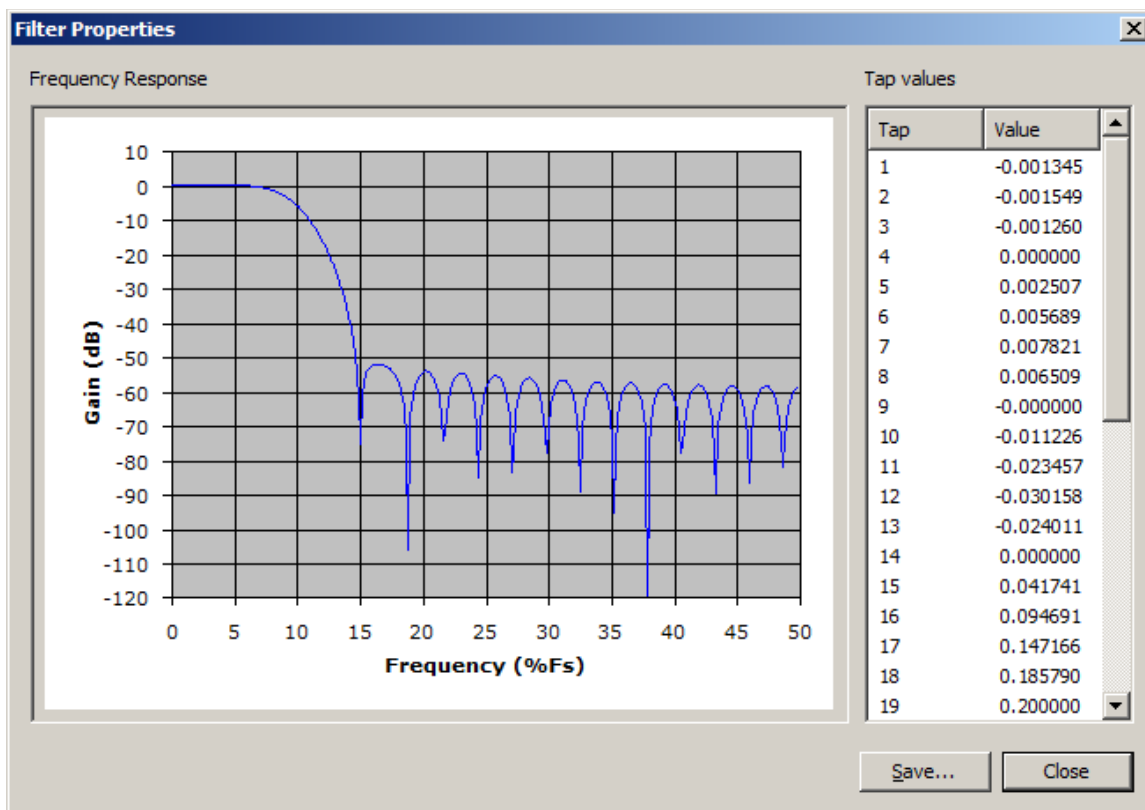

The **Digital Filter Properties** dialog displays a frequency response chart and the coefficients of the current filter configuration.

Save

Press this button to save filter data to file.

Use the “Save as type” combo box to select the data format.


- **Text**
Save filter coefficients to a text file.
- **Bitmap**
Save the frequency response chart to a bitmap file.

Close

Press this button to close this dialog.

2.3.21 Identify Board

Figure 48. Identify Board dialog box

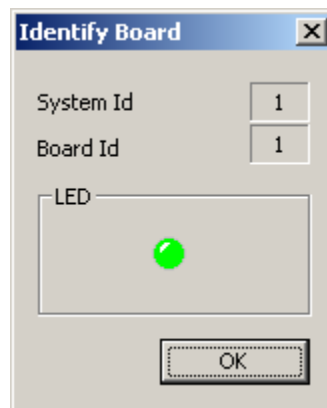

The **Identify Board** dialog allows you to physically identify a board by the LED visible on its PCI / PCIe mounting bracket. AlazarDSO flashes this LED as indicated by the icon on screen. This tool may be useful if you have several boards installed in a PC.

System Id

This is the system identifier of the selected board.

Board Id

This is the board identifier of the selected board.

LED


This is the current state of the board's LED.

OK

Press to close the dialog box.

2.3.22 Import File

Figure 49. Import File dialog box

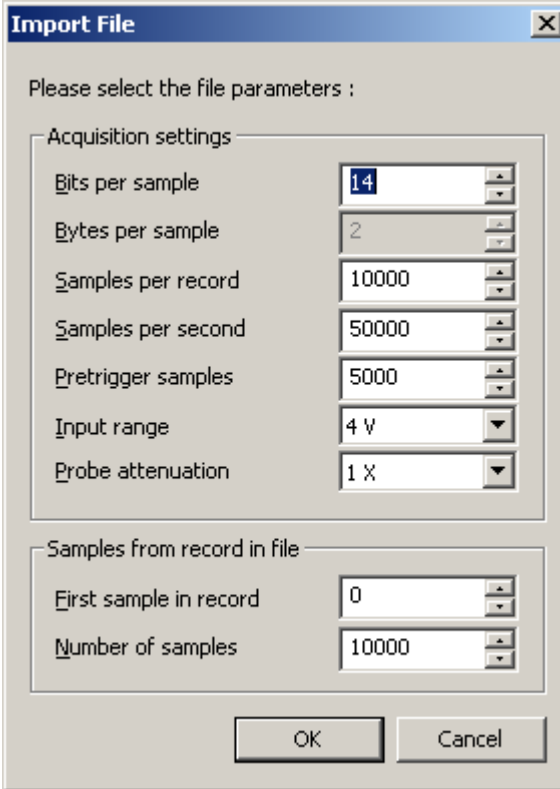The image shows a Windows-style dialog box titled "Import File". Inside the dialog, there is a text prompt "Please select the file parameters :". Below this, there are two main sections. The first section, "Acquisition settings", contains seven parameters, each with a text box and up/down arrow controls: "Bits per sample" (14), "Bytes per sample" (2), "Samples per record" (10000), "Samples per second" (50000), "Pretrigger samples" (5000), "Input range" (4 V), and "Probe attenuation" (1 X). The second section, "Samples from record in file", contains two parameters: "First sample in record" (0) and "Number of samples" (10000). At the bottom of the dialog are "OK" and "Cancel" buttons.

AlazarDSO displays the **Import File** dialog when you select **Open** from the **File** menu and select a file containing sample data in one of the following formats:

- FlexPro® records in samples
- MATLAB® arrays
- Text records in volts
- Text records in samples
- Binary records in samples

The **Import File** dialog allows you to specify the parameters needed to display a reference channel when a file does not contain these parameters.

Bits per sample

Enter the resolution of each sample in bits. AlazarTech PCI / PCIe digitizer boards have 8, 12, 14, or 16-bit resolution.

Bytes per sample

This field displays the size of each sample in bytes as calculated from the bits per sample. AlazarTech boards generate 1 or 2 bytes per sample.

Samples per record

Enter the number of samples in an entire record.

Samples per second

Enter the sample rate used to digitize the record.

Pre-trigger samples

Enter the number of samples before the trigger position in the record.

Input range

Enter the input range in volts represented by the maximum sample value.

Probe attenuation

Enter the probe attenuation factor so that AlazarDSO can scale the sample values back to their pre-probe levels.

First sample in record

If the number of sample points in the file is less than the number of samples in a record, then enter the offset of the first sample in the file from the first sample in a record.

Number of samples

Enter the number of samples points in the file.

OK


Close the dialog box and use these parameters to display the file as a reference channel.

Cancel

Close the dialog box.

2.3.23 Open

Figure 50. Open file dialog box

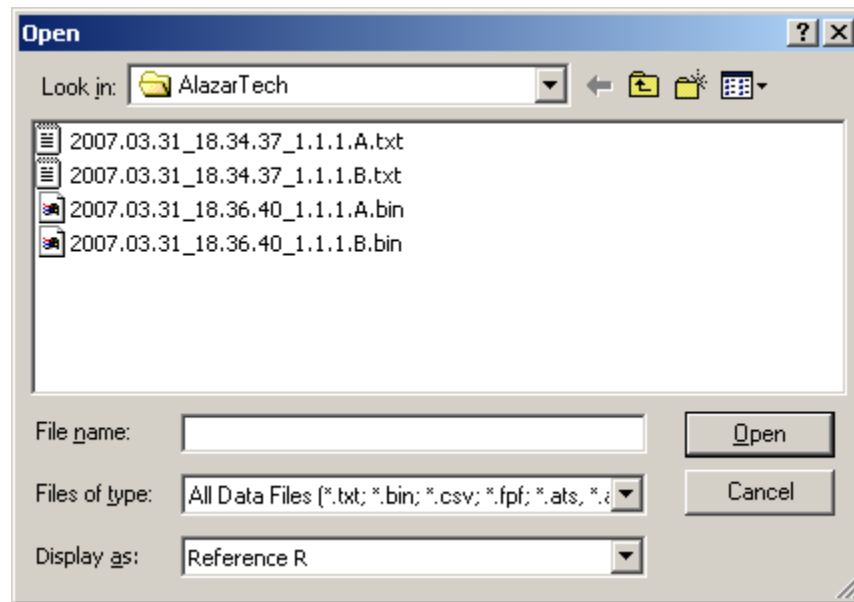

The **Open** dialog allows you to load individual record files as reference channels, or load complete acquisition files containing multiple acquisitions, multiple records per acquisition, or multiple transfers per acquisition.

File name

Enter the file name, or select one from the list control.

Files of type

Select the file type by file extension to display in the list control.

Display as

Select the reference channel where the record file will be displayed. Note that this combo box is disabled if you select a file containing multiple acquisitions, or multiple records per acquisition.

Open


Load the selected file.

Note that if the file contains a single-record then it will be loaded as the selected reference channel.

If the file contains multiple acquisitions, multiple records per acquisition, or multiple transfers per acquisition, then the program loads the first record or transfer of the first acquisition, and then displays the **Browse File** dialog to allow you to view the other records or transfers in the file.

Cancel

Press to return to the main window.

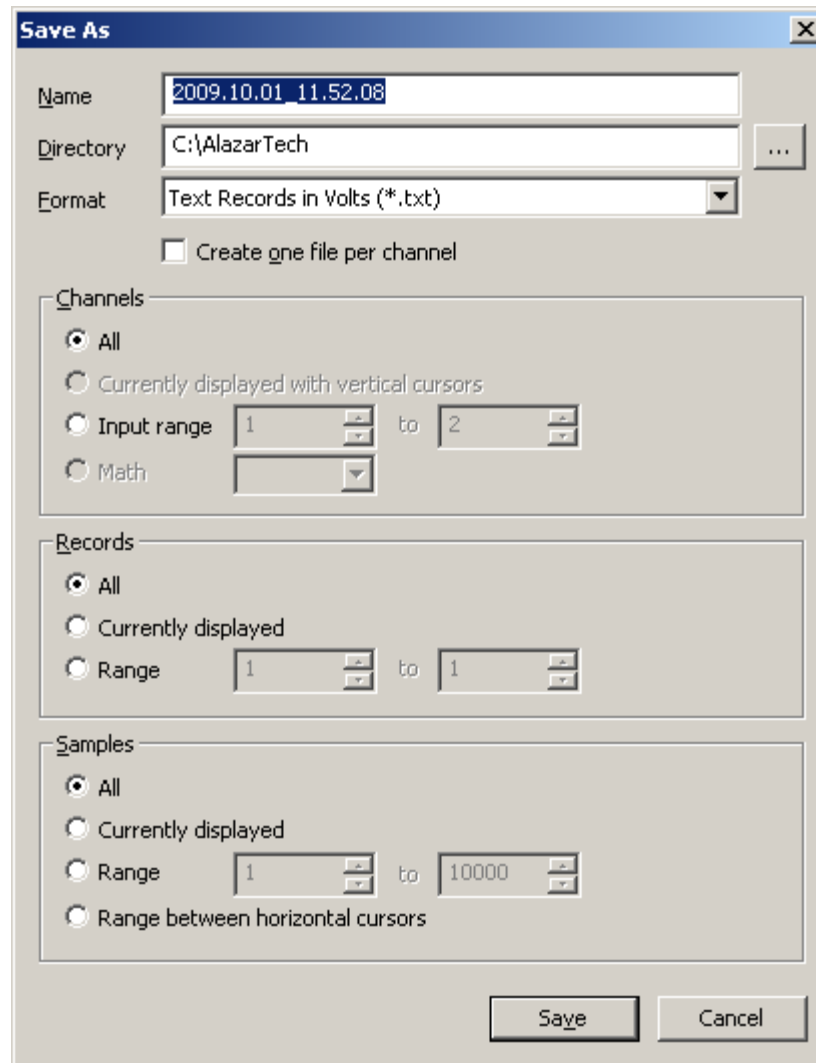2.3.24 Save As**Figure 51. Save As dialog box**

The **Save As** dialog box allows you to save an acquisition in several file formats.

File

Enter the file name. The program creates a default file name from the current date and time.

Directory

Enter the name of the directory in which to create the file (or files), or press the “...” button to display a directory chooser dialog box which will allow you to select a directory.

Format

Select a file format from the list box.

The supported file formats are:

- Text records in samples (*.txt)
- Text records in volts (*.txt)

These formats save each sample as one line of ANSI text followed by a carriage return. Aside from the sample data, no other information about the acquisition is saved in the file.

- Binary records (*.bin)

This format saves each sample as a binary value. Aside from the sample data, no other information about the acquisition is saved in the file.

- Alazar Text Records (*.txt)

This format has comma-separated parameter values and sample data saved as ANSI text. These files can be opened in text editors like Notepad, or by programs that can import comma separated value files like Microsoft Excel.

- Alazar Binary Records (*.bin)

This format has comma-separated parameter values saved as ANSI text, and sample data saved in binary form. The data in these files is not human readable, but the files require less disk space than files created text formats, and are well suited for use by software specifically written to process them.

- Alazar Acquisition Files (*.ats)

This format has comma-separated parameter values saved as ANSI text, and sample data saved in binary form. AlazarDSO creates one file containing all the records from all the channels in an acquisition. This format is useful if you wish save and later restore an entire acquisition.

- Alazar Binary Acquisition Files (*.ats)

This format saves acquisition parameters and sample data entirely in binary form. AlazarDSO creates one file containing all the records from all the channels in an acquisition. This format is useful if you wish save and later restore an entire acquisition.

- FlexPro Records in volts (*.fpf)

- FlexPro Records in samples (*.fpf)

These formats save files in a format suitable for import by FlexPro® graphing and analysis software from Weisang GmbH. The sample values are saved in volts or as ADC sample values.

- MATLAB Records in volts (*.mat)
- MATLAB Records in samples (*.mat).

These formats create MATLAB® MAT-Level 4 files. AlazarDSO creates files that contain an array of sample values, and an array of sample time values.

- Screen Capture (*.bmp)

This format saves the drawing area as a Windows bitmap file.

Please see section 4 “File Formats” below for more information about supported file formats.

Create one file per channel

Check this box to save all of records from one channel to a single file. If this box is not checked, then the program will save each record to a separate file.

Channels

Select the channels that you wish to save.

- Select the **All** radio button to save all enabled input and math channels.
- Select the **Currently displayed with vertical cursors** radio button to save the one input or math channel that is currently displaying the vertical cursors. This radio button is disabled if no input or math channel is displaying the vertical cursors.
- Select the **Input range** radio button to select a range of input channels to save.
- Select the **Math** radio button to select a math channel to save. This radio button is disabled if no math channels are enabled.

Records

Select the records in the channels that you wish to save.

- Select the **All** radio button to save all the records in the acquisition.
- Select the **Currently displayed** radio button to save the currently displayed record.
- Select the **Range** radio button to specify a range of records from each acquisition.

Samples

Select the samples in records that you wish to save.

- Select the **All** radio button to save all the samples in each record.
- Select the **Currently displayed** radio button to save the range of samples currently displayed from each record.
- Select the **Range** radio button to specify a range of samples from each record.
- Select **Range between horizontal cursors** to save the range of sample values between the horizontal cursors.

Save


Press this button to save the acquisition in the selected format. AlazarDSO displays a progress dialog while it creates the file(s).

Cancel

Close this dialog box and return to the main window.

2.3.25 Select Record

Figure 52 Select Record dialog box

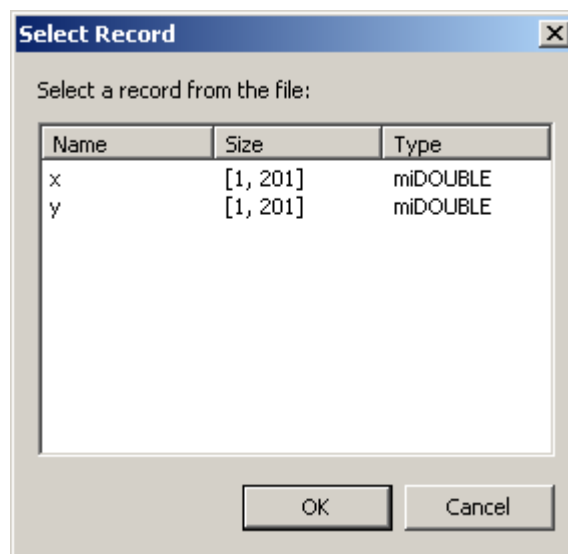

The **Select Record** dialog box allows you to select an array from all of the arrays stored in a MATLAB file to import as a reference waveform.

Record List

This list box displays the name, size, and type of all of the arrays stored in the MATLAB file. Click on a row to select an array.

OK


Close the dialog box and import the selected array.

Cancel

Close the dialog box.

2.3.26 Spectrum Information

Figure 53. Spectrum Information dialog box

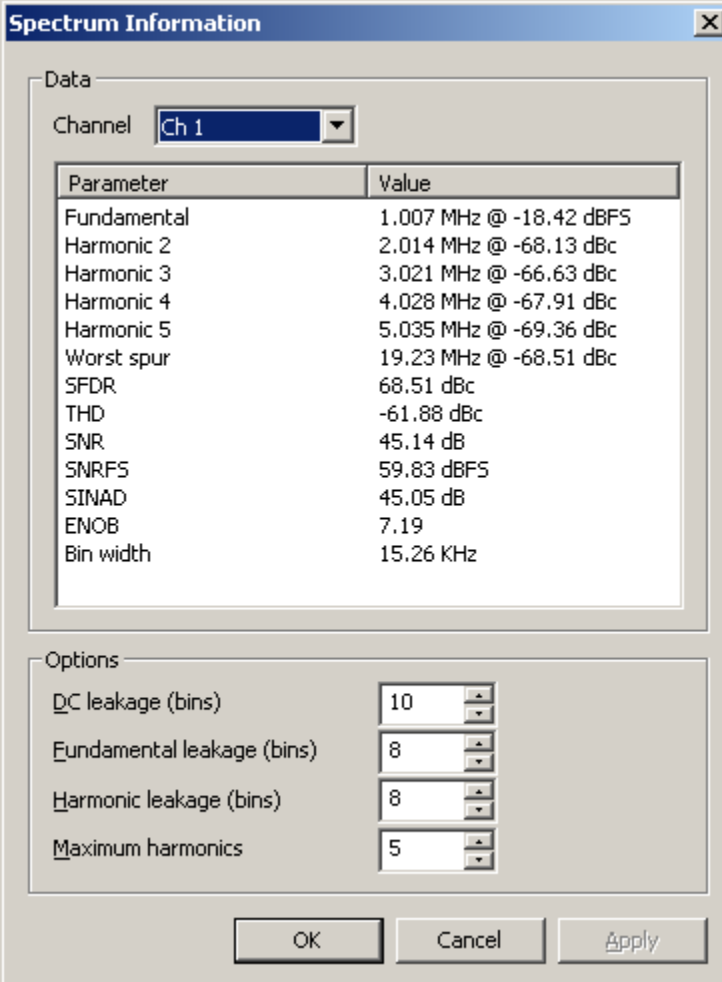

The Spectrum Information dialog box is shown with the 'Data' tab selected. It features a 'Channel' dropdown menu set to 'Ch 1'. Below this is a table with two columns: 'Parameter' and 'Value'. The table lists various spectral parameters and their corresponding values. At the bottom, there is an 'Options' section with four settings, each with a numeric input field and a dropdown arrow: 'DC leakage (bins)' set to 10, 'Fundamental leakage (bins)' set to 8, 'Harmonic leakage (bins)' set to 8, and 'Maximum harmonics' set to 5. At the very bottom are three buttons: 'OK', 'Cancel', and 'Apply'.

Parameter	Value
Fundamental	1.007 MHz @ -18.42 dBFS
Harmonic 2	2.014 MHz @ -68.13 dBc
Harmonic 3	3.021 MHz @ -66.63 dBc
Harmonic 4	4.028 MHz @ -67.91 dBc
Harmonic 5	5.035 MHz @ -69.36 dBc
Worst spur	19.23 MHz @ -68.51 dBc
SFDR	68.51 dBc
THD	-61.88 dBc
SNR	45.14 dB
SNRFS	59.83 dBFS
SINAD	45.05 dB
ENOB	7.19
Bin width	15.26 KHz

Options

DC leakage (bins) 10

Fundamental leakage (bins) 8

Harmonic leakage (bins) 8

Maximum harmonics 5

OK Cancel Apply

The **Spectrum Information** dialog box allows you to view the properties of an input, math, or reference waveform in Spectrum Analyzer view.

Channel

Select an input, math, or reference channel from the list.

Fundamental

This value displays the frequency, and amplitude relative to full-scale input, of the FFT bin with the largest value.

Harmonic N

This value displays the Nth harmonic of the fundamental frequency, and its amplitude relative to the amplitude of the fundamental.

Worst Spur

This value displays the frequency of the bin with the largest value excluding the fundamental, harmonic, and DC leakage bins. It also displays the amplitude of the bin's value relative to the fundamental amplitude.

SFDR

This value displays the spurious-free dynamic range relative to the fundamental amplitude.

SNR

This value displays the signal-to-noise ratio.

SNRFS

This value displays the full scale input to noise ratio.

THD

This value displays the total harmonic distortion.

SINAD

This value displays the signal to noise and distortion.

ENOB

This value displays the effective number of bits.

Bin Width

This value displays the size of each FFT bin in Hz.

DC Leakage

Enter the number of bins above DC that are not used in calculating the SNR, SINAD, and ENOB.

Fundamental Leakage

Enter the number of bins on either side of the fundamental frequency not used in calculating the SNR, SINAD, and ENOB.

Harmonic Leakage

Enter the number of bins on either side of a harmonic of the fundamental frequency not used in calculating the SNR, SINAD, and ENOB.

Max Harmonics

Enter the number of harmonics of the fundamental frequency to be displayed.

OK

Press this button to save the current settings and close this dialog.

Cancel


Press this button to discard the current settings and close this dialog.

Apply

Press this button to re-calculate results using the current options.

2.3.27 Trigger Sweep

Figure 54 Trigger Sweep dialog box

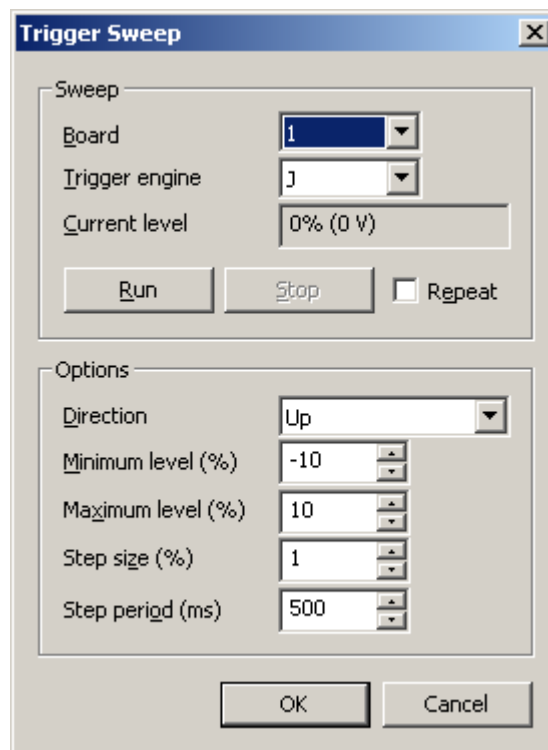

The **Trigger Sweep** dialog box allows you to automate trigger level tests. The software automatically changes the trigger level in the selected direction between the minimum and maximum levels, pausing the between each step. The test can optionally repeat until you press the stop button.

Board

Select a board within the current board system that you wish to control.

Trigger engine

Select a trigger engine from the current board whose trigger level you wish to control.

Current Level

This control displays the current trigger level in both percent of full-range input, and volts.

Run

Press this button to begin the trigger level sweep test using the selected parameters.

Stop

Press this button to stop the test in progress.

Repeat

Check to continue the test until you press the **Stop** button.

Direction

Select how the trigger level is changed after each step in the test. The options are:

- Up – increase the trigger level until the maximum level is reached. If the repeat option is checked, continue from minimum level.
- Down – decrease the trigger level until the minimum level is reached. If the repeat option is checked, continue from the maximum level.
- Up and down – increase the trigger level until the maximum level is reached, then reduce until the minimum level is reached.
- Down and up – decrease the trigger level until the minimum level is reached, then increase until the maximum level is reached.

Minimum level

Enter the minimum trigger level in the test range in percent of full range input voltage.

Maximum level

Enter the minimum trigger level in the test range in percent of full range input voltage.

Step size

Enter the amount in percent of full range input to increase or decrease the trigger level after each step.

Step period

Enter the time in milliseconds to hold the trigger level at the current value during each step of the test.

OK

Save the current settings and close the dialog.

Cancel

Discard the current settings and close the dialog.

2.4 Stream To Memory Wizard


The **Stream To Memory Wizard** displays a series of property pages that allows you to configure **AlazarDSO** to stream sample from the dual-port memory of your digitizer to the system memory of your computer.

If your computer has sufficient RAM then the software should be capable of streaming sample data to system memory and saving it to disk at a data acquisition rate that is independent of the maximum write speed of your disks. This allows the use inexpensive desktop drives for data streaming rather than RAID, SSD, or RAM disks.

The wizard displays the following property pages.

2.4.1 Welcome

Figure 55 Welcome Page

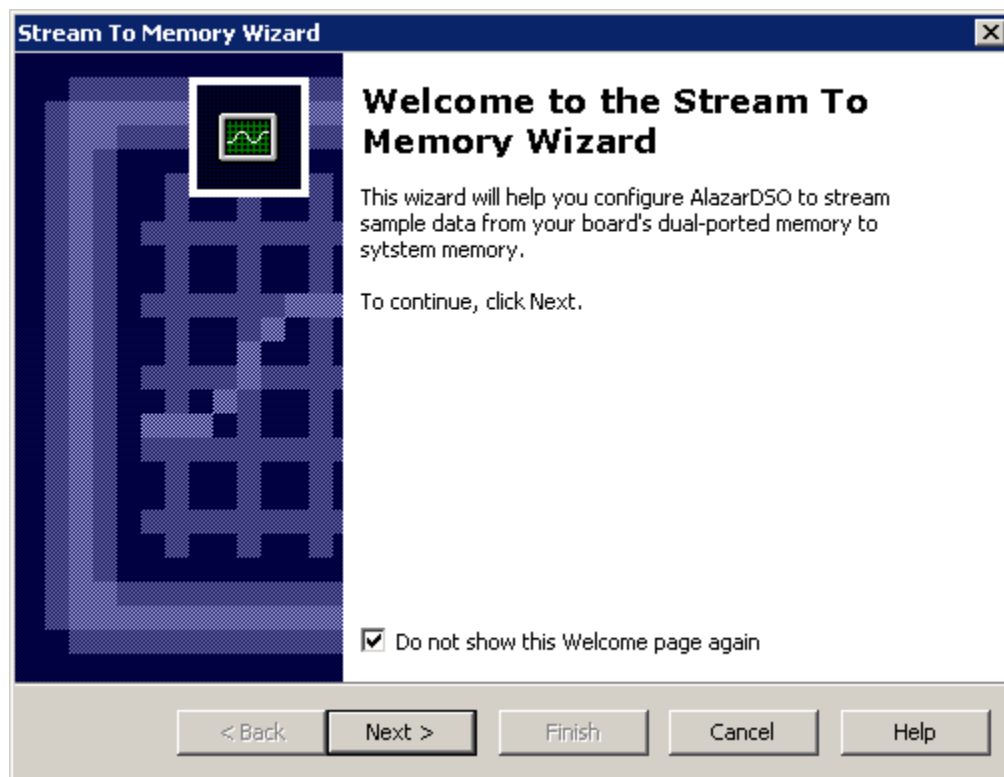

This is the first page of the Stream To Memory Wizard.

Do not show this Welcome page again

Check this button to start this wizard from the mode page the next time it is run.

Next

Press this button to go forward to the next page

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.2 Mode

Figure 56 Mode Page

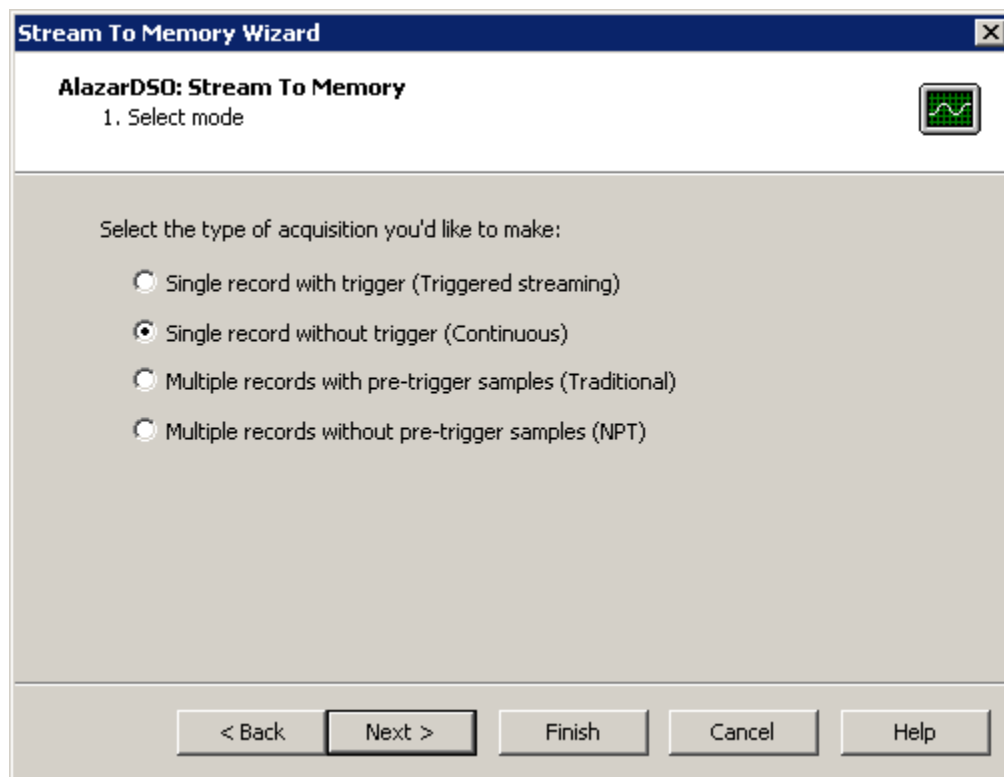

The **Configure Mode** page allows you to select the type of acquisition that you'd like to perform.

Single record with trigger (Triggered streaming)

Check this radio button to acquire a single, continuous record per enabled channel. The system will wait for a trigger event before beginning the acquisition, and the acquisition will contain no pre-trigger samples.

Single record without trigger (Continuous)

Check this radio button to acquire a single, continuous record per enabled channel. The system will not wait for a trigger event before beginning the acquisition.

Multiple records with pre-trigger samples (Traditional)

Check this radio button to acquire one or more records per enabled channel. The system will wait for a trigger event before each record, and the records may contain pre-trigger samples.

Multiple records without pre-trigger samples (NPT)

Check this radio button to acquire one or more records per enabled channel. The system will wait for a trigger event before each record, but the records contain no pre-trigger samples.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.3 Single Record

Figure 57 Single Record Page

The screenshot shows a Windows-style dialog box titled "Stream To Memory Wizard". The subtitle is "AlazarDSO: Stream To Memory" and the step indicator is "2. Set single record options". The main area contains the instruction "Select the number of samples to capture from each enabled channel:". Below this, there are three rows of controls: "Samples per transfer" with a numeric spinner set to 2048 and a unit dropdown set to K; "Transfers per acquisition" with a numeric spinner set to 5000; and "Total samples per channel" with a text field showing "10.49 G". At the bottom, there are five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

This property page allows you to define the acquisition length in single record acquisition modes. Note that the acquisition length is limited only by the available system memory.

Samples per transfer

In dual-ported memory mode, an acquisition is split into DMA transfers that move sample data from on-board to PC host memory while, at the same time, on-board memory is filled with acquisition data.

Enter the size of each DMA transfer in samples. It is important to keep this value as large as possible to reduce the risk of buffer overrun errors. The default value is 2048 K samples.

Transfers per acquisition

Enter the number of DMA transfers per acquisition.

Total samples per channel

This value is the product of the **Samples per transfer** and **Transfers per acquisition** values. It defines the total number of samples transferred from the board per enabled channel during the acquisition.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.4 Multiple Records

Figure 58 Multiple Record Page

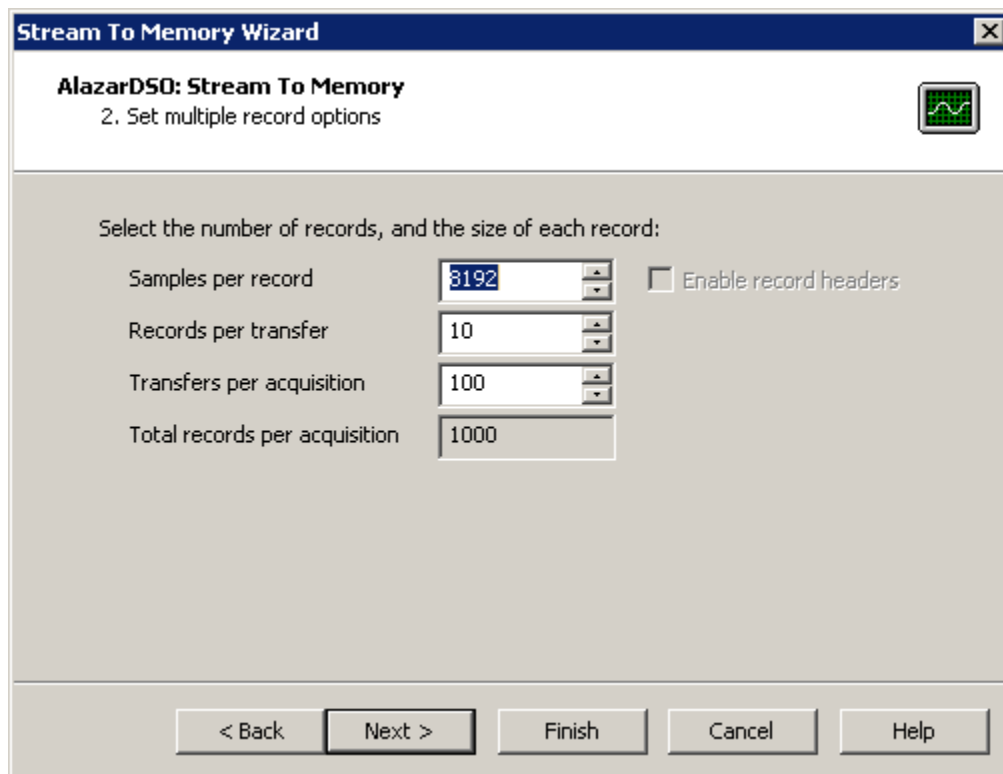

The image shows a Windows-style dialog box titled "Stream To Memory Wizard". The subtitle is "AlazarDSO: Stream To Memory" and the page number is "2. Set multiple record options". There is a small icon of a waveform in the top right corner. The main area contains the text "Select the number of records, and the size of each record:". Below this are four input fields: "Samples per record" with a value of 8192, "Records per transfer" with a value of 10, "Transfers per acquisition" with a value of 100, and "Total records per acquisition" with a value of 1000. To the right of these fields is a checkbox labeled "Enable record headers" which is currently unchecked. At the bottom of the dialog are five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

This property page allows you to define the acquisition length in multiple record acquisition modes. Note that the total acquisition length is limited only by the available system memory.

Samples per record

Enter the size of each record in samples.

Enable record headers

Press this button to transfer headers with each record. Note that record headers contain record timestamp data. If record timestamps are desired, then the “enable record headers” check box must be checked.

Records per transfer

In dual-ported memory mode, an acquisition is split into DMA transfers that move sample data from on-board to PC host memory while, at the same time, on-board memory is filled with acquisition data.

Enter the size of each DMA transfer in records.

Transfers per acquisition

Enter the number of number of DMA transfers per acquisition.

Total records per channel

This value is the product of the Records per transfer and Transfers per acquisition values.

Pause between acquisitions

Enter the time in milliseconds to pause between each transfer in the acquisition.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.5 Board Configuration

Figure 59. Board Configuration Page

Stream To Memory Wizard

AlazarDSO: Stream To Memory

3. Configure board

Configure the sample rate and trigger position:

Sample rate (S/s) ...

Total sample time

Trigger position in record (%)

Configure the input channels:

Enabled channels ...

File size (bytes)

Transfer rate (bytes/sec)

Configure the trigger system: ...

< Back Next > Finish Cancel Help

This property page allows you to verify and, if necessary, modify board configuration settings.

Sample rate

This control displays the current sample rate. If necessary, press on the “...” button to display the **Configure Horizontal** dialog box to change the sample rate.

Total sample time

This control displays the total sample time calculated from the sample rate and total number of samples in the acquisition. If the acquisition contains multiple records, then total acquisition time will be longer than the total sample time.

Trigger position in record

This control displays the trigger position in each record as a percent of the record length in samples. If necessary, press on the “...” button to display the **Configure Horizontal** dialog box to change the trigger position in each record and the resulting number of pre-trigger samples.

Enabled channels

This control displays the total number of enabled channels from all the boards in the active board system. Press the “...” button to display the Configure Input dialog box in order to enable or disable input channels.

File size

This control displays the file size in bytes estimated from the total number of samples in the acquisition. The acquisition cannot proceed if the amount of free disk space on the volume containing the output directory is less than this value.

Transfer rate

This control displays the transfer rate in bytes per second. Single record continuous acquisitions may fail with buffer overrun errors if the required transfer rate is greater than the maximum rate that the digitizer can transfer data from on-board memory, across the host bus, to system memory.

Configure trigger system

Press the “...” button in order to display the Configure Trigger dialog box to view or modify the current trigger engine settings.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.6 Options

Figure 60. Transfer Options Page

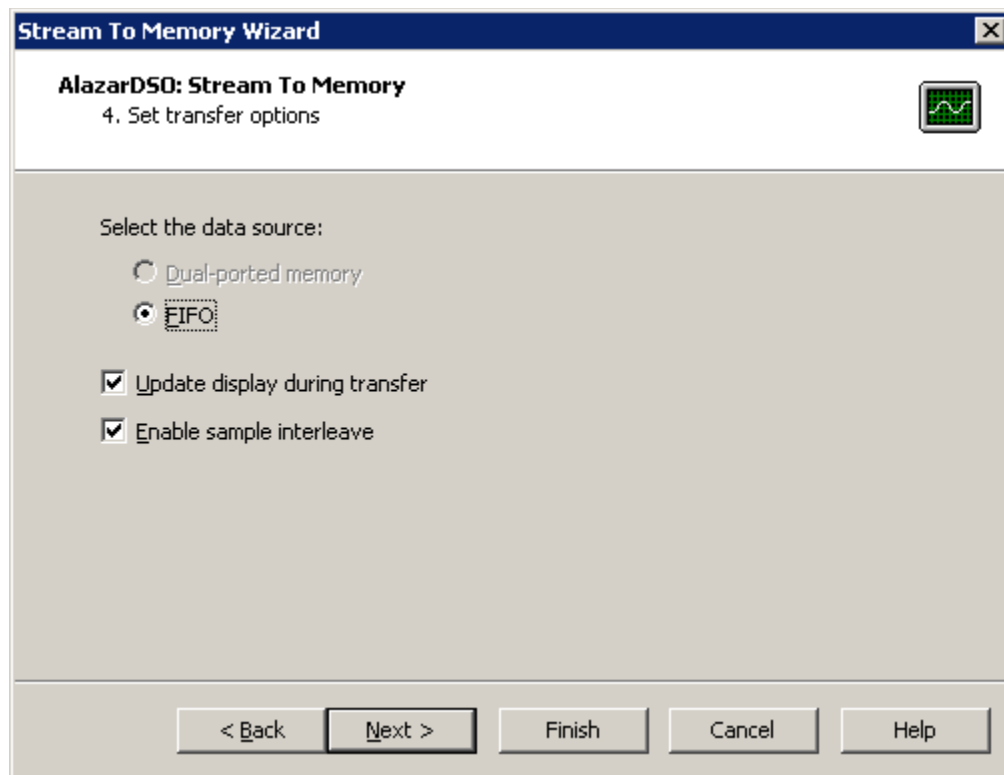

This property page allows you to select data transfer options.

Select data source

The data source defines the source of sample data on the digitizer board.

- **Dual-ported memory**
Sample data is buffered in dual-ported memory before being transferred to host memory.
- **FIFO**
Sample data is transferred directly from a FIFO to host memory.

Update display during transfer

Check this box to draw records on screen as they are transferred to host memory. This option should be disabled to reduce the risk of buffer overflow errors.

Enable sample interleave

This option controls how a board transfers records from on-board to host memory. When this enabled, a board transfers one sample from a record of CH A followed by the corresponding sample from the corresponding record of CH B. This method produces

higher transfer rates from on-board to host memory, but requires that software de-interleave samples.

When this option is not enabled, the board transfers all of the samples from a record of CH A, followed by the all of samples from the corresponding record of CH B. This method produces lower transfer rates from on-board to host memory than sample interleaved records.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.7 System memory

Figure 61. File Page

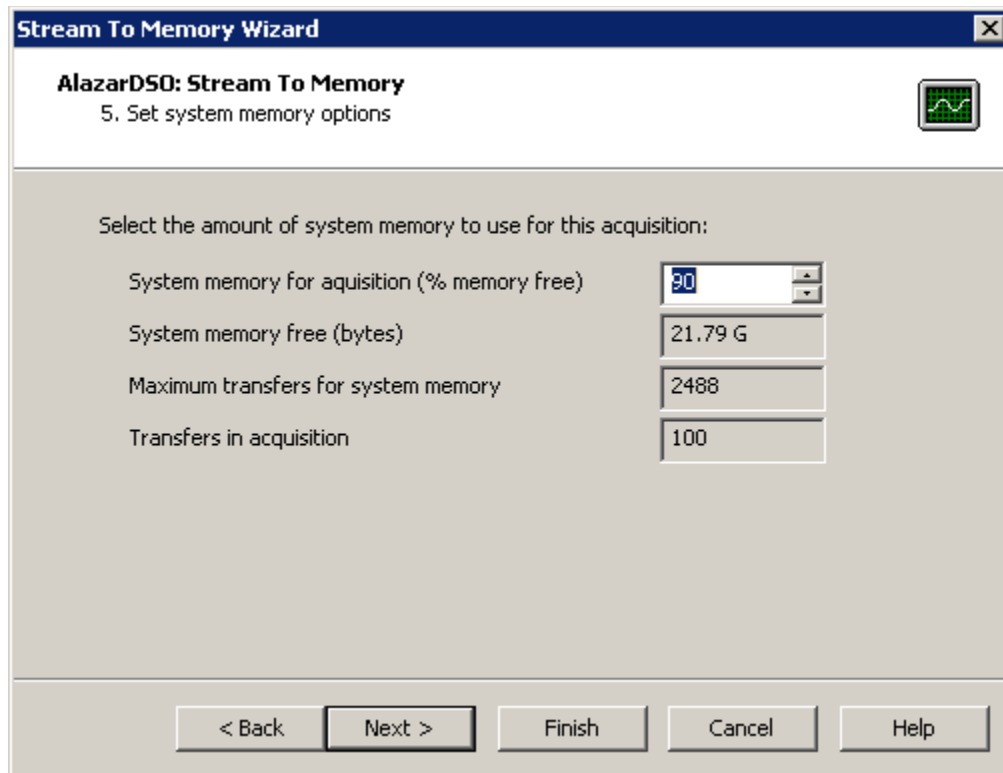

Stream To Memory Wizard

AlazarDSO: Stream To Memory

5. Set system memory options

Select the amount of system memory to use for this acquisition:

System memory for acquisition (% memory free)	90
System memory free (bytes)	21.79 G
Maximum transfers for system memory	2488
Transfers in acquisition	100

< Back Next > Finish Cancel Help

This property page allows you to select the amount of system memory to reserve for the acquisition.

System memory for acquisition (% memory free)

Set the amount of system memory to reserve for acquisition data as a percentage of the amount of free memory. Reduce this value to increase the amount of memory available for other applications.

System memory free

This control displays the total amount of system memory available to store acquisition data.

Maximum transfers for system memory

This control displays the maximum number of DMA transfers that can fit in system memory based on current acquisition settings. The entire acquisition must fit in system memory.

Transfers in acquisition

This the desired number of transfers in the acquisition as set on page 2 “Set single record options” or “Set multiple record options” of the wizard.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.8 File

Figure 62. File Page

The screenshot shows a Windows-style dialog box titled "Stream To Memory Wizard" with a close button (X) in the top right corner. Below the title bar, the text "AlazarDSO: Stream To Memory" is displayed, followed by "6. Save to file" and a small icon of a green waveform. The main area of the dialog contains a checked checkbox labeled "Save the acquisition to file". Below this, there are two text input fields: "File" with the value "2013.09.27_14.31.58" and "Directory" with the value "C:\Users\Alazar\Documents\AlazarTech\". To the right of the Directory field is a button with three dots "...". Below these fields are two more text boxes: "Disk space available (bytes)" showing "565.2 G" and "Disk space required (bytes)" showing "31.25 M". At the bottom of the dialog, there are five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

This property page allows you to select the output file and directory.

Save the acquisition to file

Press this button to save the acquisition data to file. If not checked, the system will transfer data from on-board to host memory, but not save the data to file.

File

Enter the file name. AlazarDSO creates a default file name from the current date and time, and automatically appends the extension “.ATB” to the file name.

Directory

Enter the name of the directory in which to create the file, or press the “...” button to display a directory chooser dialog box which will allow you to select a directory.

Disk space available

This control displays the available disk space in bytes on the volume containing the selected directory.

Disk space required

This control displays the required disk space in bytes for the file.

The wizard cannot continue if the disk space required is greater than the disk space available. Consider changing the directory to one on a volume with more available disk space.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.9 File Options

Figure 63. File Options Page

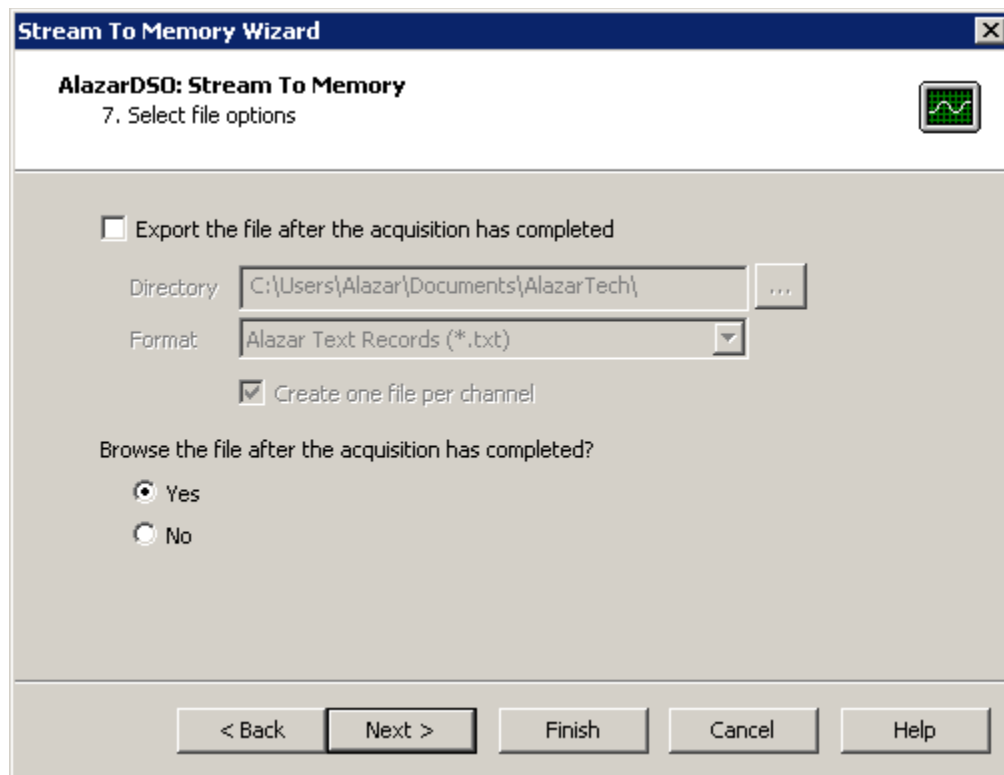

This property page allows you to process and view the file saved during an acquisition after the acquisition has completed.

Export the file after the acquisition has completed

Check this box to export the file created during an acquisition as one or more files in the in the selected format. This option allows you to create files from sample data that can be opened directly in applications such as MATLAB® or FlexPro®.

AlazarDSO saves sample data transferred during an acquisition to a file stored in the AlazarTech ATB file format. If this option is selected, AlazarDSO exports the ATB file to one or more files in the specified format. It creates one output file for each record of each active channel from the ATB file.

Directory

Enter the name of the directory in which to create the output files, or press the “...” button to display a directory chooser dialog box which will allow you to select a directory.

AlazarDSO creates files in the selected directory using the same base file name as the ATB file. It adds a series of numbers and a letter to base file name to indicate the board

number, acquisition sequence number, record number, and channel letter. It also appends an extension according to the selected format.

Format

Each exported file contains an array of sample values from one record of an active channel. Multi-byte binary values are stored in little-endian byte order. Select the type of files that you wish to create from the list.

- **Binary records in volts**
Convert each sample value to volts and save as a binary number in IEEE 754 double precision floating point format with 8-bytes per value.
- **Binary records in samples**
Save each sample value as a 1- or 2-byte binary number where the sample bits are right aligned in the sample bytes.
- **Text records in volts**
Convert each sample value to volts and save as an ASCII text number with one sample value per line.
- **Text records in samples**
Save each sample value as an ASCII text number with one sample value per line.
- **FlexPro Records in volts or samples**
Save each sample time and value from a record in FlexPro® "FPF" format.
- **MATLAB arrays in volts or samples**
Save each sample time and value from a record as pair of 2-D numerical arrays in MATLAB® Level-4 MAT file format.

Create one file per channel

Check this box to save all of records from one channel to a single file. If this box is not checked, then the program will save each record to a separate file.

Browse file after the acquisition has completed

Check to display the "Browse File" dialog box after the acquisition has completed. The "Browse File" dialog allows you to view the acquisition file one transfer at a time.

Note that if you close the "Browse File" dialog box, you can display it again by selecting "Browse File" from the "View" menu until you make another acquisition or exit the program. If you make another acquisition or restart the program, then select "Open" command from the "File" menu to display the "Open File" dialog box and select the file by name.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Help

Press this button to display on-line help about this dialog box.

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.4.10 Finish

Figure 64. Finish Page



This is the last page of the **Stream To Memory Wizard**.

Back

Press this button to go back to the previous page.

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard

Help

Press this button to display on-line help with more information about this property sheet page.

2.5 Stream To Disk Wizard


Note that you must obtain a license to use this optional module. Please contact support@alazartech.com for license information.

The **Stream To Disk Wizard** displays a series of property pages that allows you to configure **AlazarDSO** to save an acquisition from dual-ported memory to a file, and optionally browse the file after the acquisition completes.

The wizard displays the following property pages.

2.5.1 Welcome

Figure 65 Welcome Page

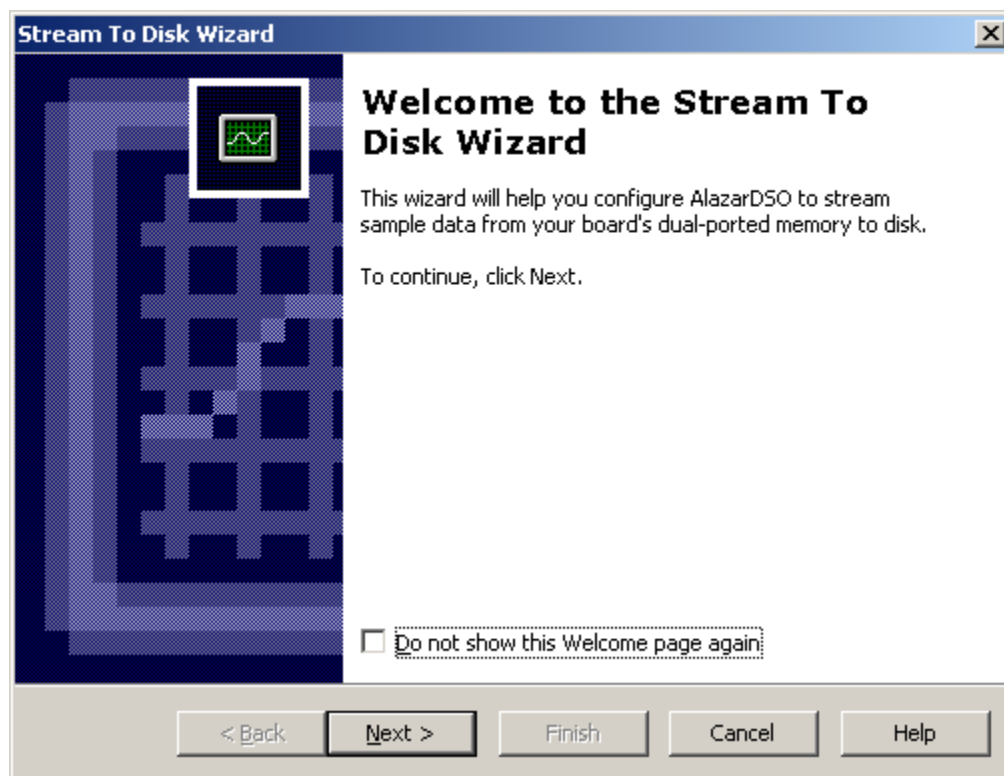

This is the first page of the Stream To Disk Wizard.

Do not show this Welcome page again

Check this button to start this wizard from the Configure Mode page the next time it is run.

Next

Press this button to go forward to the next page

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.2 Mode

Figure 66 Mode Page

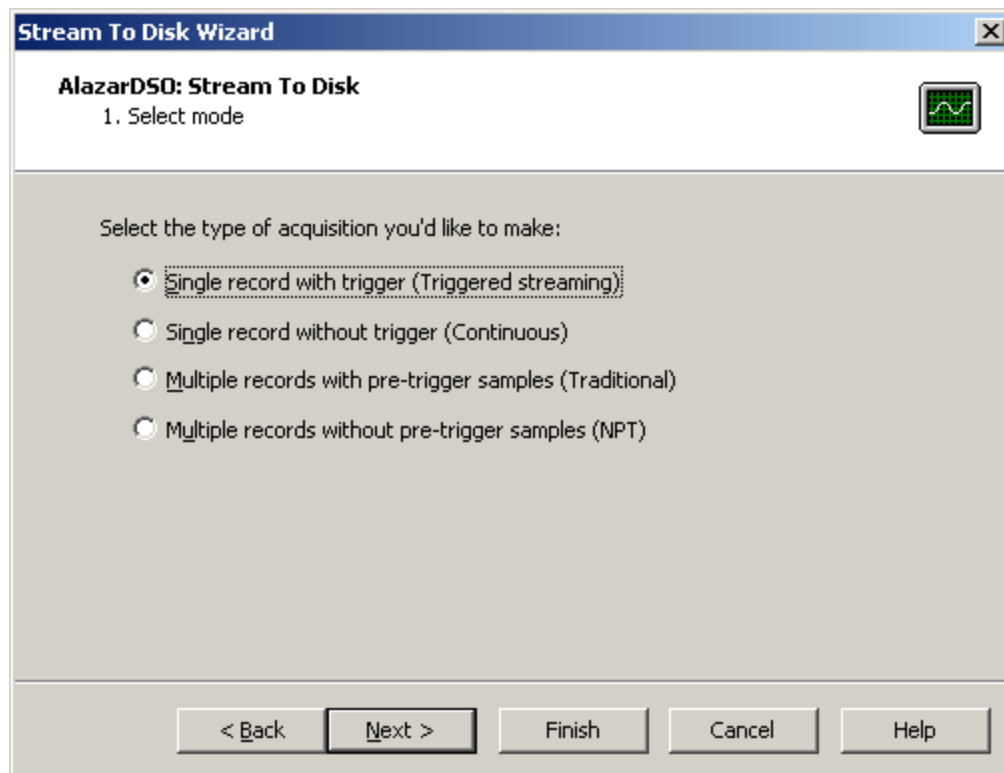

The **Configure Mode** page allows you to select the type of acquisition that you'd like to perform.

Single record with trigger (Triggered streaming)

Check this radio button to acquire a single, continuous record per enabled channel. The system will wait for a trigger event before beginning the acquisition, and the acquisition will contain no pre-trigger samples.

Single record without trigger (Continuous)

Check this radio button to acquire a single, continuous record per enabled channel. The system will not wait for a trigger event before beginning the acquisition.

Multiple records with pre-trigger samples (Traditional)

Check this radio button to acquire one or more records per enabled channel. The system will wait for a trigger event before each record, and the records may contain pre-trigger samples.

Multiple records without pre-trigger samples (NPT)

Check this radio button to acquire one or more records per enabled channel. The system will wait for a trigger event before each record, but the records contain no pre-trigger samples.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.3 Single Record

Figure 67 Single Record Page

The screenshot shows a Windows-style dialog box titled "Stream To Disk Wizard". Inside, the title bar says "AlazarDSO: Stream To Disk" and the subtitle is "2. Set single record options". There is a small icon of a green waveform in the top right corner. The main area contains the instruction "Select the number of samples to capture from each enabled channel:". Below this, there are three rows of controls: "Samples per transfer" with a numeric spinner set to 4096 and a unit dropdown set to 'K'; "Transfers per acquisition" with a numeric spinner set to 10; and "Total samples per channel" with a text box displaying "41.94 M". At the bottom, there are five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

This property page allows you to define the acquisition length in single record acquisition modes. Note that the acquisition length is limited only by the available disk space.

Samples per transfer

In dual-ported memory mode, an acquisition is split into DMA transfers that move sample data from on-board to PC host memory while, at the same time, on-board memory is filled with acquisition data.

Enter the size of each DMA transfer in samples. It is important to keep this value as large as possible to reduce the risk of buffer overrun errors. The default value is 4096 K samples.

Transfers per acquisition

Enter the number of DMA transfers per acquisition.

Total samples per channel

This value is the product of the **Samples per transfer** and **Transfers per acquisition** values. It defines the total number of samples transferred from the board per enabled channel during the acquisition.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.4 Multiple Records

Figure 68 Multiple Record Page

The screenshot shows a Windows-style dialog box titled "Stream To Disk Wizard". The subtitle is "AlazarDSO: Stream To Disk" and the step indicator is "2. Set multiple record options". The main area contains the instruction "Select the number of records, and the size of each record:". Below this are four input fields: "Samples per record" (set to 8192), "Records per transfer" (set to 64), "Transfers per acquisition" (set to 1), and "Total records per acquisition" (set to 64). To the right of these fields is a checkbox labeled "Enable record headers" which is currently unchecked. At the bottom of the dialog are five buttons: "< Back", "Next >", "Finish", "Cancel", and "Help".

This property page allows you to define the acquisition length in multiple record acquisition modes. Note that the total acquisition length is limited only by the available disk space.

Samples per record

Enter the size of each record in samples.

Enable record headers

Press this button to transfer headers with each record. Note that record headers contain record timestamp data. If record timestamps are desired, then the “enable record headers” check box must be checked.

Records per transfer

In dual-ported memory mode, an acquisition is split into DMA transfers that move sample data from on-board to PC host memory while, at the same time, on-board memory is filled with acquisition data.

Enter the size of each DMA transfer in records.

Transfers per acquisition

Enter the number of number of DMA transfers per acquisition.

Total records per channel

This value is the product of the Records per transfer and Transfers per acquisition values.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.5 Board Configuration

Figure 69. Board Configuration Page

Stream To Disk Wizard

AlazarDSO: Stream To Disk

3. Configure board

Configure the sample rate and trigger position:

Sample rate (S/s) ...

Total sample time

Trigger position in record (%)

Configure the input channels:

Enabled channels ...

File size (bytes)

Transfer rate (bytes/sec)

Configure the trigger system: ...

< Back Next > Finish Cancel Help

This property page allows you to verify and, if necessary, modify board configuration settings.

Sample rate

This control displays the current sample rate. If necessary, press on the “...” button to display the **Configure Horizontal** dialog box to change the sample rate.

Total sample time

This control displays the total sample time calculated from the sample rate and total number of samples in the acquisition. If the acquisition contains multiple records, then total acquisition time will be longer than the total sample time.

Trigger position in record

This control displays the trigger position in each record as a percent of the record length in samples. If necessary, press on the “...” button to display the **Configure Horizontal** dialog box to change the trigger position in each record and the resulting number of pre-trigger samples.

Enabled channels

This control displays the total number of enabled channels from all the boards in the active board system. Press the “...” button to display the Configure Input dialog box in order to enable or disable input channels.

File size

This control displays the file size in bytes estimated from the total number of samples in the acquisition. The acquisition cannot proceed if the amount of free disk space on the volume containing the output directory is less than this value.

Transfer rate

This control displays the transfer rate in bytes per second. Single record continuous acquisitions will fail with buffer overrun errors if the volume containing the output directory cannot support sustained sequential writes at this rate.

Configure trigger system

Press the “...” button in order to display the Configure Trigger dialog box to view or modify the current trigger engine settings.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.6 Options

Figure 70. Transfer Options Page

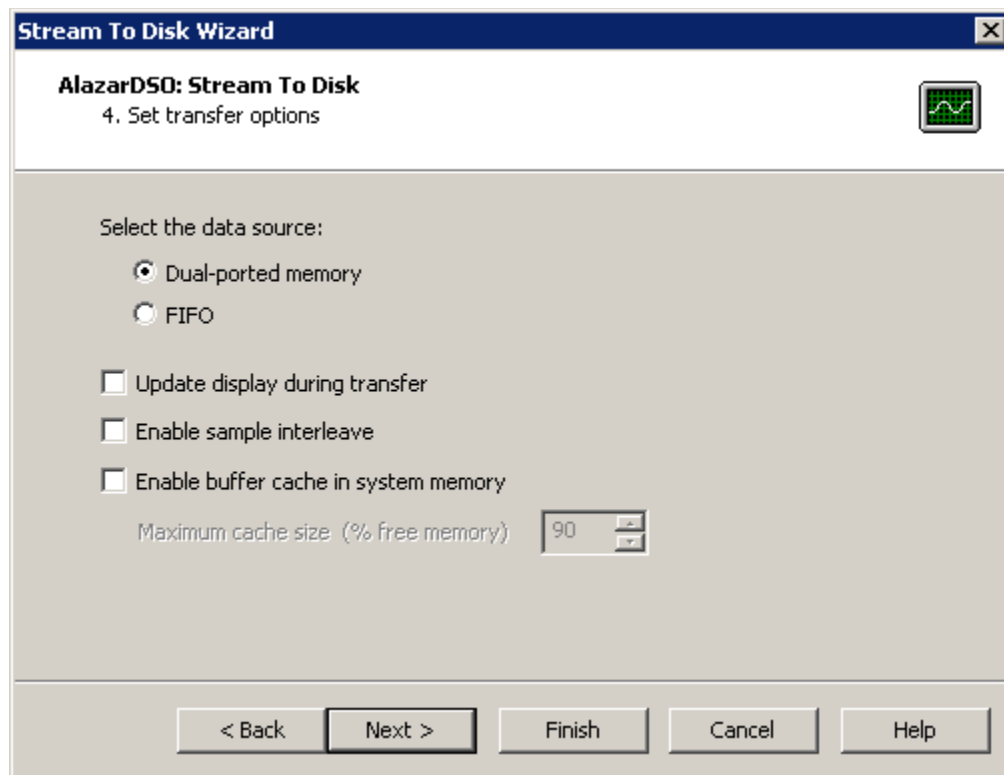

This property page allows you to select data transfer options.

Select data source

The data source defines the source of sample data on the digitizer board.

- **Dual-ported memory**
Sample data is buffered in dual-ported memory before being transferred to host memory.
- **FIFO**
Sample data is transferred directly from a FIFO to host memory.

Update display during transfer

Check this box to draw records on screen as they are transferred to host memory. This option should be disabled to reduce the risk of buffer overflow errors.

Enable sample interleave

This option controls how a board transfers records from on-board to host memory. When this enabled, a board transfers one sample from a record of CH A followed by the corresponding sample from the corresponding record of CH B. This method produces

higher transfer rates from on-board to host memory, but requires that software de-interleave samples.

When this option is not enabled, the board transfers all of the samples from a record of CH A, followed by the all of samples from the corresponding record of CH B. This method produces lower transfer rates from on-board to host memory than sample interleaved records.

Enable buffer cache in system memory

This option controls the amount of system memory that the digitizer uses to make an acquisition. Enable it to allow streaming data to a disk when the data acquisition rate is greater than your disk write speed. Increase the amount of system memory to make longer acquisitions to slow disks without risk of buffer overflow errors.

Maximum cache size (% free memory)

This field allows you to specify the maximum amount of free system memory that the program uses for its DMA buffer FIFO. Use it to control memory usage if it is necessary to reserve memory for other applications.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.7 File

Figure 71. File Page

Stream To Disk Wizard

AlazarDSO: Stream To Disk

5. Save to file

☒ Save the acquisition to file

File: 2009.01.23_11.18.27

Directory: D:\AlazarTech

Disk space available (bytes): 1.936 G

Disk space required (bytes): 160 M

Disk sectors per transfer: 32768

Format...

Transfer size is a multiple of disk sector size.
Disk write speed will be as fast as possible.

Fix...

< Back Next > Finish Cancel Help

This property page allows you to select the output file and directory.

Save the acquisition to file

Press this button to save the acquisition data to file. If not checked, the system will transfer data from on-board to host memory, but not save the data to file.

File

Enter the file name. AlazarDSO creates a default file name from the current date and time, and automatically appends the extension “.ATB” to the file name.

Directory

Enter the name of the directory in which to create the file, or press the “...” button to display a directory chooser dialog box which will allow you to select a directory.

Disk space available

This control displays the available disk space in bytes on the volume containing the selected directory.

Format

Press this button to display the Windows “Format Drive” dialog box. This dialog box allows you to reformat the volume containing the selected directory.

Disk space required

This control displays the required disk space in bytes for the file.

The wizard cannot continue if the disk space required is greater than the disk space available. Consider changing the directory to one on a volume with more available disk space.

Disk sectors per transfer

This control displays the number of disk sectors in each DMA transfer. Disk write speeds will be greatest when the size of each transfer in bytes transfer is a whole number of disk sectors.

Fix

This button is active in the following situations:

- No “Stream to Disk” license found.

You must purchase and install a “Stream to Disk” license to save sample data to disk. Without a license, the “Save the acquisition to file” check box will be disabled. You will still be able to stream data, but only to memory. Press the Fix button to display a dialog box with AlazarTech contact information.

- Transfer size is not a multiple of the disk sector size.

To obtain the fastest possible disk write speeds, the transfer size in bytes must be multiple of the disk sector size in bytes. If the transfer size is not a multiple of the sector size, press the “Fix...” button to display a dialog box that suggests changes to the number of samples per record and / or records per transfer that will make the total number of bytes per transfer a whole number of sectors.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.8 File Options

Figure 72. File Options Page

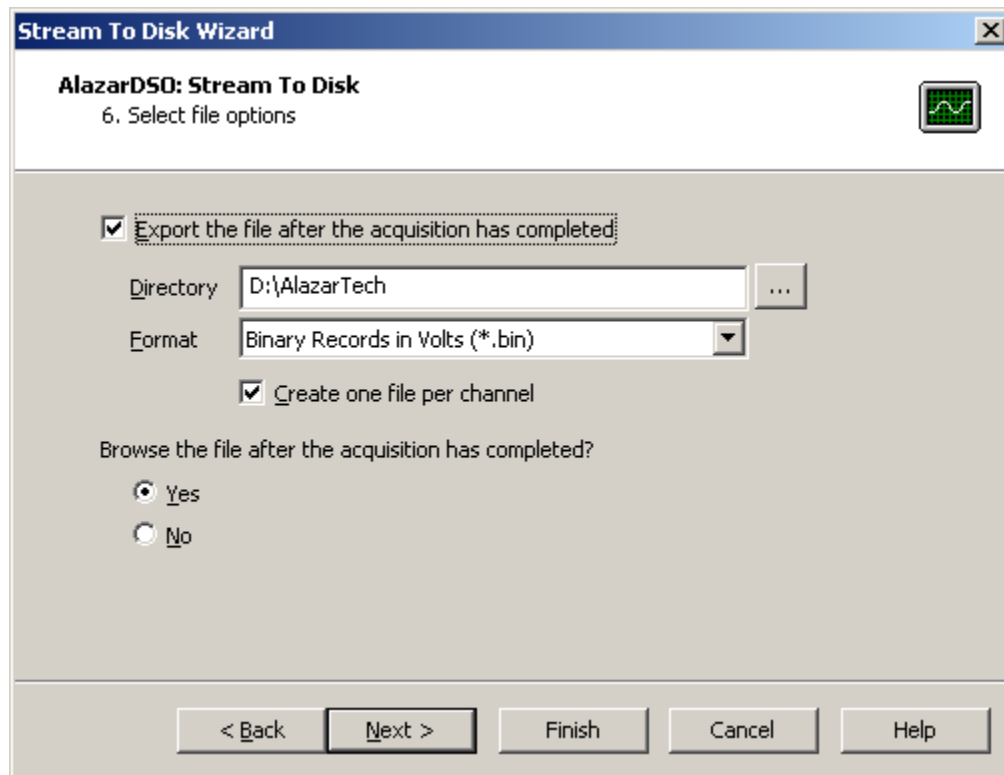

This property page allows you to process and view the file saved during an acquisition after the acquisition has completed.

Export the file after the acquisition has completed

Check this box to export the file created during an acquisition as one or more files in the in the selected format. This option allows you to create files from sample data that can be opened directly in applications such as MATLAB® or FlexPro®.

AlazarDSO saves sample data transferred during an acquisition to a file stored in the AlazarTech ATB file format. If this option is selected, AlazarDSO exports the ATB file to one or more files in the specified format. It creates one output file for each record of each active channel from the ATB file.

Directory

Enter the name of the directory in which to create the output files, or press the “...” button to display a directory chooser dialog box which will allow you to select a directory.

AlazarDSO creates files in the selected directory using the same base file name as the ATB file. It adds a series of numbers and a letter to base file name to indicate the board

number, acquisition sequence number, record number, and channel letter. It also appends an extension according to the selected format.

Format

Each exported file contains an array of sample values from one record of an active channel. Multi-byte binary values are stored in little-endian byte order. Select the type of files that you wish to create from the list.

- **Binary records in volts**
Convert each sample value to volts and save as a binary number in IEEE 754 double precision floating point format with 8-bytes per value.
- **Binary records in samples**
Save each sample value as a 1- or 2-byte binary number where the sample bits are right aligned in the sample bytes.
- **Text records in volts**
Convert each sample value to volts and save as an ASCII text number with one sample value per line.
- **Text records in samples**
Save each sample value as an ASCII text number with one sample value per line.
- **FlexPro Records in volts or samples**
Save each sample time and value from a record in FlexPro® "FPF" format.
- **MATLAB arrays in volts or samples**
Save each sample time and value from a record as pair of 2-D numerical arrays in MATLAB® Level-4 MAT file format.

Create one file per channel

Check this box to save all of records from one channel to a single file. If this box is not checked, then the program will save each record to a separate file.

Browse file after the acquisition has completed

Check to display the "Browse File" dialog box after the acquisition has completed. The "Browse File" dialog allows you to view the acquisition file one transfer at a time.

Note that if you close the "Browse File" dialog box, you can display it again by selecting "Browse File" from the "View" menu until you make another acquisition or exit the program. If you make another acquisition or restart the program, then select "Open" command from the "File" menu to display the "Open File" dialog box and select the file by name.

Back

Press this button to go back to the previous page

Next

Press this button to go forward to the next page

Help

Press this button to display on-line help about this dialog box.

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel


Press this button to discard the current settings and close this wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.5.9 Finish

Figure 73. Finish Page

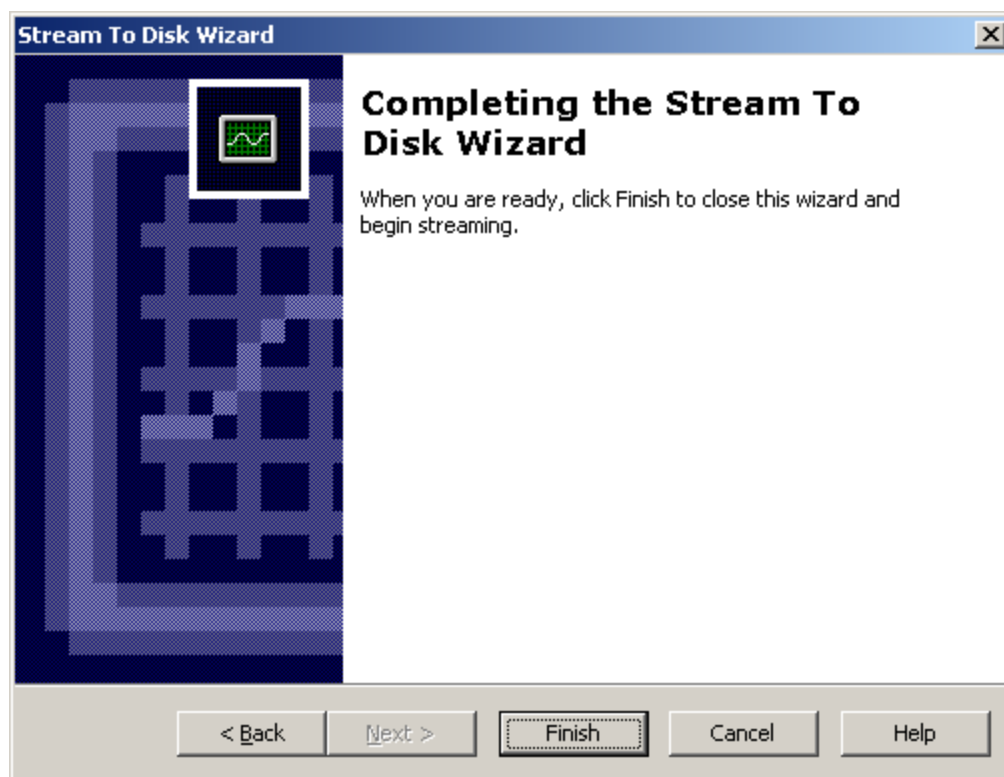

This is the last page of the **Stream To Disk Wizard**.

Back

Press this button to go back to the previous page.

Finish

Press this button to apply the current settings, close this wizard, and begin the acquisition.

Cancel

Press this button to discard the current settings and close this wizard

Help

Press this button to display on-line help with more information about this property sheet page.


2.6 Disk Benchmark Wizard

The **Disk Benchmark Wizard** displays a series of property pages that allows you measure the write speed of your drives. This wizard may be used to verify that your disks are capable of the sustained write speed required for streaming.

The wizard displays the following property pages.

2.6.1 Welcome

Figure 74 Welcome Page

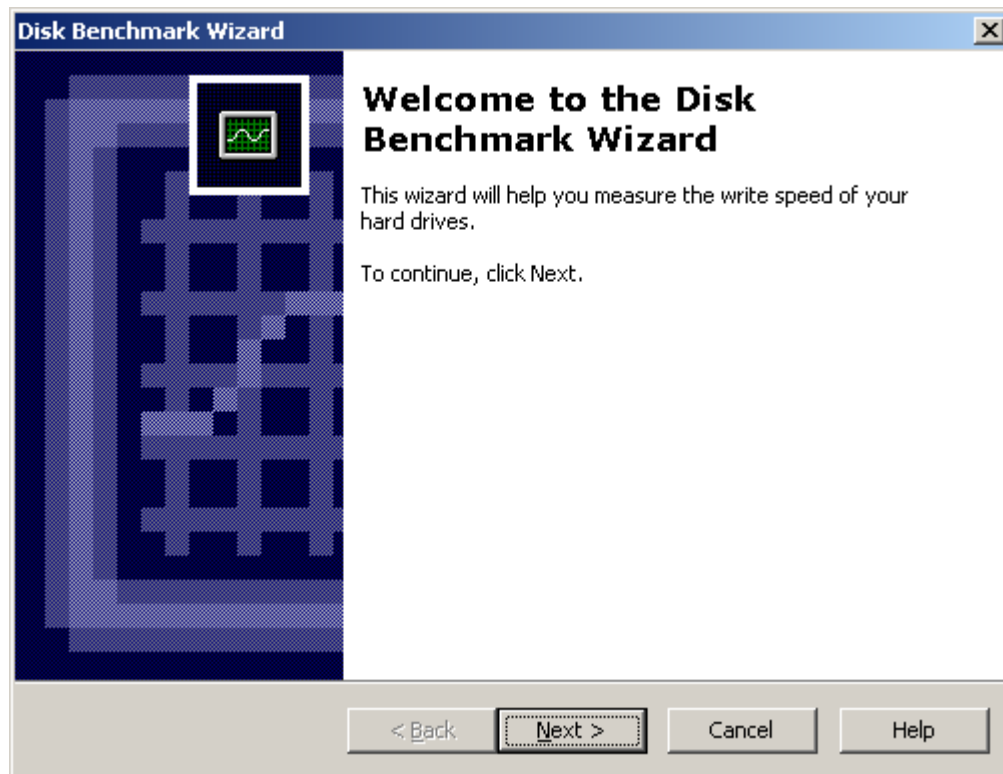

The Welcome Page displays a brief introduction to the Disk Benchmark wizard.

Next

Press this button to go to the next page.

Cancel


Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.6.2 Options

Figure 75. Options Page

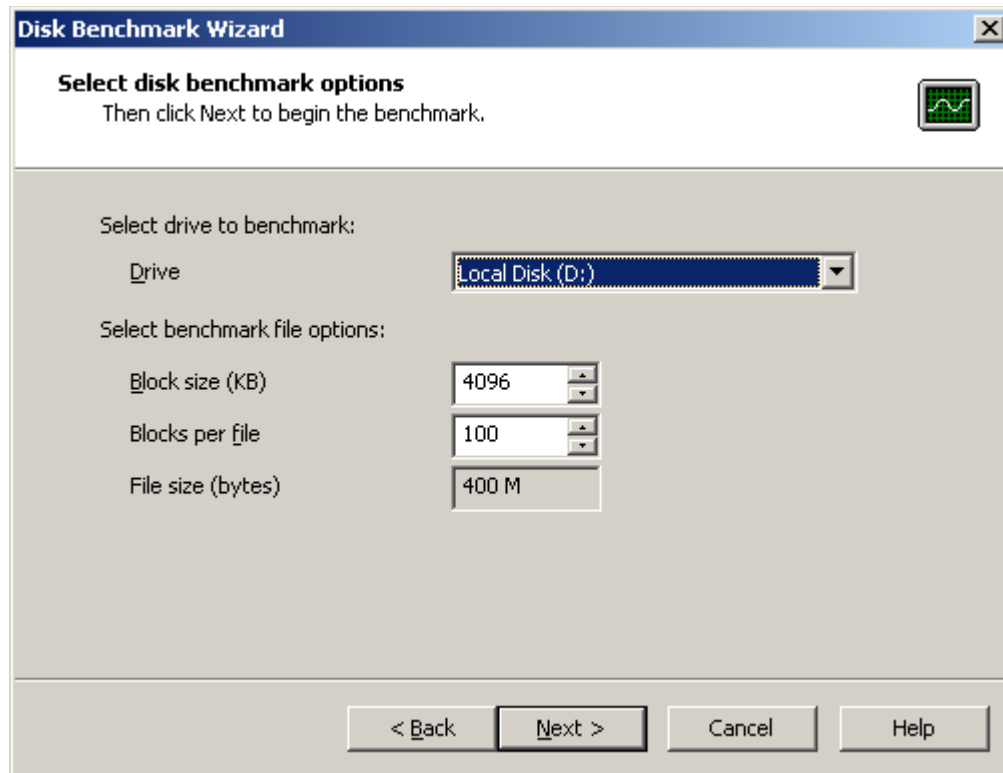

The Options Page allows you to select the drive to benchmark, and the properties of the file used to benchmark this drive.

The wizard will measure the time required to create a test file on the selected drive. The test file will be composed of a number of segments that will be written sequentially to the drive.

Drive

Select a drive from the combo box.

Block size

Enter the size of each segment of the benchmark file in kilobytes.

Blocks per file

Enter the number of segments in the benchmark file.

File size

This edit control displays the size of the benchmark file in bytes. The selected drive must have at least this much free space in order to perform the benchmark.

Back

Press this button to go back to the previous page

Next

Press this button to begin the benchmark test.

Cancel


Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.6.3 Progress

Figure 76. Progress Page

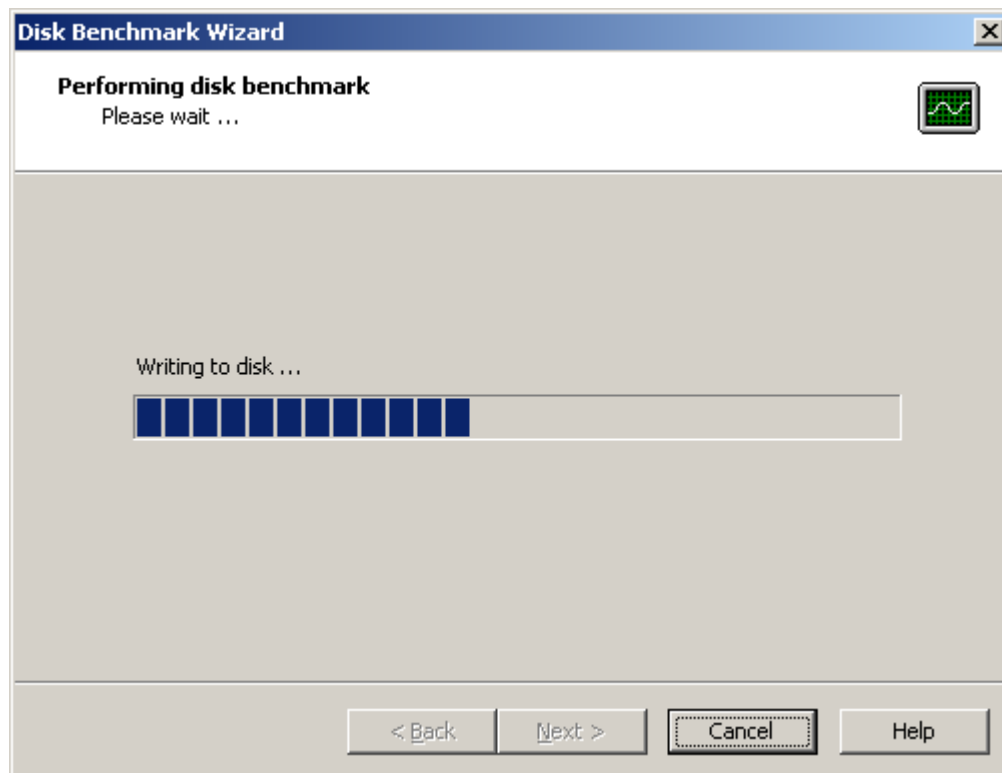

The Progress Page displays progress information during the test. When the benchmark completes, the wizard will move to the finish page.

Cancel


Press this button abort the test and move to the finish page.

Help

Press this button to display on-line help with more information about this property sheet page.

2.6.4 Finish

Figure 77. Benchmark Finish Page

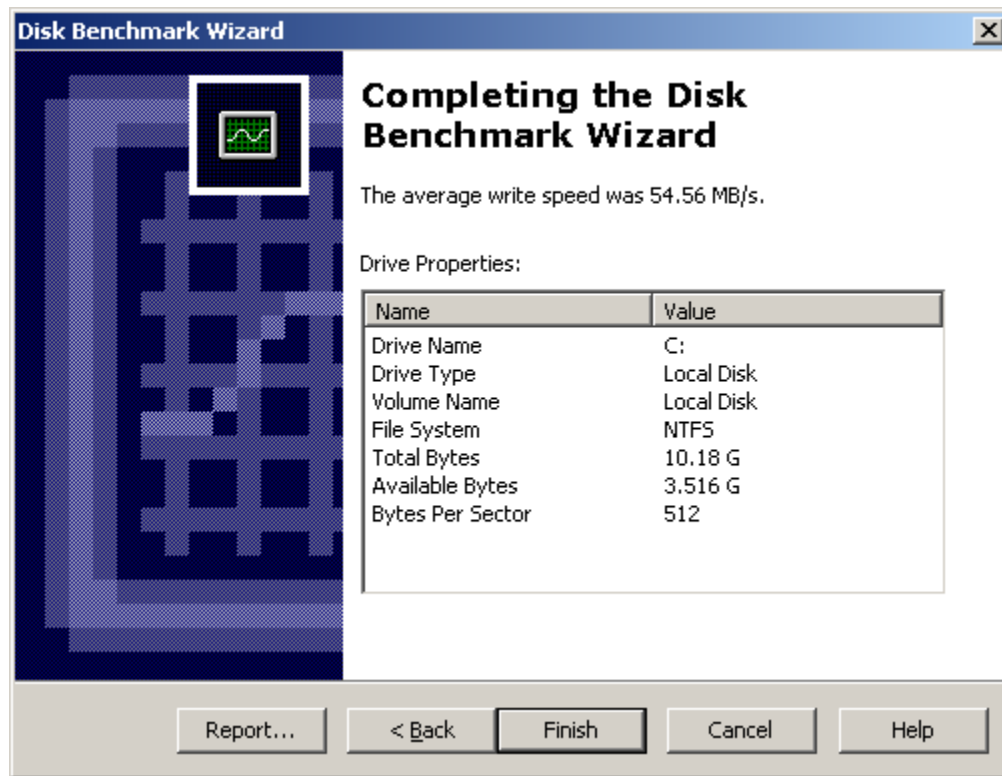

This is the last page of the Disk Benchmark wizard. It displays the write speed of the selected drive, as well as general information about the drive.

Report

Press this button to display the benchmark report file.

By default, the wizard saves benchmark report files in the “%Documents and Settings %\AlazarTech\Benchmark” folder. It automatically generates a file name from drive name, block size, and current date and time.

Back

Press this button to go to the Options page to benchmark another drive.

Finish

Press this button to exit the wizard.

Cancel

Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.7 Bus Benchmark Wizard


The **Bus Benchmark Wizard** displays a series of property pages that allows you measure the average transfer rate from your AlazarTech digitizer boards to host memory. This wizard may be used to verify that your computer is capable of the sustained transfer rates required for streaming.

Note that the digitizer board does not transfer data from its analog-to-digital converters during this test. The board generates data internally, and transfers this data to host memory at a rate that is limited only by the speed of the host bus interface and memory controller.

The wizard displays the following property pages.

2.7.1 Welcome

Figure 78 Welcome Page

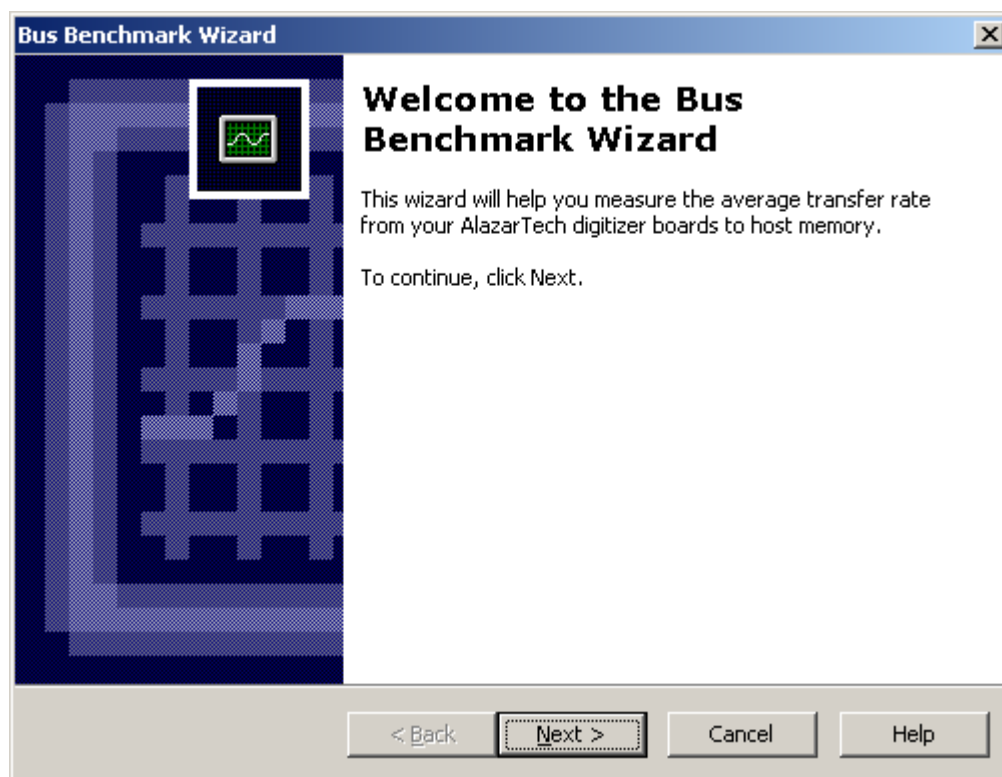

The Welcome page displays a brief introduction to the Bus Benchmark wizard.

Next

Press this button to go to the next page.

Cancel

Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.7.2 Options

Figure 79. Options Page

The Options page allows you to select the amount of data to transfer from the boards during the benchmark. The wizard measures the time required to transfer the specified amount of data.

Samples per transfer

In dual-ported memory mode, an acquisition is split into DMA transfers that move sample data from on-board to PC host memory while, at the same time, on-board memory is filled with acquisition data.

Enter the size of each DMA transfer in samples, and select the units from the “units” combo box.

Transfers per acquisition

Enter the number of DMA transfers per acquisition.

Total samples per channel

This value is the product of the **Samples per transfer** and **Transfers per acquisition** values. This is the total number of samples that will be transferred per enabled channel during the acquisition.

Enabled channels

This edit control displays the current number of enabled channels. Press the “...” button to display the “Configure Input” dialog where you can enable or disable input channels.

Bytes per acquisition

This edit control displays the total number of bytes of sample data that will be transferred from the board to host memory during the benchmark test.

Back

Press this button to go back to the previous page

Next

Press this button to begin the benchmark test.

Cancel


Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.7.3 Progress

Figure 80. Progress Page

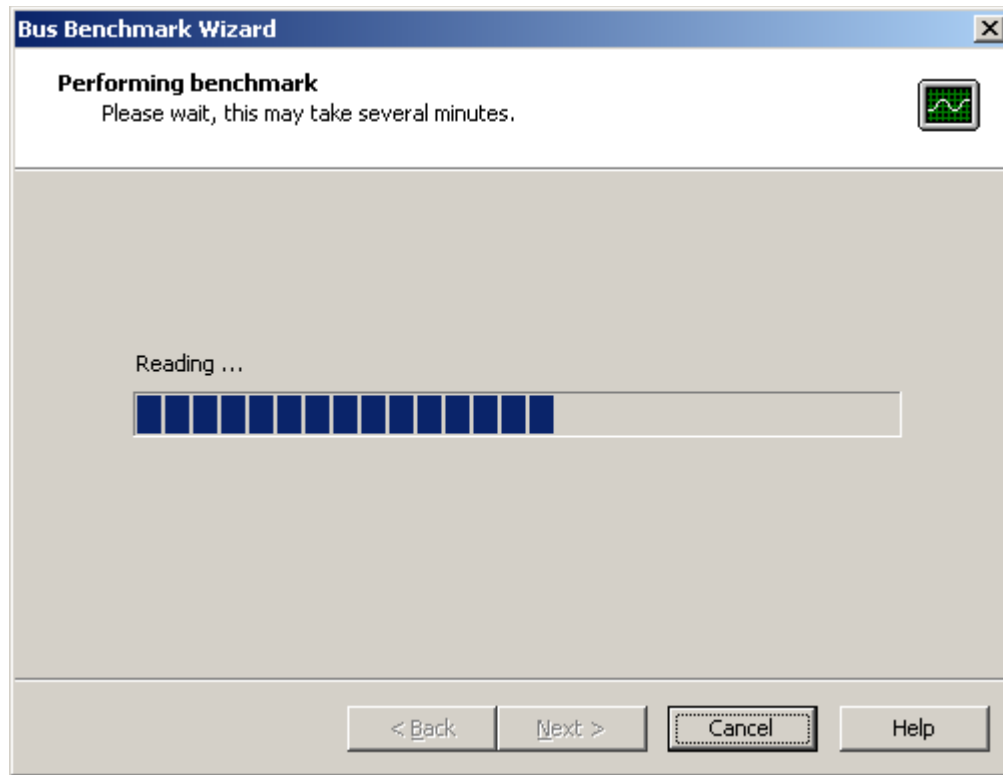

The Progress Page displays progress information during the test. When the benchmark completes, the wizard will move to the finish page.

Cancel


Press this button abort the test and move to the finish page.

Help

Press this button to display on-line help with more information about this property sheet page.

2.7.4 Finish

Figure 81. Benchmark Finish Page

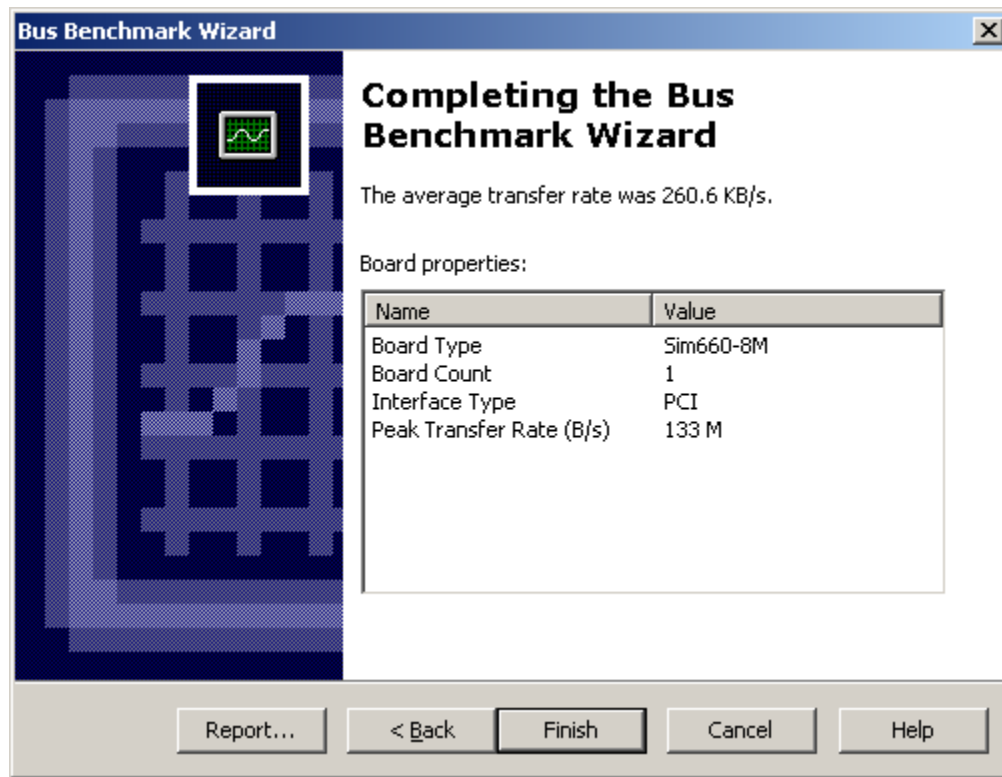

This is the last page of the Bus Benchmark wizard. It displays the average sustained transfer rate from the board to host memory, as well as general information about your boards.

Report

Press this button to display the benchmark report file.

By default, the wizard saves benchmark report files in the “%Documents and Settings %\AlazarTech\Benchmark” folder. It automatically generates a file name from the system name, board serial numbers, and current date and time.

Back

Press this button to go to the Options page to begin another benchmark.

Finish

Press this button to exit the wizard.

Cancel

Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.8 Board Calibration Wizard

The **Board Calibration Wizard** displays a series of property pages that allow you to verify the calibration of AlazarTech digitizer boards, and optionally recalibrate the digitizer boards.

The wizard controls signal generator devices using plugin modules. A calibrator plugin receives messages from the calibration wizard, translates them into device specific commands, sends the commands to the device, and receives responses from the device.


AlazarDSO includes a manual calibrator plugin. This plugin allows you to manually control a signal generator to supply the voltage levels, sine, and square waveforms necessary to calibrate your digitizer boards. The plugin prompts you to configure your signal generator as required by the software.

AlazarDSO can automatically control signal generators that have a remote control interface. Plugins are available a number of devices including: Agilent 33220A and 33522A Function Generator, Agilent N9310A RF Signal Generator, Fluke 5500A and 5820A Oscilloscope Calibrators, HP 8656A Signal Generator, and Stanford Research Systems SG384 RF Signal Generator. Contact support@alazartech.com for more information.

The board calibration wizard displays the following property pages.

2.8.1 Welcome

Figure 82 Welcome Page

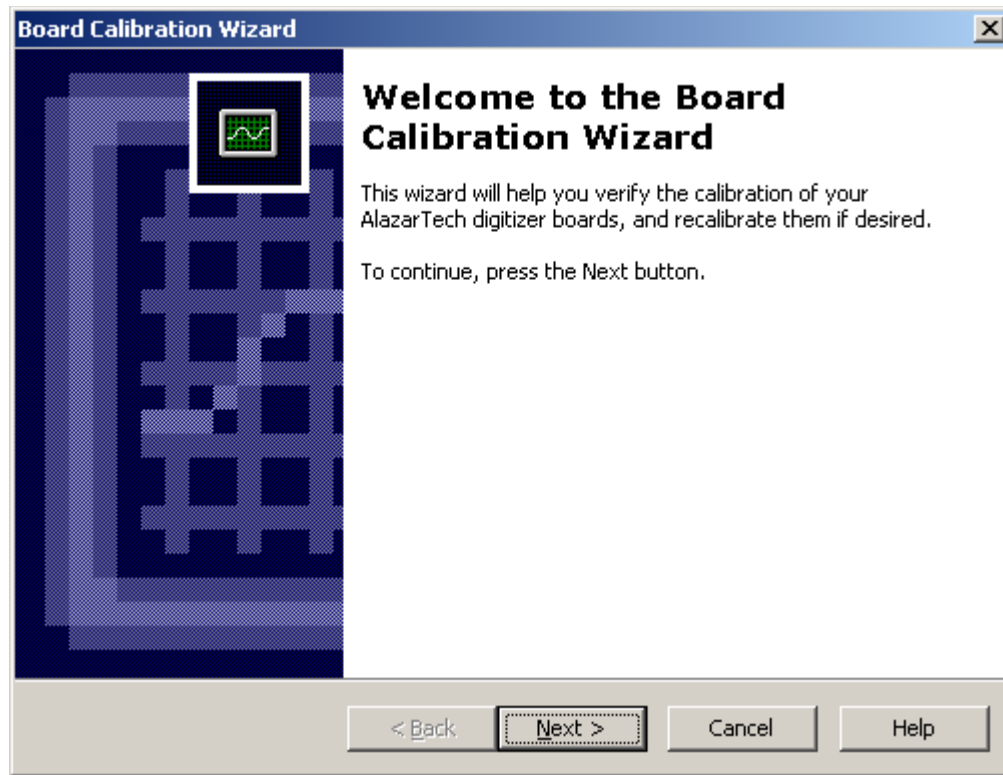

This is the first page of the Board Calibration Wizard. It displays a brief introduction to the wizard.

Next

Press this button to go to the next page.

Cancel


Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.8.2 Mode

Figure 83 Mode Page

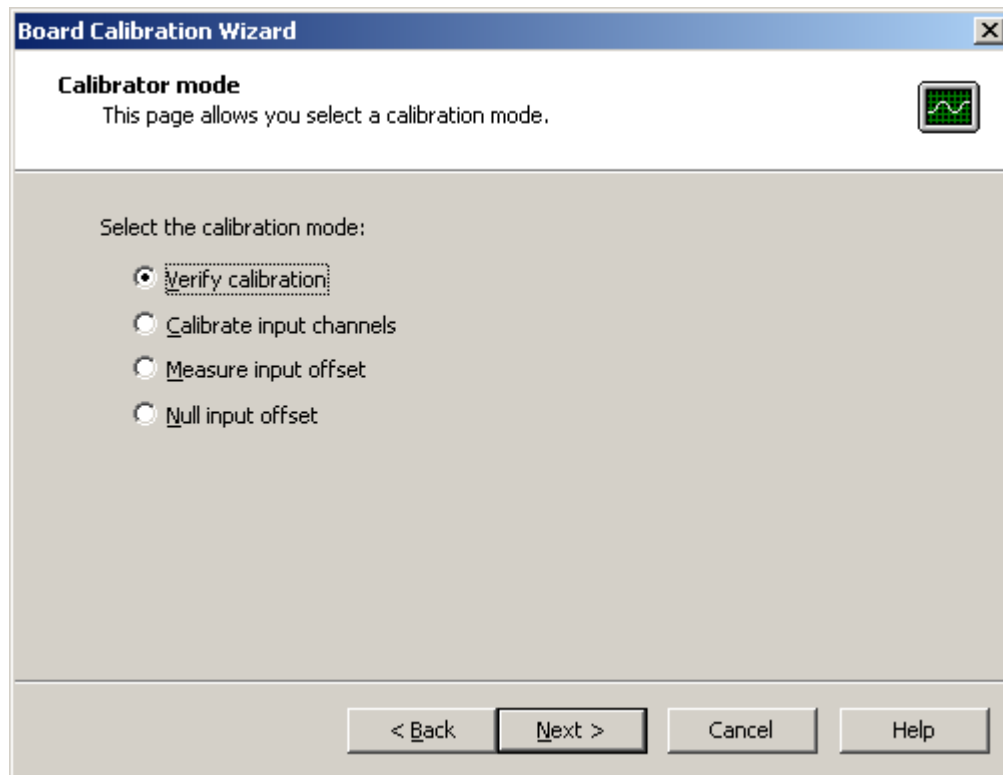

This page allows you to select a basic calibration operation.

Verify calibration

Check this radio button to verify the DC gain and offset calibration of one or more input channels.

Calibrate input channels

Check this radio button to recalibrate the DC gain and offset one or more input channels.

Measure input offset

Check this radio button to measure the offset error of one or more input channels using AC or DC coupling.

Null input offset

Check this radio button to calibrate out offset errors on one or more input channels using either AC or DC coupling.

2.8.3 Options

Figure 84 Options Page

This page allows you to specify the analog input channels, ranges, impedances, and couplings to include in the measurements, and to select advanced calibration options.

Input channels

These radio buttons let you select the input channels to include in the calibration.

- All channels
Calibrate all of the input channels in the active board system.
- Selected channel
Calibrate the input channel selected from the channel list box.

Input range

These radio buttons let you select the input ranges of the selected input channels to include in the calibration.

- All ranges
Calibrate all available input ranges.
- Selected range
Calibrate the input range selected from the input range list box.

Input impedance

These radio buttons let you to select the input impedances of the selected input ranges of the selected input channels to include in the calibration.

- All impedances
Calibrate all available input impedances.
- Selected channel
Calibrate the input impedance selected from the impedance list box.

Note that the impedance radio buttons are disabled in “measure capacitance” mode because this mode requires 1M Ω input impedance.

Input coupling

These radio buttons let you select the input couplings of the selected input impedances of the selected input ranges of the selected input channels to include in the calibration.

- All couplings
Calibrate all available input couplings.
- Selected coupling
Calibrate the coupling selected from the coupling list box.

Note that the input coupling radio buttons are enabled only in “measure frequency response mode”. All other modes require DC coupling.

Note that “Verify” and “Calibrate” modes always use DC coupling.

Back

Press this button to go back to the previous page

Next

Press this button to begin the benchmark test.

Cancel

Press this button exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

More

Press this button to display the **Calibration Options** dialog box, which allows you to set advanced calibration options.

2.8.3.1 Calibration Options

Figure 85. Calibration Options dialog

Calibration Options

Verify calibration

Signal level (% full scale)

Signal frequency (Hz)

Input settling time (ms)

Records per measurement

☐ Set maximum sample rate (MS/s)

Calibrate channel

Signal level (% full scale)

Signal frequency (Hz)

Signal type: ☒ Square wave with external trigger
☐ DC level

External trigger level (%)

☒ Enable interpolation

☐ Calibrate from default values

☐ Enable logging

☐ Use bi-polar signals

OK Cancel Reset

The **Calibration Options** dialog box is displayed when you select “Verify calibration” or “Calibrate input channel” on the **Mode** page. It allows you to select advanced options for calibration and verification operations.

Signal level (Verify)

Enter the signal level that will be used to verify the DC accuracy of a channel’s input range. This value is specified in percent of the input range's full-scale voltage.

Signal frequency (Verify)

Enter the frequency in Hertz of the sine waveform that will be used to verify the AC gain of a channel’s input range. This value is only used on boards without DC coupled inputs.

Input settling time (ms)

Enter the amount of time in milliseconds to wait between configuring a digitizer board and making a measurement. This delay may be required to allow on-board relays to settle if they change output state.

Records per measurement

Enter the number of records to acquire during each measurement. The program will use samples from the last record for the calibration.

Set maximum sample rate (MS/s)

Check this box and enter a sample rate in millions of samples per second to set the internal sample rate used for board calibration and verification tests to value that is less than or equal to the specified sample rate.

Signal level (Calibrate)

Enter the signal level that will be used to calibrate a channel's input range. This value is specified in percent of the input range's full-scale voltage.

Signal frequency (Calibrate)

Enter the frequency in Hertz of the sine waveform that will be used to calibrate the AC gain of a channel's input range. This value is only used on boards without DC coupled inputs.

Signal type (Calibrate)

Select the type of signal you wish to use to calibrate a channel's input range.

- Square wave with external trigger
Check this radio button if the calibrator can provide a square wave signal and external trigger output.
- DC level
Check this radio button if the calibrator can not provide a square wave output signal or external trigger output, or the digitizer does not have an external trigger input.

External trigger level

Enter the external trigger level as a percent of the external trigger range supported by the calibrator device.

Enable interpolation

Check this box to allow the software to calculate the rate of change of error with respect the change in a control parameter, and use this value to estimate the ideal control value required to reduce the error to zero.

When enabled, this option should reduce calibration times.

Calibrate from default DAC values

Check this box to start the calibration from default calibration settings, rather than the calibration data currently stored in the NVRAM of the digitizer board.

If the current calibration data is valid, un-check this option to shorten calibration times. If current calibration data is invalid, check this option to shorten calibration times.

Enable logging

Check this box to allow the software to log detailed information during the calibration procedure. This option may be useful for debugging problems with the board calibration wizard.

Use bi-polar signals

Check this box to enable the software to calibrate using signals that are symmetrical with respect to ground. Uncheck this box to calibrate using signals whose low level is 0 volts.

OK

Press this button to save the current settings, and close this dialog box.

Cancel


Press this button to discard any changes and close this dialog box.

Reset

Press this button to reset all settings to their default values.

2.8.4 Plugin

Figure 86 Calibrator Plugin Page

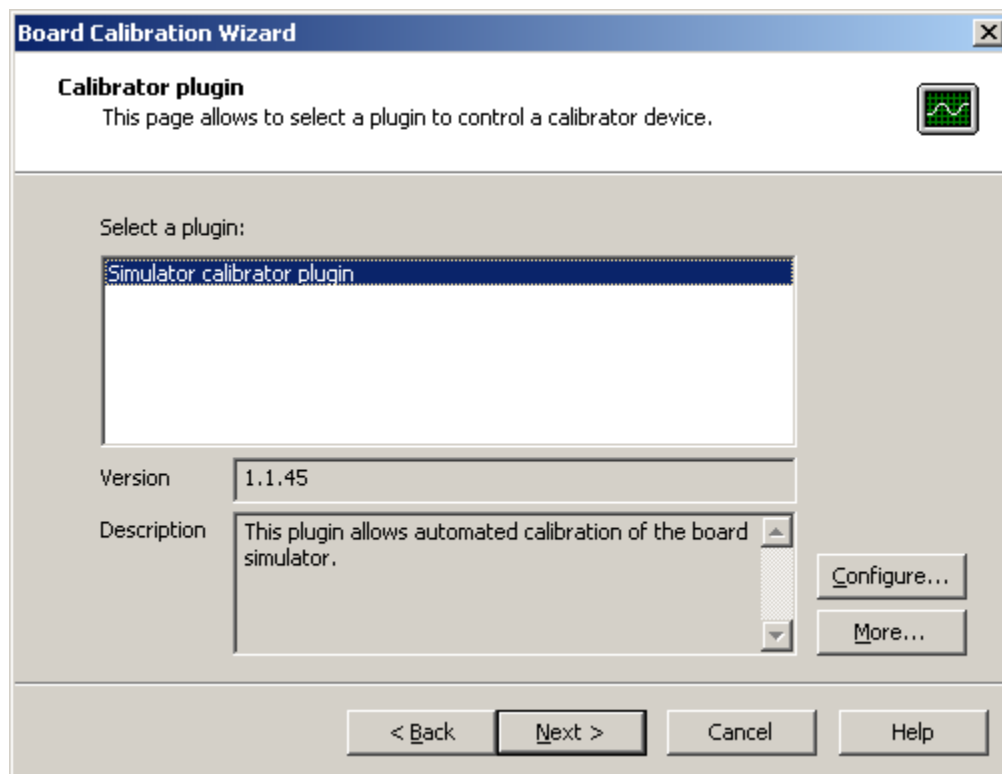

This page allows you to select the calibrator device that will use during the calibration. A calibrator plugin allows the wizard to control a function generator to supply the signals and waveforms required during the calibration process.

Select a plugin

The plugin list displays the names of the calibrator plugin modules detected. You must select a plugin module to continue with the board calibration wizard.

Version

This control displays the version of the selected plugin.

Description

This control displays a brief description of the selected plugin.

Configure

Press this button to display a calibrator plugin specific configuration dialog box. For example, this dialog might allow you to specify the GPIB address of a GPIB connected device.

Back

Press this button to go back to the previous page

Next

Press this button to begin the benchmark test.

Cancel

Press this button exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

More

Press this button to display advanced calibrator plugin options configuration dialog. button to discard any changes to the settings and close the dialog box.

2.8.4.1 Manual Calibrator Plugin Options

Figure 87. Configure Manual Plugin

Configure Manual Plugin

Identification

Manufacturer

Model

Serial number

DC levels

Minimum level (V)

Maximum level (V)

Waveforms

Minimum frequency (MHz)

Maximum frequency (MHz)

Minimum amplitude (Vpp)

Maximum amplitude (Vpp)

Trigger

Minimum level (V)

Maximum level (V)

OK Cancel

The manual calibrator plugin allows you to use a function generator to supply the signals required to calibrate your digitizer boards. The calibration wizard will prompt you to connect the outputs from your function generator to the inputs of a digitizer, and to configure the function generator to supply the signals required by the digitizer.

Manufacturer

Enter the name of the manufacturer of your function generator. This text will appear in the report generated by the calibration wizard.

Model

Enter the model name of your function generator. This text will appear in the report generated by the calibration wizard.

Serial number

Enter the serial number of your function generator. This text will appear in the report generated by the calibration wizard.

Minimum level

Enter the minimum DC voltage level that your function generator is capable of supplying.

Maximum level

Enter the maximum DC voltage level that your function generator is capable of supplying.

Minimum frequency

Enter the minimum sine or square wave frequency that your function generator is capable of supplying.

Maximum frequency

Enter the maximum sine or square wave frequency that your function generator is capable of supplying.

Minimum amplitude

Enter the minimum amplitude of the sine or square wave that your function generator is capable of supplying in volts peak-to-peak.

Maximum amplitude

Enter the maximum amplitude of the sine or square wave that your function generator is capable of supplying in volts peak-to-peak.

Trigger minimum level

Enter the minimum voltage level of the trigger signal that your function generator is capable of supplying.

Trigger maximum level

Enter the maximum voltage level of the trigger signal that your function generator is capable of supplying.

OK

Press this button to apply the current settings and close the dialog box.

Cancel

Press this button to discard the current settings and close the dialog box.

2.8.4.2 Simulator Calibrator Plugin Options

Figure 88. Configure Simulator Calibrator Plugin dialog box

The screenshot shows a dialog box titled "Configure SimCalibrator Plugin". It is divided into two main sections: "Options" and "Identification".

Options Section:

- Minimum frequency (Hz): 1
- Maximum frequency (Hz): 20000000
- Minimum level (V): -5
- Maximum level (V): 5

Identification Section:

- Manufacturer: AlazarTech
- Model: SimCalibrator
- Serial number: 000000

At the bottom of the dialog are "OK" and "Cancel" buttons.

The calibrator simulator plugin is a plugin module that controls the simulated waveform generator used to create signals when AlazarDSO is operating in simulation mode. The **Configure SimCalibrator Plugin** dialog allows you to set the capabilities of this waveform generator.

Minimum frequency

Enter the minimum frequency that the simulated waveform generator will report that it is capable of supplying.

Maximum frequency

Enter the maximum frequency that the simulated waveform generator will report that it is capable of supplying.

Minimum level

Enter the minimum DC level that the simulated waveform generator will report that it is capable of supplying.

Maximum level

Enter the maximum DC level that the simulated waveform generator will report that it is capable of supplying.

Manufacturer

This read-only field displays the manufacturer that the plugin will report to the calibration wizard.

Model

This read-only field displays the model number that the plugin will report to the calibration wizard.

Serial number

This read-only field displays the serial number information that the plugin will report to the calibration wizard.

OK


Press this button to apply the current settings and close the dialog box.

Cancel

Press this button to discard the current settings and close the dialog box.

2.8.5 Report

Figure 89 Calibrator Report Page

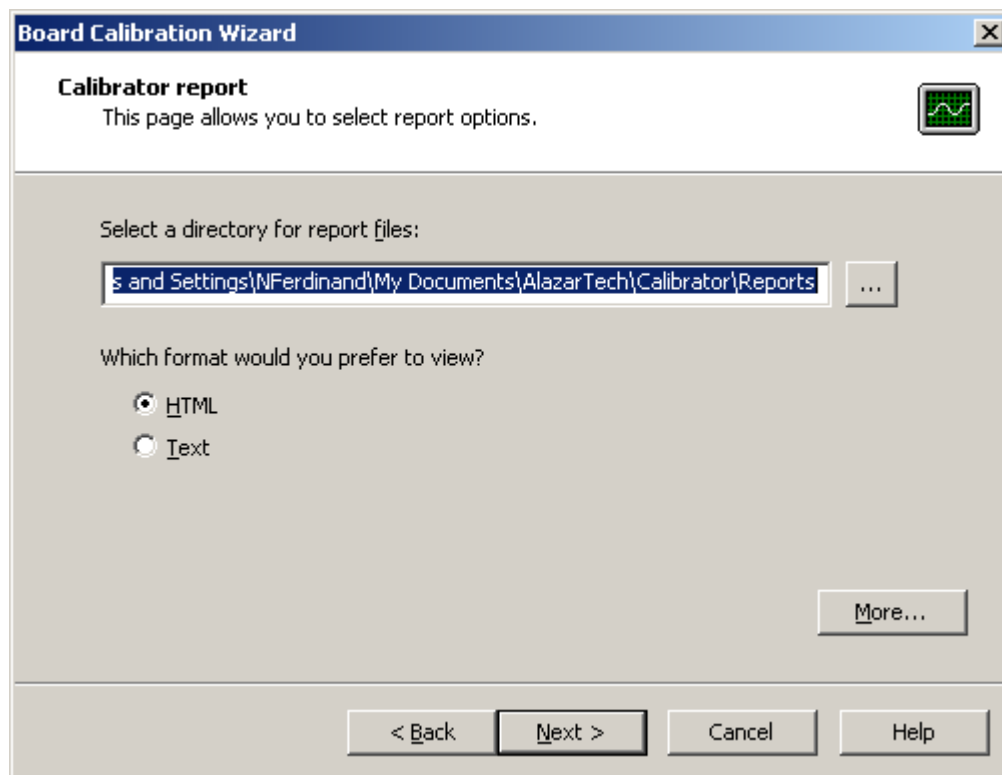

The wizard creates report files containing the details of the tests performed during the calibration. This page allows you to select calibration report options.

Directory

Enter the folder path where the wizard should store its calibration report files, or press the "...” button to display a directory chooser dialog box that allows you to select a folder graphically.

By default, the wizard stores these file in the “%My Documents
%\AlazarTech\Calibrator\Reports” directory.

Format

These radio buttons allow you to select the type of file displayed when you press the “Report” button on the “Finish” page of the wizard.

- **HTML**
These files open in your default web browser, and use color to make visual analysis easier.
- **Text**
These tab separated text files are formatted for analysis in spreadsheet programs.

Back

Press this button to go back to the previous page

Next

Press this button to begin the benchmark test.

Cancel

Press this button exit the wizard.

Help


Press this button to display on-line help with more information about this property sheet page.

More

Press this button to go display the “Calibration Report Options” dialog. This dialog allows you to configure advanced report options.

2.8.5.1 Calibration and Verification Report Options

Figure 90 Calibration Report Options

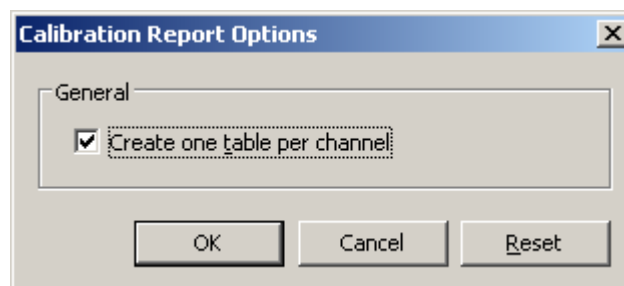

This dialog box allows you to set advanced report options in modes that generate tables but no charts.

Create one table per channel

Check this button to create reports files with one table per input channel. Uncheck this button to create report files with a single table containing results from all input channels.

OK

Press this button to apply the current settings, and close this dialog box.

Cancel


Press this button to discard any changes and close this dialog box.

Reset

Press this button to reset all values to their default values.

2.8.6 Confirm

Figure 91 Confirm Calibrator Options Page

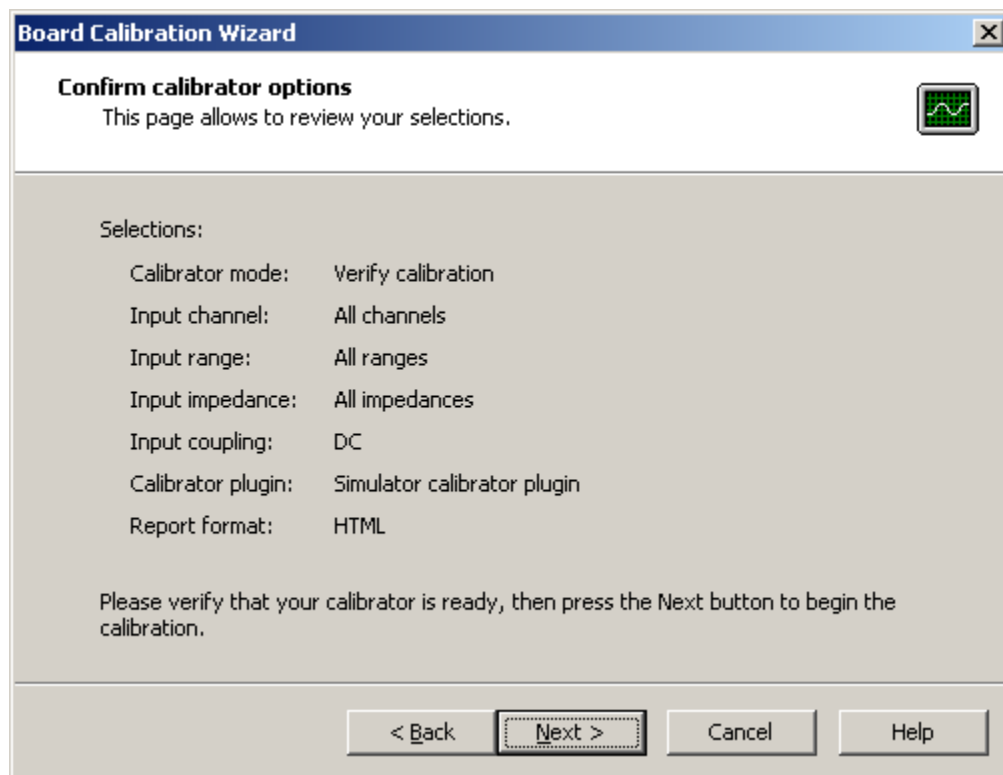

This page displays a summary of your selections, and allows you to verify that these selections are correct before beginning the calibration procedure.

Next

Press this button start the calibration operation.

Back

Press this button to return to the previous page.

Cancel


Press this button exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

2.8.7 Progress

Figure 92 Progress Page

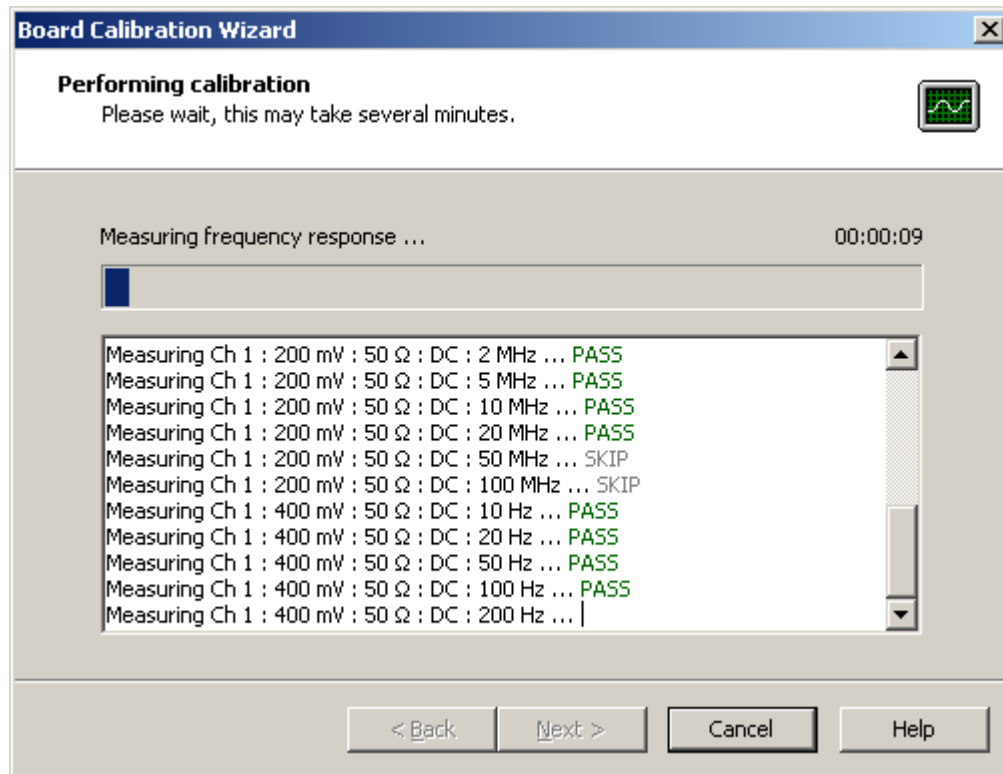

This page displays a progress bar showing the current position in the calibration operation, and a log window with information about the current calibration task.

Cancel


Press this button abort the calibration operation.

Help

Press this button to display on-line help with more information about this property sheet page.

2.8.8 Finish

Figure 93. Finish Page

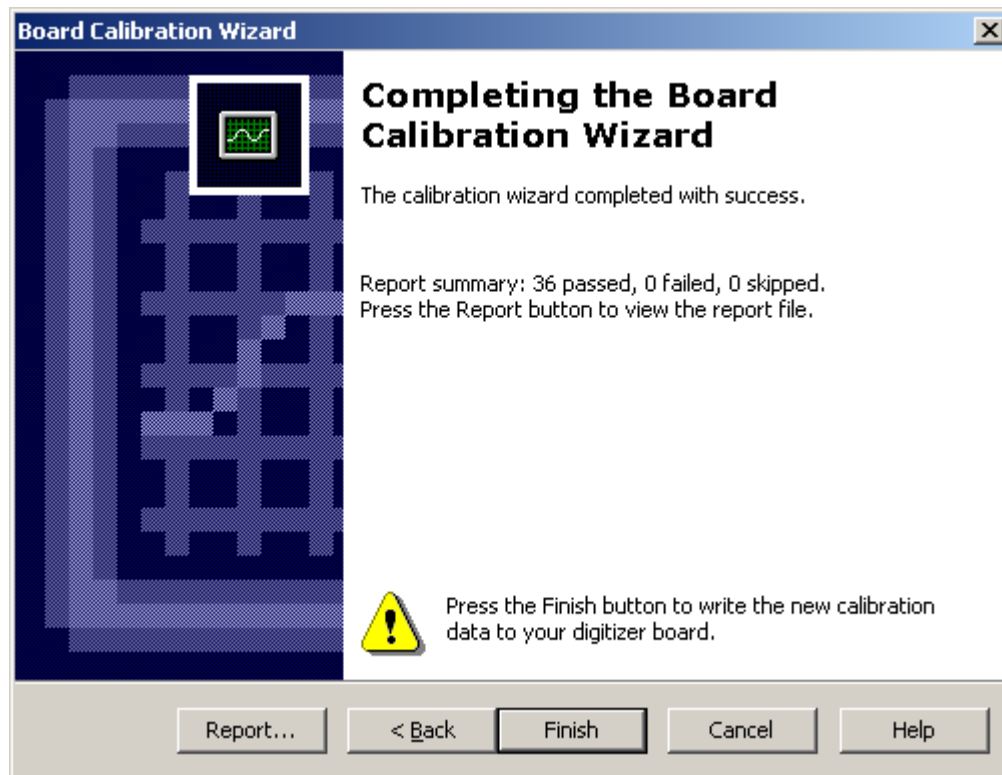

This is the last page of the Board Calibration Wizard. This page displays the calibrator completion status, and a summary of the calibration results.

Report

Press this button to display the calibration report file.

By default, the wizard saves calibration report files in the “%Documents and Settings %\AlazarTech\Calibrator\Reports” folder. It automatically generates file names from the board type, serial number, and current date and time. You can change the report format and output directory in the “Configure Calibrator” dialog box.

Back

Press this button to restart the calibration wizard from the Mode page.

Finish

If new calibration data was found, Press this button to save the new calibration data to NVRAM on the digitizer board. If new calibration data was not found, then press this button to exit the wizard.

Cancel

Press this button to exit the wizard.

Help

Press this button to display on-line help with more information about this property sheet page.

3 Plugin Modules

AlazarDSO can be extended with plugin modules. These modules can examine and modify configuration settings and acquisition data gathered by AlazarDSO while it is running.

3.1 Plugin interface

A plugin is a dynamic link library that exports a function declared by name as follows:

```
extern "C" int AlazarPlugin(int message, void *parameters);
```


AlazarDSO searches the “%Program Files%\AlazarTech\AlazarDSO\Plugins” directory for files with the extension “.dll” when it is started. If it finds a loadable module that exports the function AlazarPlugin, this module is added to the available plugin list.

The plugin list can be viewed in the **Configure Plugins** dialog box. Select **Plugins** from the **Configure** menu to display the **Configure Plugins** dialog box. This dialog box also allows you to enable the plugin interface, and select one or more plugin modules from the list of available plugins that will be called while acquisitions are running.

AlazarDSO calls each active plugin several times during each acquisition with a message indicating its progress in the acquisition, and a message specific parameter. For example, before it writes configuration data to a board, AlazarDSO sends enabled plugins the PLUGIN_CONFIG message, and a pointer to a structure containing the configuration parameters as the message parameter. After each acquisition is completed, but before the data is displayed, AlazarDSO sends enabled plugins the PLUGIN_DISPLAY message, and a pointer to a structure containing the sample data as the message parameter.

The enabled plugins can examine and modify the acquisition settings and sample data, and return a value back to AlazarDSO. AlazarDSO displays the value returned from the plugin in the plugin state field on the status line at the top of the graticule. Plugin states are: plugin inactive, plugin active, and plugin ignore.

Figure 94. Plugin state control

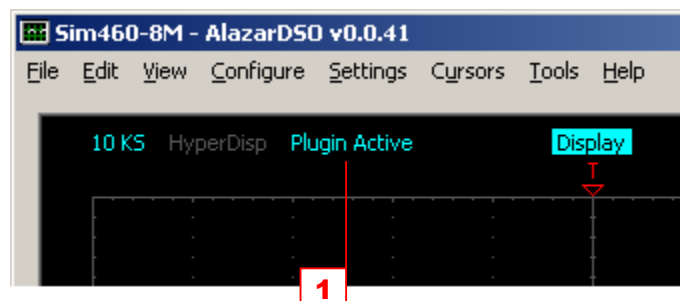

1. The plugin state

AlazarDSO draws the sample data returned from the plugin on screen where it can be processed by a math channel, saved as a reference channel, or exported to file.

3.2 Using plugins

AlazarDSO includes sample plugins to demonstrate the plugin interface.

3.2.1 Save data

This plugin demonstrates how to access configuration and acquisition data by writing all of the configuration and sample data it receives to a file.


To enable this plugin, display the **Configure Plugins** dialog box, check the **Enable** box to enable the plugin interface, select the plugin named “Save data” from the list.

When enabled and acquisitions are started, this plugin creates a file named “AlazarPlugin %date% %time%.txt” in the “My Documents\AlazarTech” folder, and writes the acquisition settings and sample data that it receives from AlazarDSO to this file.

Remember to disable this plugin when it is not needed. Since it writes data to a file with every acquisition, it will reduce the acquisition rate and fill the %My Documents% directory with data files.

Press the “Configure” button to display the “Configure Save Data” plugin dialog box.

Figure 95 Configure Save Data

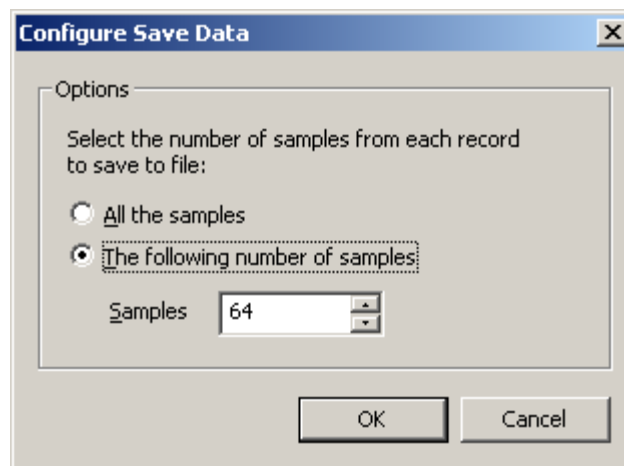

The “Configure Save Data” plugin dialog box allows you to specify the number of samples from each record to save file.

All the samples

Click on this radio button to save all the samples from each record to the file.

The following number of samples

Click on this radio button to specify the number of samples from the start of each record to save to file.

OK

Press to accept these settings and close the dialog box.

Cancel

Press to discard these settings and close the dialog box.


3.2.2 Calculate average of multiple records

This plugin calculates the average sample value from each record in the selected number of records, and modifies the capture buffer to contain one or more records with these average values. The number of records to average can span multiple acquisitions in an acquisition sequence.

To enable this plugin, display the **Configure Plugins** dialog box, check the **Enable** box to enable the plugin interface, select the plugin named “Calculate average of multiple records” from the list, and press the **OK** button to accept these changes.

To configure the plugin, double click on the plugin name in the plugin list, or select the plugin from the plugin list and press the “Configure” button.

Figure 96 Configure Plugin Average dialog box

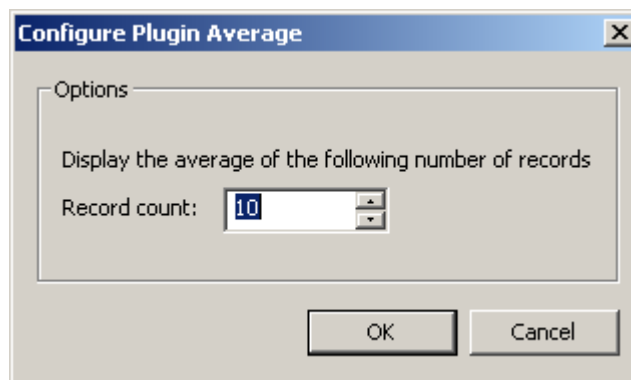**Record count**

Enter the number of records to average. AlazarDSO calculates the average of this number of records, and writes the average record into the capture buffer for display. Note that the record count may span multiple acquisitions in an acquisition sequence.

OK

Press this button to apply the current settings and close the dialog box.

Cancel

Press this button to discard the current settings and close this dialog box.


3.2.3 Display 1-In-N Records

This plugin draws one out of a specified number of records captured during an acquisition sequence.

To enable this plugin, display the **Configure Plugins** dialog box, check the **Enable** box to enable the plugin interface, select the plugin named “Display 1 record in N” from the plugin list.

To select the number of records to discard between each record displayed, press the **Configure...** button to display the “Configure Display 1-In-N Records” dialog box.

Figure 97Configure “Display 1-In-N Records” plugin

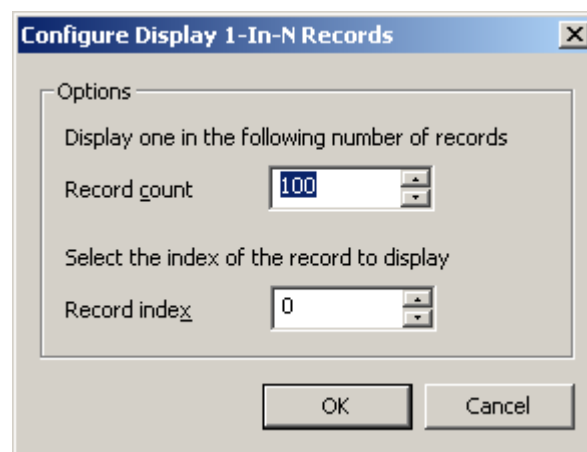

The “Configure Display 1-In-N Records” dialog box allows select the number of records to display from the records acquired.

Record count

Enter a number of records. AlazarDSO displays only one of this number of records captured.

Record index

Enter the zero-based index of a record. AlazarDSO displays this record from each group of “record count” records.

For example, if you wish to display the last of every tenth record acquired, then enter “10” for the “Record count” value and “9” for the “Record index” value.

OK

Press this button to apply the current settings and close the dialog box.

Cancel

Press this button to discard the current settings and close this dialog box.

3.2.4 Acquire At Time

This optional plugin module allows you to specify the date and time at which to start an acquisition sequence. It can also repeat acquisitions at a specified interval, and retrieve time information from a Trimble® Mini-T™ GPS Disciplined Clock Module.

Note that you must purchase this optional plugin module. Please contact support@alazartech.com for more information.

To enable this plugin, display the **Configure Plugins** dialog box, check the **Enable** box to enable the plugin interface, select the plugin named **Acquire At Time** from the plugin list.

To select the date and time of the capture, press the **Configure...** button to display the **Configure PluginAcquireAtTime** dialog box.

Figure 98 Configure Acquire At Time plugin

Controls in the **Configure PluginAcquireAtTime** dialog box are divided into the following groups:

- The “Date and Time” group allows you to specify the date, time, and time scale at which you’d like to start an acquisition sequence.
- The “Repeat” group allows you to wait a specified amount of time after the start of the previous acquisition before starting the next acquisition.
- The “Options” group allows you to obtain date and time information from a Trimble® Mini-T™ GPS Disciplined Clock Module connected to a serial port of the host PC. It also allows you to generate text files containing acquisition parameters, and binary files containing sample data.

Date

Select the acquisition start date from the date control.

Time

Select the acquisition start time from the time control.

Time Scale

Select the time scale from the list box. The current available time scales are

- *Local*
The selected date and time values are in the time zone specified in the Windows “Date / Time Properties” settings on the local PC.
- *UTC*
The selected date and time are UTC times
- *GPS*
The selected date and time are GPS times. Note that if the difference between UTC and GPS time is unknown, it is assumed to be zero.

Now

Press this button to set the start date and time to the current date and time in the selected time scale.

Continue to acquire at the specified interval

Check this button to delay the start of the next acquisition in the acquisition sequence until the current time is the specified interval after the time at the start of the previous acquisition.

Note that if you start an acquisition sequence with a requested start time has already past, then:

- If the “Continue to acquire at the specified interval” button is not checked, the acquisition will begin immediately.
- If the “Continue to acquire at the specified interval” button is checked, then acquisition will start as soon as the current time is an integer number of intervals after the requested start time.

Also note that you specify the total number of acquisitions in the acquisition sequence in the “Configure Acquire” dialog box. To open the “Configure Acquire” dialog box, select the “Acquire...” command from the AlazarDSO “Configure” menu.

Interval

Select the time interval and units to wait between start of the previous acquisition and the start of the next acquisition.

Get time from Trimble Mini-T GPS disciplined clock

Check this box to enable the plugin to obtain timing information from a Trimble® Mini-T™ GPS Disciplined Clock Module.

COM port

Select the serial port to which the Trimble® Mini-T™ GPS Disciplined Clock Module is attached. Note that the plugin assumes that the device’s communication parameters are: 9600 baud, 8 data bits, 1 stop bit, no parity, and no handshaking.

Status

Press this button to display the “Trimble Mini-T GPS Clock Status” dialog box, which shows the current time, position, and GPS status from the device as shown below.

Figure 99 Trimble Mini-T GPS Status dialog

Trimble Mini-T GPS Status		
Date and Time		
GPS	2007/12/26	13:50:27
UTC	2007/12/26	13:50:13
Local	2007/12/26	08:50:13
Position		
Latitude	45.436664	45° 26' 11" N
Longitude	-73.699604	73° 41' 58" W
Altitude	-11.1 m	-36.5 ft
Status		
RX mode	Full position (3D)	
GPS decode	Only 2 usable satellites	
GPS time unknown	UTC time scale	
Test mode	UTC offset unknown	
	UTC PPS output	
Close		

Export acquisition file to text and binary files

Check this box to export an acquisition file to text files and binary files. The text files contain acquisition parameters, and the binary files contain sample data.

When this box is checked, the number of text and binary files created depends on the type of acquisition selected:

- If you run the “Stream To Disk” command, the plugin creates one text file and one binary file for each enabled channel of each board.
- If you run the “Acquire To File” command, the plugin creates one text file and one binary file for each record of each enabled channel of each capture for each board in the acquisition file.

Directory

Enter the directory in which to create the export files, or press the “...” button to browse for the directory.

OK


Press this button to save the current settings, and close this dialog box.

Cancel

Press this button to discard any changes and close this dialog box.

Note that while the Acquire At Time plugin holds off the start of an acquisition, the AlazarDSO status bar changes as shown below.

Figure 100 Status line with Acquire At Time plugin active

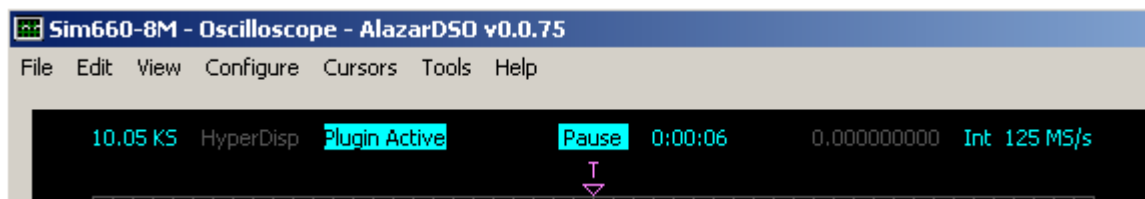

- The plugin state message changes to “Plugin Active” in reverse text.
- The acquisition state message changes to “Pause”
- The “Time in state” text displays the elapsed time that the plugin has paused the start of the next acquisition while waiting for the current time to be greater than or equal to the next acquisition time.


Notes:

- Use the Trimble DSPMon software to configure the clock module. The Acquire At Time plugin does not allow you to modify the configuration of the Trimble® Mini-T™ GPS Disciplined Clock Module.
- The Acquire At Time plugin disables broadcast packets from the Trimble Mini-T when it connects to the module. If the software exits normally, then it will restore the broadcast mask before exiting.

The Trimble DSPMon software requires primary and supplemental timing packets broadcasts to operate normally. If AlazarDSO does not exit normally, then either reset the Trimble Mini-T to restore the settings from EEPROM memory, or re-enable the mask using the Trimble DSPMon software.

To restore the packet broadcast mask using the Trimble DSPMon software, select “Packet Masks and Options...” from the DSPMon “Setup” menu. From the “Packet Masks and Options” dialog, check “Primary Timing (8F-AB)(Bit 0)” and “Supp Timing (8F-AC)(Bit 2)” as shown below, and then click on the “Set Masks” button.

Figure 101 DSPMon “Packet Masks and Options” dialog

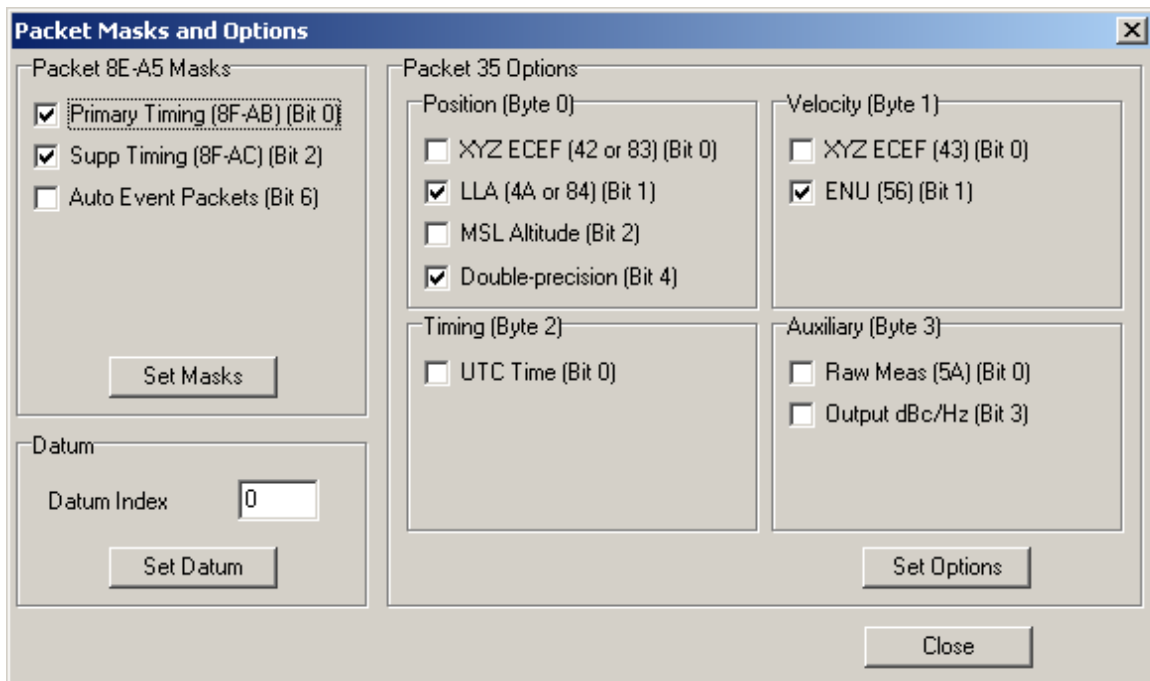

3.2.5 Calculate sum of multiple records (co-addition)

This plugin allows you to accumulate sample values from the records of an acquisition. It can optionally display the sample or accumulated values, and save the accumulated values to a file.

To enable this plugin, display the “Configure Plugins” dialog box, check the “Enable” button to enable the plugin interface, select the plugin named “Calculate sum of multiple records (co-addition)” from the plugin list.

To display the “Configure Co-Addition Plugin” dialog box to configure this plugin, double-click on the plugin name in the list, or highlight the plugin name and press the “Configure...” button.

Figure 102 Configure Co-Addition Plugin dialog box

Configure Co-Addition Plugin

Accumulate

Exclude samples from the following number of records at the start of an acquisition from the accumulation:

Records to exclude: 1

Display

What would you like displayed during the acquisition?

☐ Nothing

☐ Sample data

☒ Accumulated data

Scale factor (%): 100

After displaying a record, acquire but do not display the following number of records:

Records between redraws: 0

Save

☒ Save accumulator values to file after the acquisition

Directory: C:\TEMP

Format: Text volts (*.txt)

OK Cancel

The “Configure Co-Addition Plugin” dialog box allows you to control how sample records are accumulated, displayed, and saved.

Records to exclude

Enter the number of records from the start of an acquisition sequence whose samples should not be included in the accumulation.

Display

The display mode allows you to control what is displayed while the plugin is accumulating sample records during an acquisition sequence.

- **Nothing**
Disable screen updates during the acquisition.
- **Sample data**
Draw records containing sample data.

- **Accumulated data**

Draw a record containing accumulator data.

Scale factor

Enter the amount in percent to scale the display of accumulated sample data. Use this value to reduce the vertical size of the accumulated waveform.

Records between redraws

Enter the number of records to acquire, but not display, after displaying a record on screen. Enter a value that is greater than zero if you do not require that each record be displayed on screen.

Save accumulator values to file after the acquisition

Check this box to enable writing the accumulated sample values to a file after an acquisition sequence completes.

Directory

Enter the directory in which to create the accumulator files, or press the “...” button to browse for the directory.

The plugin creates files named “PluginAccumulate_%date%_%time%_%channel%” in this directory, where %date% and %time% are the date and time at which the file was created, and %channel% is the record channel (A or B). It adds a file extension of “.bin” or “.txt” depending on the file format chosen.

Format

Select accumulated data file format from the list. The file formats include:

- **Binary volts**
Convert each accumulator value to volts and save as a binary number in IEEE 754 double precision floating-point format. There are eight bytes per value stored in little-endian byte order.
- **Binary samples**
Save each accumulator value as a 64-bit binary number where the sample bits are right aligned in the sample bytes. There are eight bytes per value stored in little-endian byte order.
- **Text volts**
Convert each accumulator value to volts and save as an ASCII text number with one sample value per line.
- **Text samples**
Save each accumulator value as an ASCII text number with one value per line.

OK

Press to accept these settings and close the dialog box.

Cancel

Press to discard these settings and close the dialog box.

3.2.6 Power monitor

AlazarTech PCIe digitizers include temperature sensors and A/D converters that allow real-time monitoring of on-board temperatures and power supply voltage levels, where the number of hardware sensors varies by board model. The power monitor plugin allows you to display, chart, and record these sensor values.


To enable the Power Monitor plugin:

- Select the “Configure | Plugins” menu item to display the “Configure Plugins” dialog box,
- Check the Enable button to enable the plugin interface
- Check the box to the left Power Monitor list item in the plugin list to enable the Power Monitor plugin.

The Power Monitor plugin includes a configuration dialog box that allows you to display the values of all on-board sensors, and to select one sensor value to display as strip chart, or save to a file.

To display the “Configure Power Monitor” dialog box:

- Left-click click on the “Power Monitor” list item to select the “Power Monitor” plugin and then press the “Configure” button.
- Double-click on the “Power Monitor” list item.

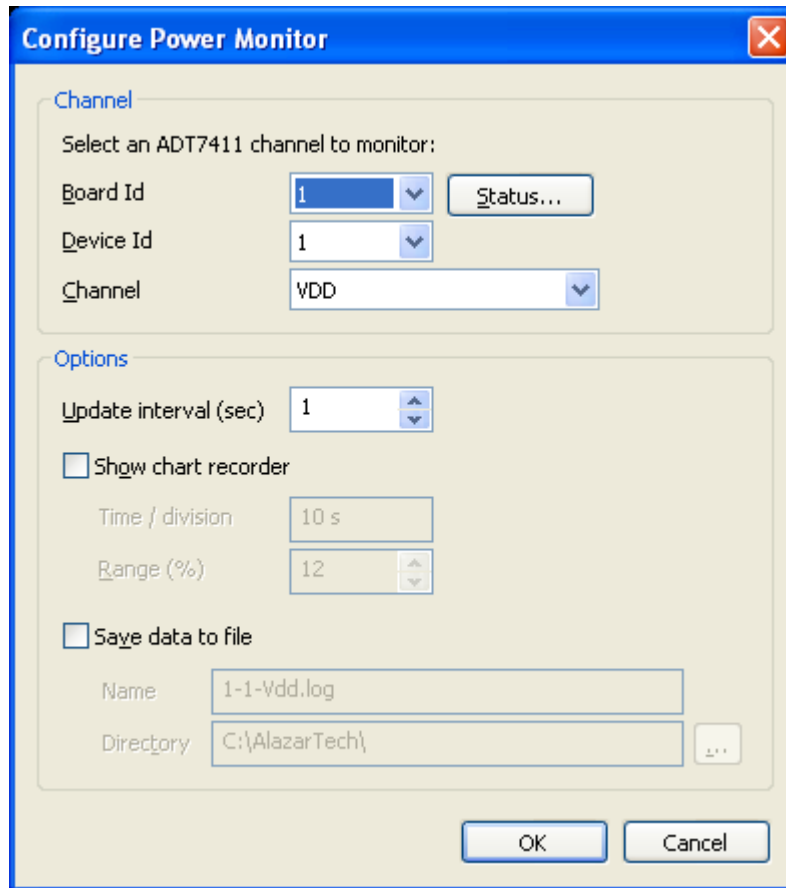Figure 103 Configure Power Monitor plugin dialog box

The dialog box is titled "Configure Power Monitor" and contains two main sections: "Channel" and "Options".

Channel Section:

- Text: "Select an ADT7411 channel to monitor:"
- Board Id: A dropdown menu with "1" selected.
- Device Id: A dropdown menu with "1" selected.
- Channel: A dropdown menu with "VDD" selected.
- Status...: A button to the right of the Board Id dropdown.

Options Section:

- Update interval (sec): A spinner box with "1" selected.
- Show chart recorder: An unchecked checkbox.
- Time / division: A text box with "10 s".
- Range (%): A spinner box with "12" selected.
- Save data to file: An unchecked checkbox.
- Name: A text box with "1-1-Vdd.log".
- Directory: A text box with "C:\AlazarTech\" and a browse button (three dots).

At the bottom right are "OK" and "Cancel" buttons.


Board Id

Select the board identifier of the board whose temperatures and voltages to read.

Status


Press this button to display the power monitor "Status" dialog. This dialog box displays values in real-time read from all of the temperature and voltage sensors available on the selected board.

Figure 104 Power Monitor Status plugin dialog box

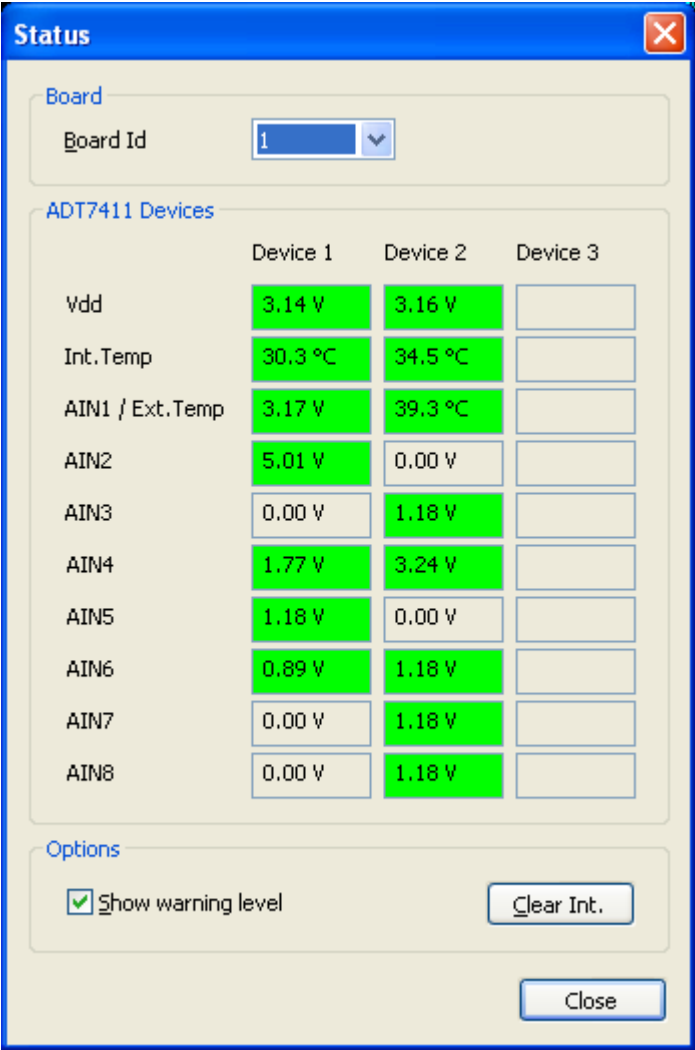

Hover the mouse button over an entry display a tool-tip with the name, ideal value, and limits of that entry.

Figure 105 Power Monitor Status Tool tip

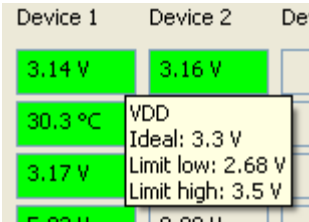

Check the “Show warning level” check box to display values exceeding warning limits in yellow.

If a value exceeds high or low limit values, then the ADT7411 generates an interrupt that causes a red LED on the digitizer board connected to that ADT7411 to be turn on. Press the “Clear Int.” button clear the interrupt and turn off the LED.

Device Id

Each PCIe digitizer board includes a number of Analog Devices ADT7411 temperature and A/D sensor devices, where the number of devices depends on the board model. Select the index of the ADT7411 device to read.

Channel

Select the channel of the selected ADT7411 that you wish to display as a chart, or log to file. This list box displays the channel name, and the temperature or voltage sensor that is connected to it.


Update interval

Enter the time, in seconds, between record chart and data logger updates.

Show chart record

Check this button to display the value of the selected ADT7411 device and channel graphically in chart. The most recent measurement is displayed on the right side of the chart, with older values scrolling towards the left.

Figure 106 Power Monitor Recorder Chart

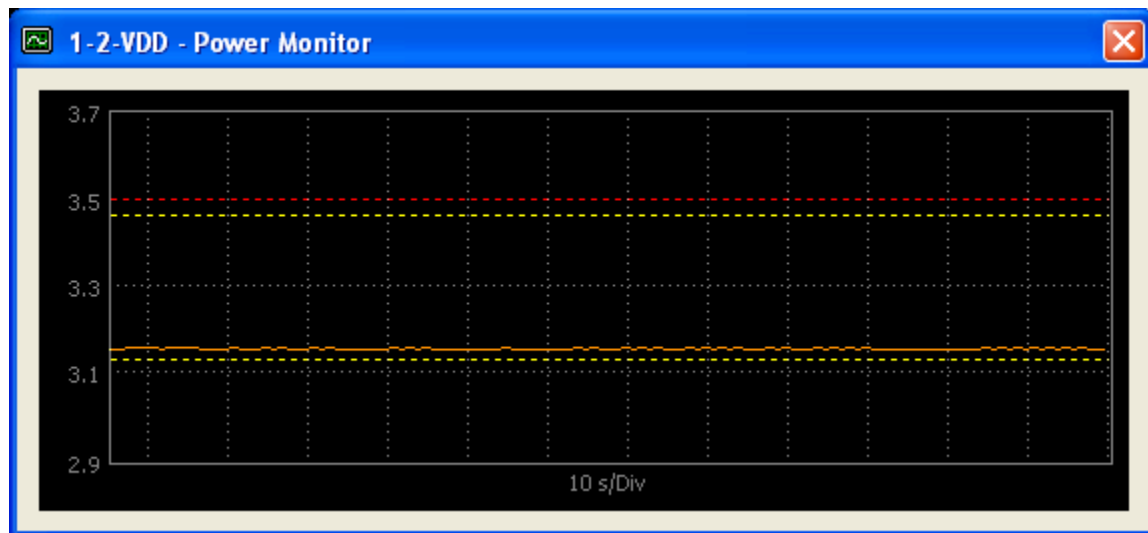

The time per horizontal division is a function of the update interval. Increase the update interval to increase the time per division.

The orange line above shows the sensor value, with the most recent value on the right, and the value about 130 seconds ago on the left. Red dashed horizontal lines show error levels, and yellow dashed horizontal lines show warning levels.

The “Range” edit control specifies the vertical scale of the chart in a percent of the error range, or as a percent around the nominal value if there is no error range. Increase the “Range” value to increase the number of degrees or volts per vertical division to see a larger range of values.

Save data to file

Check this button to save the value of the selected ATD7411 device and channel to a log file. The file format is comma separated text, with one line per entry. Each entry contains the date, time, and value of the selected measurement. For example:

```
2010/10/01, 16:14:16, 3.34277
2010/10/01, 16:14:17, 3.08301
2010/10/01, 16:14:18, 3.28125
```

Name

Select the name of the log file.

Directory

Select the directory in which to create the file.

4 File Formats


This section provides reference information about the file formats that can be imported or exported by AlazarDSO.

4.1 Text records in samples

This file format contains lines of 8-bit ASCII text. Each line stores the code of one sample point from a record. Aside from the sample data, no other information about the acquisition is saved in the file.

The following figure shows the first few lines from a “text record in samples” file.

Figure 107 Text record in samples file

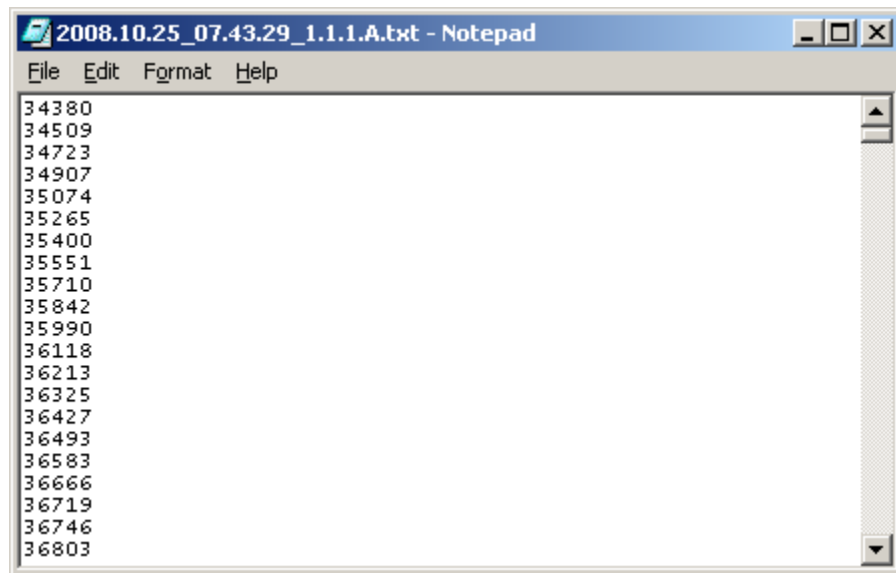

The following code fragment demonstrates how to convert sample values to volts:

```
double
ConvertSampleValueToVolts (
    int nSampleValue      // sample code value from file
)
{
    // board specific constant
    int nBitsPerSample = 16;    // for ATS660
    int nBytesPerSample = (nBitsPerSample + 7) / 8;

    // input range selected for this channel
    double dInputRange_volts = 4.;

    // AlazarTech boards are calibrated as follows
    double dSampleZeroValue = (1 << (nBitsPerSample - 1)) - 0.5;
    double dSampleMaxValue = (1 << (nBitsPerSample - 1)) - 0.5;

    // remove left-shift of sample bits in sample bytes
    int nSampleBitShift = (nBytesPerSample * 8) - nBitsPerSample;
```

```

nSampleValue = nSampleValue >> nSampleBitShift;

// convert from sample value to volts
double dSignal_volts =
    dInputRange_volts *
    ((double)(nSampleValue - dSampleZeroValue) / dSampleMaxValue);

return dSignal_volts;
}


```

4.2 Text records in volts

This file format contains lines of 8-bit ASCII text. Each line stores the value in volts of one sample point from a record. Aside from the sample data, no other information about the acquisition is saved in the file.

The following figure shows the first few lines from a “text records in volts” file.

Figure 108 Text record in volts file

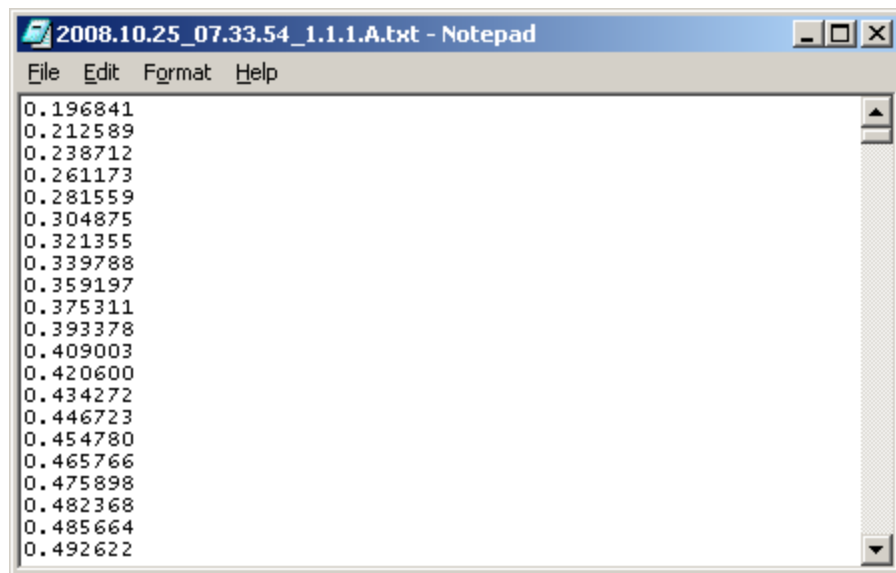

4.3 Binary records in samples

This file format contains sample data as binary values. Each sample value is stored as one or two bytes in the file. Multi-byte values are stored least significant byte first. Aside from the sample data, no other information about the acquisition is saved in the file.

The following figure displays the first 256 bytes of a “binary record in samples” file from an ATS660 with 16-bit sample values. Note that the first sample value is 0x864C stored in “little-endian” format.

Figure 109 Binary record in samples file

```

000000 4C 86 CD 86 A3 87 5B 88 02 89 C1 89 48 8A DF 8A
000010 7E 8B 02 8C 96 8C 16 8D 75 8D E5 8D 4B 8E 8D 8E
000020 E7 8E 3A 8F 6F 8F 8A 8F C3 8F CA 8F E4 8F F2 8F
000030 EF 8F EE 8F AF 8F A6 8F 6B 8F 58 8F 10 8F AD 8E
000040 69 8E 1C 8E A9 8D 37 8D B7 8C 3E 8C C7 8B 1B 8B
000050 A5 8A EF 89 59 89 B8 88 1F 88 4E 87 9C 86 F8 85
000060 17 85 6E 84 A1 83 D0 82 F5 81 17 81 64 80 9A 7F
000070 C1 7E F9 7D 23 7D 64 7C 9B 7B EF 7A 2D 7A 68 79
000080 9F 78 F7 77 4F 77 BC 76 09 76 4C 75 C4 74 31 74
000090 B3 73 49 73 CF 72 4C 72 0D 72 98 71 34 71 FA 70
0000a0 A9 70 9B 70 5F 70 29 70 0D 70 02 70 FA 6F 20 70
0000b0 23 70 59 70 71 70 A0 70 D3 70 1C 71 79 71 C4 71
0000c0 2A 72 7B 72 05 73 73 73 F9 73 7D 74 1A 75 B4 75
0000d0 47 76 03 77 AB 77 51 78 ED 78 BA 79 7C 7A 44 7B
0000e0 09 7C C2 7C 91 7D 65 7E 30 7F 07 80 DF 80 B1 81
0000f0 63 82 1E 83 E8 83 B4 84 81 85 52 86 0E 87 AD 87

```

Please see section 4.1 “Text records in samples” above for instructions on converting sample values to volts.

4.4 Binary records in volts

This file format contains sample data as binary values. Each sample value is converted to volts and stored as an 8-byte IEEE 754 double precision floating-point value. Multi-byte values are stored least significant byte first. Aside from the sample data, no other information about the acquisition is saved in the file.

The following figure displays the first 256 bytes of a “binary record in volts” file. Note that the first sample in the record is 0x3FC6DA16:DA16DA17 in “little-endian” format, or 0.17853055619134814 in decimal when converted from floating-point format.

Figure 110 Binary record in volts file

```

000000 17 DA 16 DA 16 DA C6 3F 1A 9A 19 9A 19 9A C9 3F
000010 1C 4A 1C 4A 1C 4A CC 3F 1F AA 1E AA 1E AA CE 3F
000020 11 95 10 95 10 95 D0 3F 12 85 11 85 11 85 D1 3F
000030 13 C9 12 C9 12 C9 D2 3F 14 FF 13 FF 13 FF D3 3F
000040 15 17 15 17 15 17 D5 3F 16 25 16 25 16 25 D6 3F
000050 17 27 17 27 17 27 D7 3F 18 E9 17 E9 17 E9 D7 3F
000060 19 B3 18 B3 18 B3 D8 3F 1A B7 19 B7 19 B7 D9 3F
000070 1A 37 1A 37 1A 37 DA 3F 1B DB 1A DB 1A DB DA 3F
000080 1B 4D 1B 4D 1B 4D DB 3F 1C CD 1B CD 1B CD DB 3F
000090 1C 49 1C 49 1C 49 DC 3F 1D 93 1C 93 1C 93 DC 3F
0000a0 1D E5 1C E5 1C E5 DC 3F 1D 2D 1D 2D 1D 2D DD 3F
0000b0 1D 13 1D 13 1D 13 DD 3F 1D 3F 1D 3F 1D 3F DD 3F
0000c0 1D 2F 1D 2F 1D 2F DD 3F 1D 17 1D 17 1D 17 DD 3F
0000d0 1D E5 1C E5 1C E5 DC 3F 1D B5 1C B5 1C B5 DC 3F
0000e0 1D 8F 1C 8F 1C 8F DC 3F 1C EB 1B EB 1B EB DB 3F
0000f0 1B 75 1B 75 1B 75 DB 3F 1B 1B 1B 1B 1B 1B DB 3F

```

4.5 Alazar Text Records

This file format contains an ASCII text header followed by ASCII text sample data. The file begins with an ASCII text record header that stores information about the program, board, acquisition, and channel. This header is followed by sample data with one sample

value per line. Each line stores the index of the sample in the record, the time in seconds of the sample from the trigger point in the record, the sample value as an ADC code, and the sample value in volts.

The following figure shows the header and first few sample points of an “Alazar text record” file.

Figure 111 Alazar text record file

```

2008.10.25_08.23.25_1.1.1.A.txt - Notepad
File Edit Format Help
[AlazarData]
File Version, 1
Creator, AlazarDSO
Creator Version, 1.0.17
Creation Date, 2008/10/25
Creation Time, 08:23:31.953

[Board Information]
Board Type, AT5660
Bits Per Sample, 16
Max Samples Per Channel, 8388608
Serial Number, 0000
Board Options, 000000
Latest Calibration, 010100
SDK Version, 0.0.0
Driver Version, 0.0.0
CPLD Version, 0.0
ASoPC Signature, 00000000
System Id, 1
Board Id, 1

[Acquisition Settings]
Bits Per Sample, 16
Bytes Per Sample, 2
Samples Per Record, 10000
Samples Per Second, 1.25e+008
Records Per Capture, 1
Trigger Delay In Samples, 0
Pre-Trigger Samples, 4992

[Channel 0 Settings]
Disabled, 0
Input Range (volts), 4
Probe Attenuation, 1

[Record 0 Timestamp]
Timestamp High, 9765
Timestamp Low, 160
Timestamp (sec), 0.040000000

[Acquisition Data]
First Sample, 0
Sample Count, 10000

[Sample, Time (sec), Value, Volts]
0, 0.039960064, 34230, 0.178531
1, 0.039960072, 34406, 0.200015
2, 0.039960080, 34578, 0.221012
3, 0.039960088, 34730, 0.239567
4, 0.039960096, 34890, 0.259098
5, 0.039960104, 35010, 0.273747
6, 0.039960112, 35172, 0.293523
7, 0.039960120, 35327, 0.312444
8, 0.039960128, 35467, 0.329534
9, 0.039960136, 35602, 0.346014

```


These files can be opened in a text editor like Notepad, or a spreadsheet program that can import comma separated value files like Microsoft Excel.

4.6 Alazar Binary Records

This file format contains an ASCII text header followed by binary sample data. The file begins with an ASCII text record header that stores information about the program, board, acquisition, and channel. This header is followed by sample data as binary values. Each sample value is stored as one or two bytes sample entries depending on board's sample size in bits. Sample bits are right aligned in sample bytes, and multi-byte values are stored least significant byte first.

The following figure shows the ASCII header of an “Alazar binary record” file.

Figure 112 Alazar binary record file

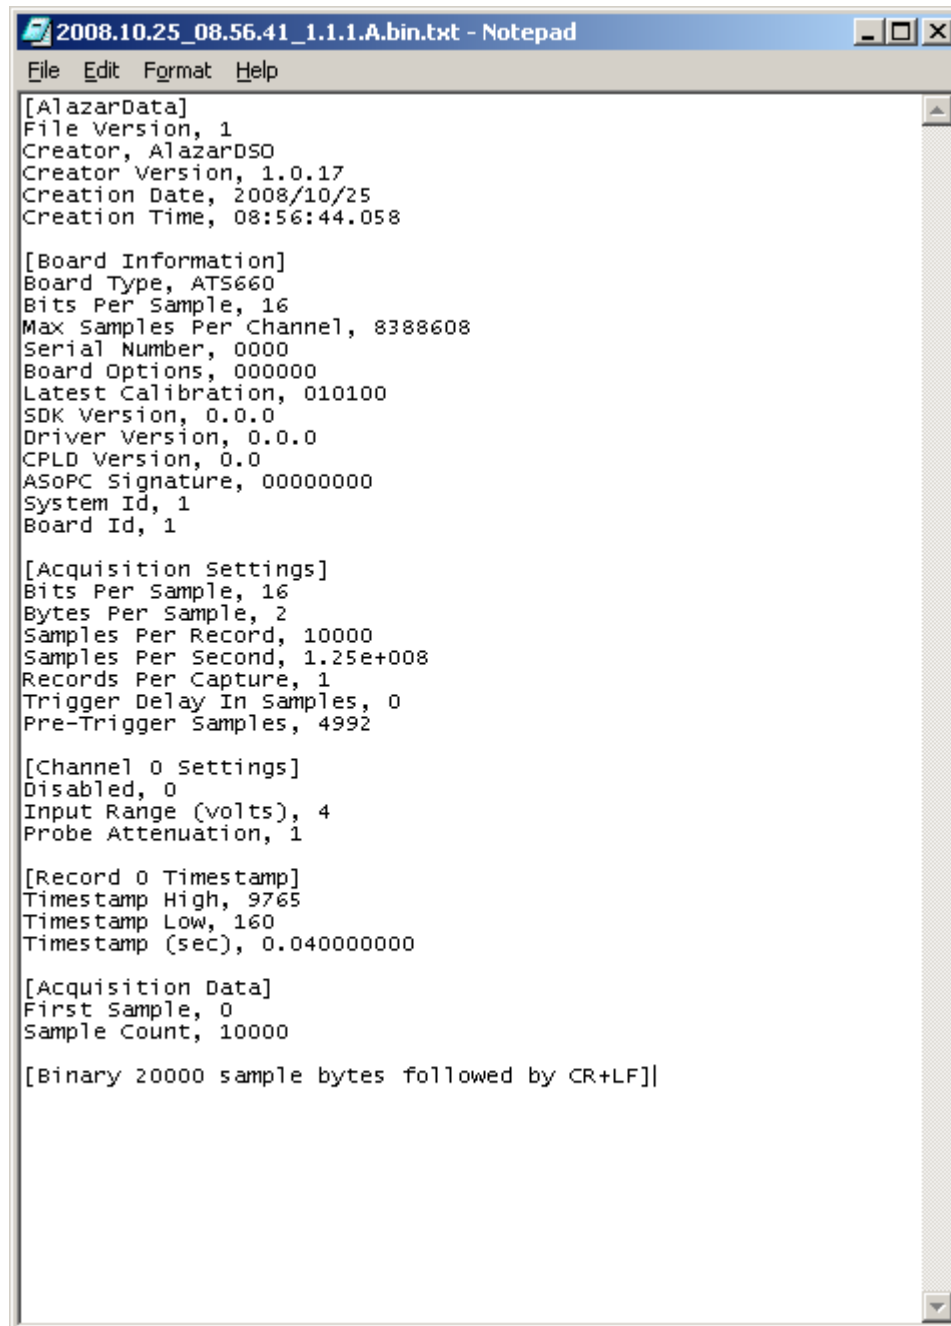

These files cannot be opened in a text editor since they contain binary data. But they require less disk space than files created text-only formats, and are well suited for use by software written to process them.

4.7 API Panel Records

This file format is used by AlazarTech API Panel software. AlazarDSO can import these files.

4.8 MATLAB Arrayys

This file format is used by MATLAB® numerical computing software to load and store data arrays. AlazarDSO saves records as 2D arrays in MATLAB® Level-4 MAT format. Each file contains an array of sample data, and an array of time data. AlazarDSO can load Level-4 or -5 MAT files containing 2D arrays without imaginary data.

4.9 FlexPro Records

FlexPro® data analysis and presentation software by Weisang GmbH uses this file format. AlazarDSO saves sample values as codes or volts.

4.10 ATB Acquisition Files

AlazarTech ATB files are binary files that contain a header describing acquisition parameters, followed by sample data. The following figure shows the structure of an ATB file.

Figure 113 ATB file format

CAPTURE FILE HEADER
CHANNEL FILE HEADER array
Binary sample data

4.10.1 Capture File Header

An ATB file starts with a CAPTURE_FILE_HEADER structure. This structure identifies the file and defines its properties. The following figure displays a capture file header structure.

Figure 114 Capture file header

000000	41	54	53	62	C0	00	00	00	10	00	00	00	02	00	00	00	ATSb.....
000010	10	27	00	00	00	00	00	00	00	00	00	00	65	CD	9D	41e..A
000020	F1	68	E3	88	B5	F8	14	3F	00	00	00	00	80	13	00	00	.h.....?
000030	01	00	00	00	01	00	00	00	02	00	00	00	00	00	00	00
000040	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
000050	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
000060	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
000070	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
000080	40	03	00	00	00	00	00	00	00	00	00	00	00	00	00	00	@.....
000090	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
0000a0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
0000b0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

```

struct CAPTURE_FILE_HEADER
{
    DWORD      m_dwType;
    DWORD      m_dwSize;
    int        m_nBitsPerSample;
    int        m_nBytesPerSample;
    UINT       m_uSamplesPerRecord;
    DWORD      m_dwReserved_0;
    double     m_dSamplesPerSecond;
    double     m_dSecondsPerRecord;
    int        m_nTrigDelay_samples;
    UINT       m_uPreTrig_samples;
    int        m_nRecordsPerCapture;
}

```

```

        int          m_nCapturesPerFile;
        int          m_nChannels;
        WCHAR        m_cComment[32];
        DWORD        m_dwFlags;
        DWORD        m_dwDataOffset_bytes;
        DWORD        m_dwStreamFlags;
        DWORD        m_nTimestampMultiplier;
        DWORD        m_dwReserved[12];
};

```

m_dwType

Specifies the file type. It must be 'bSTA'.

m_dwSize

Specifies the size in bytes of the CAPTURE_FILE_HEADER structure.

*m_nBitsPerSample**m_nBytesPerSample**m_uSamplesPerRecord**m_dSamplesPerSecond**m_dSecondsPerRecord**m_uTrigDelay_samples**m_nPreTrig_samples**m_nRecordsPerCapture*

Specifies the acquisition properties.

m_nCapturesPerFile

Specifies the number of captures in the file.

m_nChannels

Specifies the total number of CHANNEL_FILE_HEADER structures that follow.

m_cComment[32]

Specifies a user-defined comment for this acquisition.

m_dwFlags

Specifies attributes of the file. These attributes may include:

Table 9 Capture file header flags

Value	Meaning
CFHF_SAMPLE_INTERLEAVED 0x00000001	If this flag is set, samples in a record are channel interleaved (i.e. A-B-A-B). If not set, samples in a record are channel contiguous (i.e. A-A-B-B).
CFHF_CONTINUOUS 0x00000002	If set, each record is a transfer in a continuous acquisition.
CFHF_STREAM 0x00000004	This flag indicated how the sample data is organized in the file. See section 4.10.3 below.

m_dwDataOffset_bytes

Specifies the offset in bytes from the start of file of the sample data.

m_dwStreamFlags

When the CFHF_STREAM bit is set, then this field contains flags that define how the sample data is organized in the file. See the section 4.10.3 below.

m_nTimestampMultiplier

This value specifies a board specific multiplier used in the conversion of timestamp values from clock ticks to seconds.

4.10.2 Channel File Headers

A CHANNEL_FILE_HEADER structure specifies the properties of one input channel.

An array of CHANNEL_FILE_HEADERS structures follows the CAPTURE_FILE_HEADER structure in an ATB file. Note that the m_nChannels field from the CAPTURE_FILE_HEADER defines the number of channel file header structures in the file.

```
struct CHANNEL_FILE_HEADER
{
    BOOL        m_bDisabled;
    DWORD       m_dwReserved_0;
    double      m_dInputRange_volts;
    double      m_dProbeAttenuation;
    DWORD       m_dwReserved[4];
};
```

m_bDisabled

Specifies if the channel is disabled. If the channel is disabled, then no records from the channel are written to the file.

m_dInputRange_volts

Specifies the input range of the sample data in volts

m_dProbeAttenuation

Specifies the attenuation of the probes used during the acquisition.

4.10.3 Sample Data

The first byte of sample data is located at the offset in bytes from the start of the file specified by the m_dwDataOffset_bytes field of the CAPTURE_FILE_HEADER structure.

The CFHF_STREAM (0x00000004) flag in m_dwFlags field of the CAPTURE_FILE_HEADER structure defines how the sample data is organized in the file. If this flag is not set, then the records are arranged as described in section 4.10.3.1 “Normalized records”.

If the CFHF_STREAM flag is set, then the records are arranged as described in section 4.10.3.2 “Raw records”. The “Raw records” format was introduced with AlazarDSO 1.0.9, and is used by default.

Note that you can enable using “Normalized records” by un-checking the “Create ATB files in stream format” check box in the “Advanced Options” dialog box.

4.10.3.1 Normalized records

If the CFHF_STREAM (0x00000004) flag in m_dwFlags field of the CAPTURE_FILE_HEADER structure is not set, then AlazarDSO arranges sample data using a normalized format, independent of the method used to transfer data from the digitizer board to host memory.

If the CFHF_CONTINUOUS (0x00000002) flag is set in the m_dwFlags field of the CAPTURE_FILE_HEADER structure, then the file does not include record timestamps. If the CFHF_CONTINUOUS flag is not set, then the file includes record timestamps.

If the CFHF_SAMPLE_INTERLEAVED (0x00000001) flag is set in the m_dwFlags field of the CAPTURE_FILE_HEADER structure, then samples from a record from Ch A and Ch B are interleaved (i.e. A-B-A-B). That is, if both Ch A and B are enabled, then a sample from Ch A is followed by a sample from Ch B.

The sample data is arranged in the following figure.

Figure 115 Channel interleaved records

Board 0 Record 0 Timestamp
Board 0 Record 0 Interleaved Ch A and Ch B samples
Board 0 Record 1 Timestamp
Board 0 Record 1 Interleaved Ch A and Ch B samples
...
Board 0 Record N-1 Timestamp
Board 0 Record N-1 Interleaved Ch A and Ch B samples
Board 1 Record 0 Timestamp
Board 1 Record 0 Interleaved Ch A and Ch B samples
...

If the CFHF_SAMPLE_INTERLEAVED (0x00000001) flag is not set, then samples from each channel are stored contiguously in the file. That is, the samples for one record of Ch A (if enabled) are followed the samples for the corresponding record from Ch B (if enabled).

The sample data is arranged as shown in the following figure.

Figure 116 Channel contiguous records

Board 0 Record 0 Timestamp
Board 0 Record 0 Ch A samples
Board 0 Record 0 Ch B samples

Board 0 Record 1 Timestamp
Board 0 Record 1 Ch A samples
Board 0 Record 1 Ch B samples
...
Board 0 Record N-1 Timestamp
Board 0 Record N-1 Ch A samples
Board 0 Record N-1 Ch B samples
Board 1 Record 0 Timestamp
Board 1 Record 0 Ch A samples
Board 1 Record 0 Ch B samples
...

The `m_nBytesPerSample` field of the `CAPTURE_FILE_HEADER` defines the number of bytes per sample, and the `m_uSamplesPerRecord` field defines the number of samples per record.

Record timestamps, if available, are stored in a record timestamp structure preceding the record. The following code fragment shows how to convert a timestamp value from clock ticks to seconds.

```
struct RECORD_TIMESTAMP
{
    DWORD   dwHighPart;
    DWORD   dwLowPart;
};

double
TimestampToSeconds (
    RECORD_TIMESTAMP *pRecordTimestamp,
    CAPTURE_FILE_HEADER *pCaptureFileHeader
)
{
    DWORD dwTimestampHigh = pRecordTimestamp->dwHighPart;
    DWORD dwTimestampLow = pRecordTimestamp->dwLowPart;

    INT64 nTimestamp_counts;
    nTimestamp_counts = ((INT64) dwTimestampHigh) << 8;
    nTimestamp_counts |= dwTimestampLow & 0x0fff;

    double dTimestamp_sec =
        (double) nTimestamp_counts *
        pCaptureFileHeader->m_nTimestampMultiplier /
        pCaptureFileHeader->m_dSamplesPerSecond;

    return dTimestamp_sec;
}
```

4.10.3.2 Raw records

AlazarTech digitizer boards support a number of different methods to transfer sample data from on-board to host memory. Each transfer method organizes sample data differently in host memory.

When the CFHF_STREAM (0x00000004) flag in m_dwFlags field of the CAPTURE_FILE_HEADER structure is set, AlazarDSO writes records to an ATB file exactly as the records were arranged in host memory. The m_dwStreamFlags field of the CAPTURE_FILE_HEADER structure defines how the records were arranged in host memory.

Table 10 Capture file header stream flags

Value	Meaning
CBF_AUTODMA (0x00000001) CBF_NO_PRETRIGGER (0x00000002) CBF_SAMPLE_INTERLEAVED (0x00000010)	These flags specify the arrangement of sample data in the file.
CBF_HAVE_HEADER (0x00000004)	If set, each record is preceded by a record header.
CBF_ADC_CALIBRATION_V_1 (0x00000008)	If set, then the sample zero level is $2^{(\text{BitsPerSample} - 1)}$ and the maximum amplitude is $(2^{(\text{BitsPerSample} - 1)} - 1)$. If not set, then sample zero level is $2^{(\text{BitsPerSample} - 1) - 0.5}$ and the maximum amplitude is $2^{(\text{BitsPerSample} - 1) - 0.5}$.

Note that the prefix “CBF_” stands for “capture buffer flag”, where a “capture buffer” is a data structure used by AlazarDSO and its plugins to exchange information about a data transfer from on-board to host memory.

4.10.3.2.1 AutoDMA from FIFO

Figure 117 Stream flags for FIFO transfers

$(m_dwStreamFlags \& \text{CBF_AUTODMA}) \neq 0$
$(m_dwStreamFlags \& \text{CBF_SAMPLE_INTERLEAVED}) \neq 0$

If the CBF_AUTODMA (0x00000001) and CBF_SAMPLE_INTERLEAVED (0x00000010) flags are set in the m_dwStreamFlags field, the sample data was transferred from the board’s FIFO to host memory using an AutoDMA API with the ADMA_FIFO_ONLY_STREAMING option enabled.

In this mode sample data is arranged into a contiguous array of m_nRecordsPerCapture records. Each record consists of one sample from Ch A (if enabled) followed by one sample from Ch B (if enabled).

There are m_uSamplesPerRecord samples from each enabled channel. Each sample occupies m_nBytesPerSample bytes in the buffer, and m_nBitsPerSample sample bits are left aligned within these bytes.

4.10.3.2.2 AutoDMA no-pretrigger mode

Figure 118 Stream flags for NPT transfers

$(m_dwStreamFlags \& CBF_AUTODMA) \neq 0$
$(m_dwStreamFlags \& CBF_SAMPLE_INTERLEAVED) == 0$
$(m_dwStreamFlags \& CBF_NO_PRETRIGGER) \neq 0$

If the CBF_AUTODMA (0x00000001) and CBF_NO_PRETRIGGER (0x00000002) flags are set, and CBF_SAMPLE_INTERLEAVED (0x00000010) is not set in the `m_dwStreamFlags` field, then no-pretrigger sample data was transferred to host memory using an AutoDMA API with the ADMA_NPT option enabled.

In this mode sample data is organized into records. An array of `m_nRecordsPerCapture` records for Ch A (if enabled) is followed by an array of `m_nRecordsPerCapture` records for Ch B (if enabled).

Each record contains an array of `m_uSamplesPerRecord` samples. Each sample occupies `m_nBytesPerSample` bytes in the buffer, and `m_nBitsPerSample` sample bits are left aligned within these bytes.

4.10.3.2.3 AutoDMA pre-trigger mode

Figure 119 Stream flags for AutoDMA transfers

$(m_dwStreamFlags \& CBF_AUTODMA) \neq 0$
$(m_dwStreamFlags \& CBF_SAMPLE_INTERLEAVED) == 0$
$(m_dwStreamFlags \& CBF_NO_PRETRIGGER) == 0$

If the CBF_AUTODMA (0x00000001) flag is set, but the CBF_NO_PRETRIGGER (0x00000002) and CBF_SAMPLE_INTERLEAVED (0x00000010) flags are not set in the `m_dwStreamFlags` field, the sample data was transferred using an AutoDMA API with pre-trigger samples.

In this mode sample data is organized into records where a record from Ch A (if enabled) is followed by a record from Ch B (if enabled). In total, there are `m_nRecordsPerCapture` for Ch A (if enabled), and `m_nRecordsPerCapture` records for Ch B (if enabled).

If the CBF_HAVE_HEADER (0x00000004) flag is set in the `m_dwStreamFlags` field, then a record header precedes each record in the file.

The ALAZAR_HEADER structure is defined in `AlazarApi.h` as follows:

```
struct _HEADER0 {
    unsigned int  SerialNumber:18;
    unsigned int  SystemNumber:4;
    unsigned int  WhichChannel:1;
    unsigned int  BoardNumber:4;
    unsigned int  SampleResolution:3;
    unsigned int  DataFormat:2;
};
```



```

struct _HEADER1 {
    unsigned int RecordNumber:24;
    unsigned int BoardType:8;
};

struct _HEADER2 {
    unsigned int TimeStampLowPart;
};

struct _HEADER3 {
    unsigned int TimeStampHighPart:8;
    unsigned int ClockSource:2;
    unsigned int ClockEdge:1;
    unsigned int SampleRate:7;
    unsigned int InputRange:5;
    unsigned int InputCoupling:2;
    unsigned int InputImpedance:2;
    unsigned int ExternalTriggered:1;
    unsigned int ChannelBTriggered:1;
    unsigned int ChannelATriggered:1;
    unsigned int TimeOutOccurred:1;
    unsigned int ThisChannelTriggered:1;
};

typedef struct _ALAZAR_HEADER {
    struct _HEADER0 hdr0;
    struct _HEADER1 hdr1;
    struct _HEADER2 hdr2;
    struct _HEADER3 hdr3;
} ALAZAR_HEADER, *PALAZAR_HEADER;

```

The following code fragment shows how to convert the record timestamp contained in a record header structure from clock ticks to seconds.

```

double
AlazarHeaderTimestampToSeconds (
    ALAZAR_HEADER *pAlazarHeaderHeader,
    CAPTURE_FILE_HEADER *pCaptureFileHeader
)
{
    DWORD dwTimestampHigh = pAlazarHeader->hdr3.TimeStampHighPart;
    DWORD dwTimestampLow = pAlazarHeader->hdr2.TimeStampLowPart;

    INT64 nTimestamp_counts;
    nTimestamp_counts = (INT64) dwTimestampLow;
    nTimestamp_counts |= (((INT64) (dwTimestampHigh & 0x0fff)) << 32);

    double dTimestamp_sec =
        (double) nTimestamp_counts *
        pCaptureFileHeader->m_nTimestampMultiplier /
        pCaptureFileHeader->m_dSamplesPerSecond;

    return dTimestamp_sec;
}

```

4.10.4 Converting sample values to volts

The following code fragment demonstrates how to convert a sample value to volts.

```

double

```

```

ConvertSampleValueToVolts (
    CAPTURE_FILE_HEADER *pCaptureFileHeader,
    CHANNEL_FILE_HEADER *pChannelFileHeader,
    int nSampleValue
)
{
    // the board is calibrated as follows

    double dSampleZeroValue =
        (1 << (pCaptureFileHeader->m_nBitsPerSample - 1)) - 0.5;
    double dSampleMaxValue =
        (1 << (pCaptureFileHeader->m_nBitsPerSample - 1)) - 0.5;

    // remove left-shift of sample bits in sample bytes

    int nSampleBitShift = (pCaptureFileHeader->m_nBytesPerSample * 8) -
        pCaptureFileHeader->m_nBitsPerSample;

    nSampleValue = nSampleValue >> nSampleBitShift;

    // convert from sample value to volts

    double dMaxVolts =
        pChannelFileHeader->m_dInputRange_volts *
        pChannelFileHeader->m_dProbeAttenuation;

    double dSignal_volts = dMaxVolts *
        ((double)(nSampleValue - dSampleZeroValue) / dSampleMaxValue);

    return dSignal_volts;
}

```

5 Revision History

2014/02/05	1.1.52	<ul style="list-style-type: none"> • Add “Digital Filter” dialog to “Tools” menu.
2013/09/29	1.1.49	<ul style="list-style-type: none"> • Update “Configure View Oscilloscope” dialog to add $\sin(x)/x$ interpolation. • Add “Stream to Memory” wizard to “Tools” menu. • Update “Tools Stream to Disk” wizard “Multiple record options” page to remove pause between acquisitions. It was not used.
2013/05/08	1.1.46	<ul style="list-style-type: none"> • Add “basic” and “advanced” modes to board calibration wizard. • Add “Enable factory calibration mode” check box to “Advanced Options” dialog.
2013/04/16	1.1.45	<ul style="list-style-type: none"> • Add “measure reflection” to the calibration wizard • Add F6 shortcut to start the calibration wizard. • Update the board calibration wizard “Frequency response measurement options” to include a power calibration file. • Update the “Frequency response report options” dialogs to optionally include power correction data in HTML reports. • Update “Configure optional plugins” dialog.
2012/10/23	1.1.43	<ul style="list-style-type: none"> • Add “Identify” button to board simulator configuration dialog in board calibration wizard.
2012/10/02	1.1.42	<ul style="list-style-type: none"> • Add “measure dynamic response” to board calibration wizard and update “More...” property page dialogs.
2012/07/11	1.1.37	<ul style="list-style-type: none"> • Add on-board memory test to calibration wizard. • Add LSB 0 and LSB 1 functions to “Configure Math” dialog. • Update "Configure System Board Properties" dialog to support PCIE 2.0 link speeds. • Change "Configure Horizontal" dialog to enable ATS9440 dummy clock.
2012/03/17	1.1.36	<ul style="list-style-type: none"> • Add “Use bi-polar signals” to the board calibration wizard calibration options dialog box.
2012/02/20	1.1.35	<ul style="list-style-type: none"> • Add “Timer on – timer off” dummy clock mode to the

		“Configure Horizontal” dialog box.
2011/10/20	1.1.34	<ul style="list-style-type: none"> • Add “Tools Coprocessor” menu item and “Coprocessor” dialog • Add “Signal frequency” to the calibration options dialog box. • Add “PCB Revision” to “Board Properties” dialog box.
2011/08/24	1.1.33	<ul style="list-style-type: none"> • Add “external trigger” dummy clock mode to the “Configure Horizontal” dialog box. • Add “Increment” in records to the “Browse File” dialog box.
2011/05/10	1.1.31	<ul style="list-style-type: none"> • Add “Report” button to disk and bus benchmark wizards.
2011/01/04	1.1.29	<ul style="list-style-type: none"> • Fix plugin section numbering.
2010/10/04	1.1.26	<ul style="list-style-type: none"> • Add Manual calibrator plugin to section 2.8 “Board Calibration Wizard” • Add “Power Monitor” to section 3.2 “Using Plugins”
2010/08/02	1.1.25	<ul style="list-style-type: none"> • Add “Temporary files directory” to “Advanced Options” dialog box.
2010/07/08	1.1.24	<ul style="list-style-type: none"> • Add “dummy clock” to “Configure Horizontal” dialog. • Remove clock level in volts from the “Configure Horizontal” dialog. • Add “Calibration Report Options” dialog and update “Report Page” of “Board Calibration Wizard”. • Add “Disable ECC” to “Advanced Options” dialog. • Add “Signal type” to “Calibration Options” dialog.
2010/05/17	1.1.22	<ul style="list-style-type: none"> • Add display offset keyboard shortcut
2010/04/08	1.1.21	<ul style="list-style-type: none"> • Add trigger enable “direction” combo and “force” button to “Configure Trigger” dialog box. • Remove “Enable FPGA debug” check button from “Advanced Options” dialog box.
2010/03/01	1.1.20	<ul style="list-style-type: none"> • Update section 2.3.11 “Configure Plugins” and section 3 “Plugin Modules”.
2010/02/23	1.1.19	<ul style="list-style-type: none"> • Update section 2.2 “Keyboard reference” to add Ctrl + drag with left cursor description.

2009/11/26	1.1.18	<ul style="list-style-type: none"> • Add “Remote Support” command to “Tools On the Web” menu.
2009/11/13	1.1.17	<ul style="list-style-type: none"> • Add F6 shortcut to display “Spectrum Information” dialog box.
2009/10/01	1.1.16	<ul style="list-style-type: none"> • Add “range between horizontal cursors” radio button to “File Save As” dialog.
2009/09/21	1.1.15	<ul style="list-style-type: none"> • Update section Error: Reference source not found “Calibrator Options” to add “External trigger level”. • Update section 4.10.1 “Capture File Header” to change “samples per record” and “pre-trigger samples” fields from INT to UINT type.
2009/08/03	1.1.12	<ul style="list-style-type: none"> • Add “Measure input offset” and “Null input offset” modes to “Board calibration” wizard mode page, and remove “Calibrate gain” option from the “Configure Calibrator Options” dialog box.
2009/07/30	1.1.11	<ul style="list-style-type: none"> • Add “Calibrate gain” option to the “Configure Calibrator Options” dialog box.
2009/06/22	1.1.10	<ul style="list-style-type: none"> • Add “Board Calibration Wizard” and “Configure Calibrator” dialog.
2009/04/06	1.1.8	<ul style="list-style-type: none"> • Update section 4.10.3 “ATB Files Sample Data” to fix formatting and typographical errors. • Update section 2.2 “Keyboard shortcuts” to add shortcut for “Stream to disk” wizard. • Add “Enable sample interleave” to section 2.2.3 “AutoDMA Options” and section 2.4.6 “Stream To Disk Options”. • Fix an error in the sample code in section 4.10.3.2.3 “AutoDMA pre-trigger mode” converting timestamp values from counts to seconds.
2009/03/13	1.1.7	<ul style="list-style-type: none"> • Add revision history section. • Add EULA • Update section 4.10.3 “ATB Files Sample Data” to remove references to CCaptureBuffer and clarify how the “m_dwStreamFlags” is used to interpret sample data.